CD PLAYER REMOVAL


id092000035000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Shift the selector lever from the P position to the D position (ATX).
3. To prevent scratches or damage, affix protective tape to the position shown in the figure of the console side panel.




am2zzw00008510

4. Insert the **SSTs (removing tool)** into the positions shown in the figure and disengage the CD player from the front console.

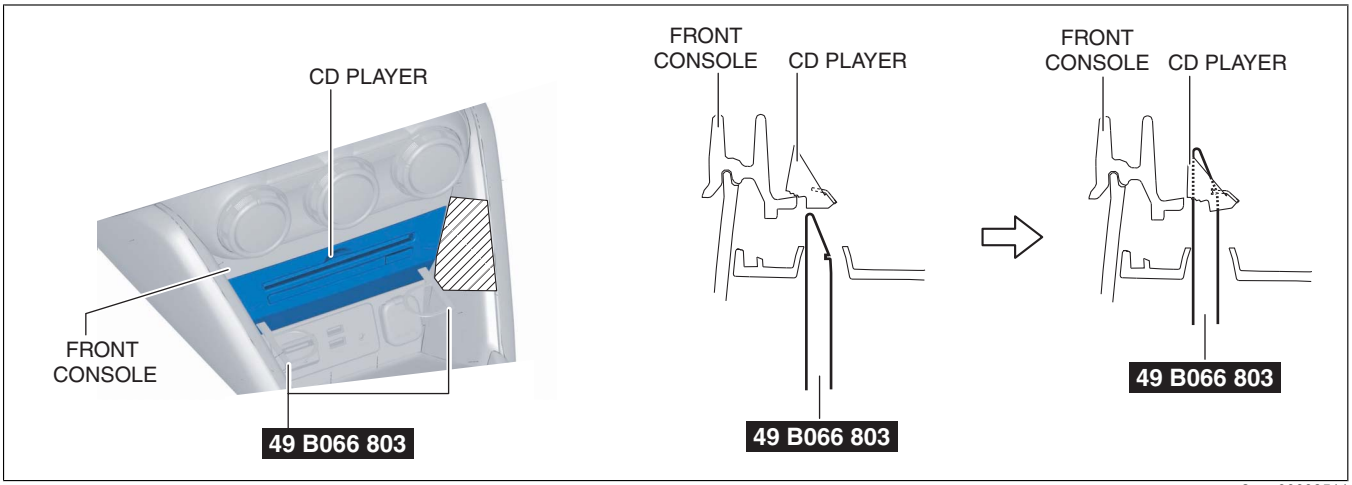


am2zzw00008511

5. Pull the **SSTs (removing tool)** in the direction shown in the figure and remove the CD player from the front console.

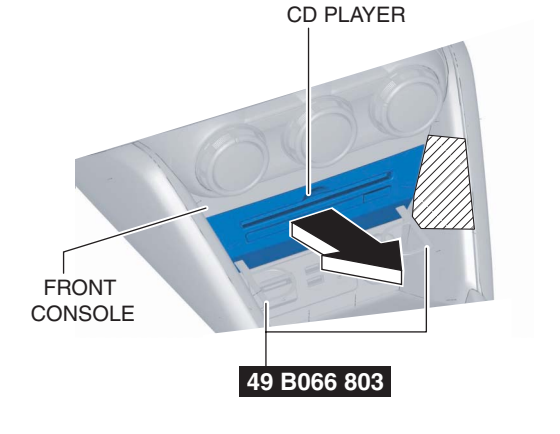


am2zzw00008512

6. Disconnect the connector.

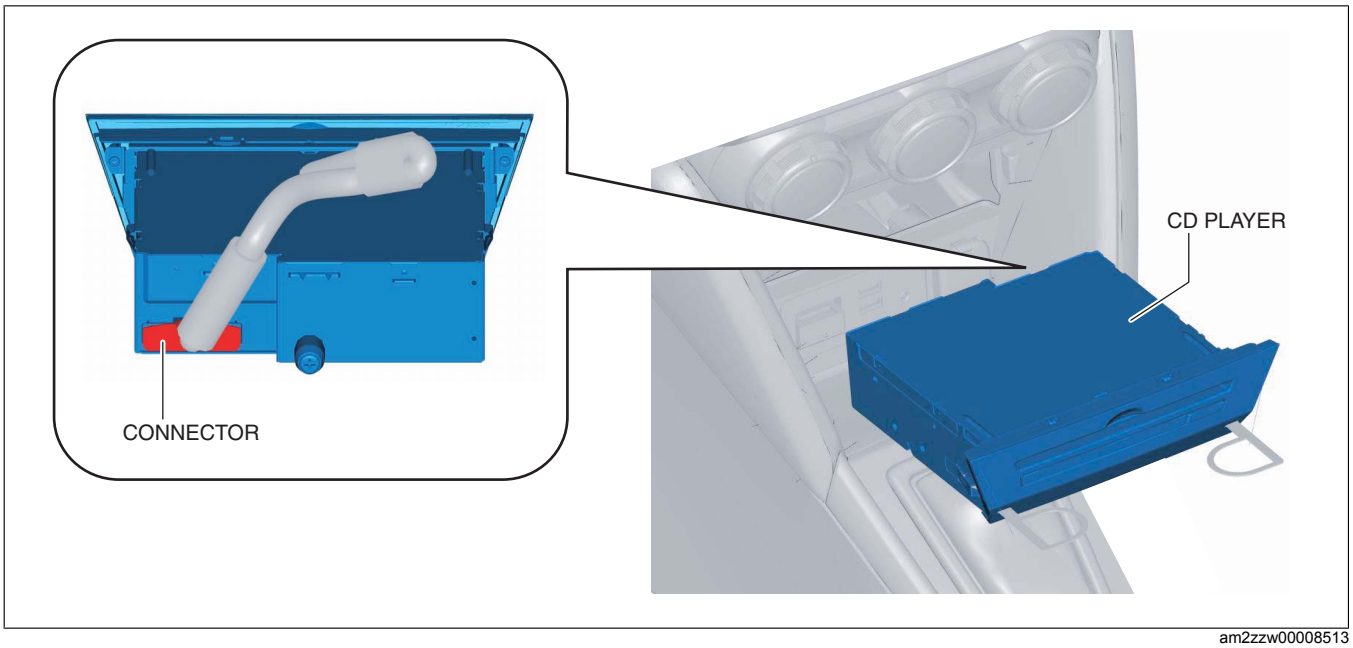

am2zzw00008513

7. Remove the CD player.
8. While pulling the **SSTs (removing tool)** in the direction of arrow (2) shown in the figure, press the CD player spring in the direction of arrow (1) shown in the figure.

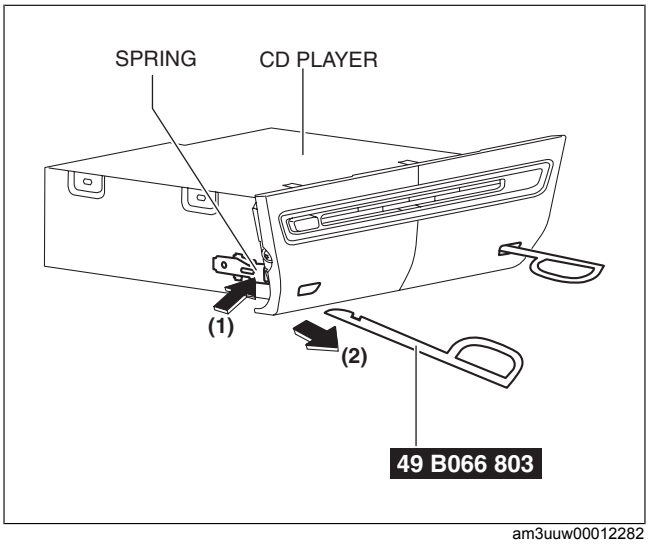

am3uuw00012282