
DVD/CD PLAYER REMOVAL


id092000035200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Shift the selector lever from the P position to the D position (ATX).
3. To prevent scratches or damage, affix protective tape to the position shown in the figure of the console side panel.

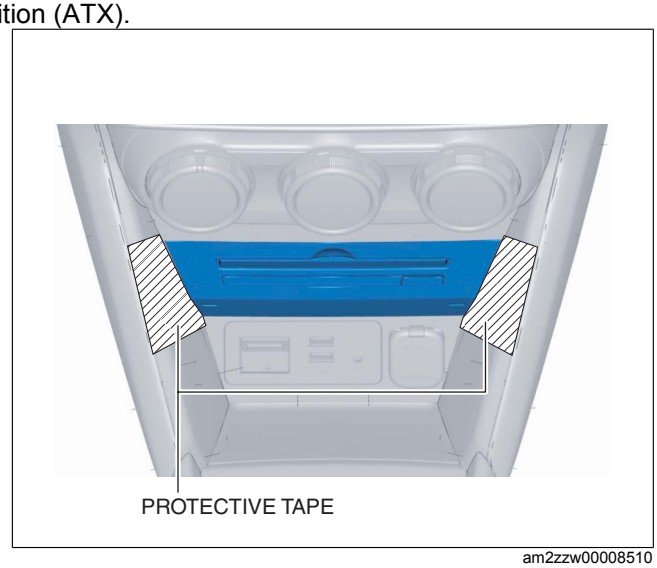


am2zzw00008510

4. Insert the **SSTs (removing tool)** into the positions shown in the figure and disengage the DVD/CD player from the front console.

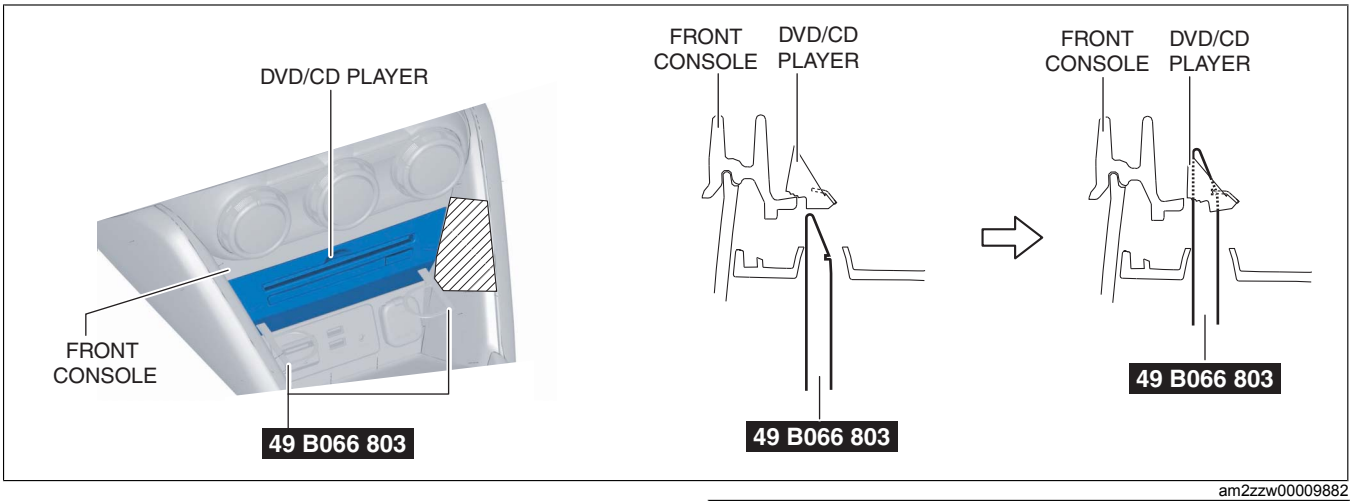


am2zzw00009882

5. Pull the **SSTs (removing tool)** in the direction shown in the figure and remove the DVD/CD player from the front console.

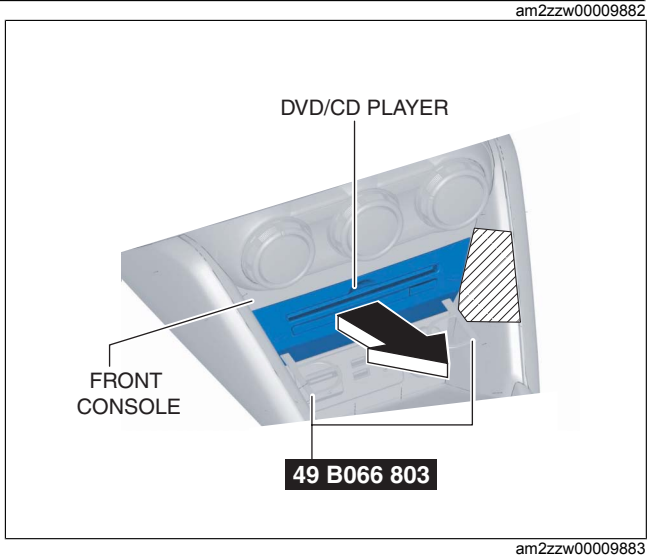


am2zzw00009883

6. Disconnect the connector.

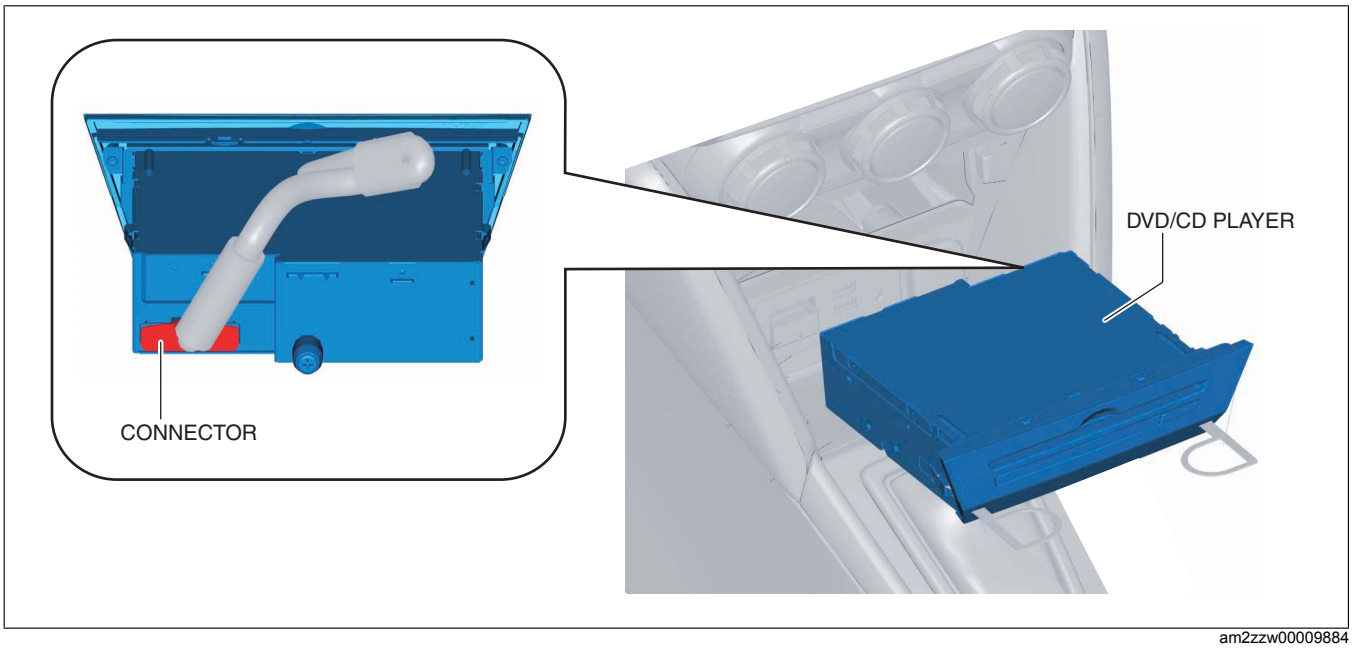

am2zzw00009884

7. Remove the DVD/CD player.
8. While pulling the **SSTs (removing tool)** in the direction of arrow (2) shown in the figure, press the DVD/CD player spring in the direction of arrow (1) shown in the figure.

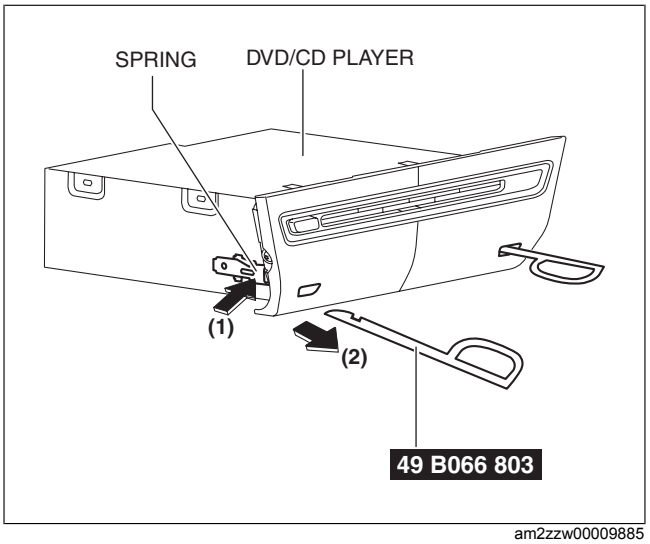

am2zzw00009885