## CONDENSER REMOVAL/INSTALLATION

id092000803000

**5HB**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (4) Adjuster anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (5) Upper anchor installation bolts on the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (6) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (7) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (8) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (9) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (10)Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (11)Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
3. Peel back the trunk side trim and remove the C-pillar trim. (See C-PILLAR TRIM REMOVAL/INSTALLATION.)


**Note**

- To facilitate the procedure, leave the C-pillar trim in the cabin without pulling the rear seat belt.

4. Remove the fasteners.
5. Peel back the seaming welt of the rear door and the liftgate.
6. Partially peel back the headliner.


**Caution**

- **If the headliner is peeled back excessively, the headliner could become creased. Be careful not to peel back the headliner excessively.**

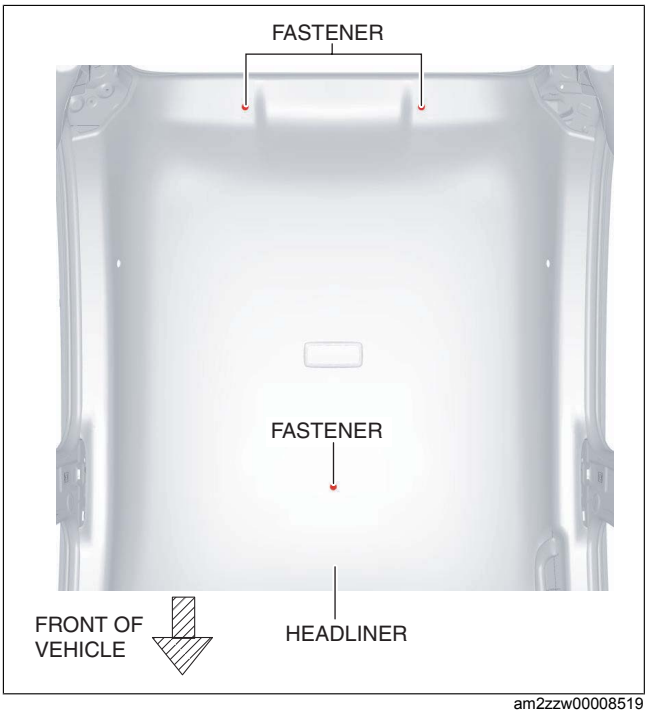


am2zzw00008519


7. Disconnect the connector.
8. Remove the bolt.
9. Remove the condenser.
10. Install in the reverse order of removal.

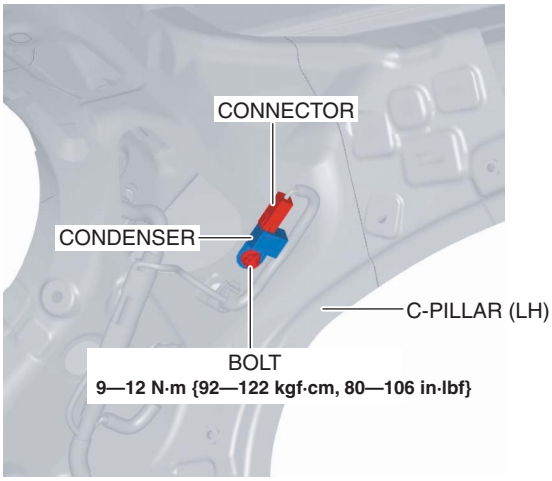


am2zzw00008563

**4SD**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
1. Remove the following parts:
   (1) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (LH) (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) Tire house trim (LH) (See TIRE HOUSE TRIM REMOVAL/INSTALLATION.)
   (4) C-pillar trim (LH) (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
2. Disconnect the connectors.
3. Remove the bolts.
4. Remove the condensers.
5. Install in the reverse order of removal.

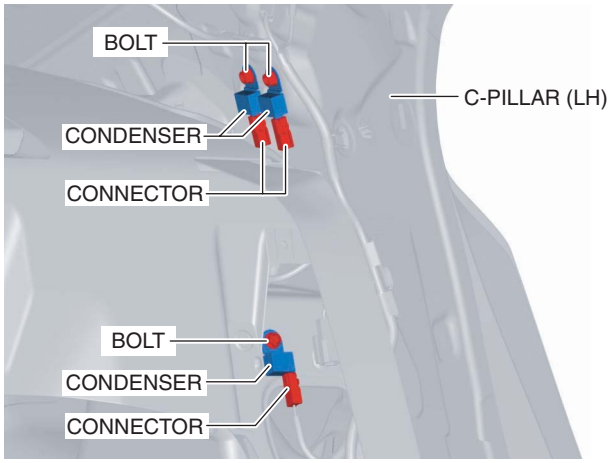


am2zzw00008564