
REAR DOOR SPEAKER INSPECTION

id092000804900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the power window subswitch. (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
3. Remove the rear door trim. (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
4. Disconnect the rear door speaker connector. (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)
5. Inspect the resistance between rear door speaker terminals B and C.

Rear door speaker resistance
3.4—4.6 ohms

- If not within the specification, replace the rear door speaker. (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)

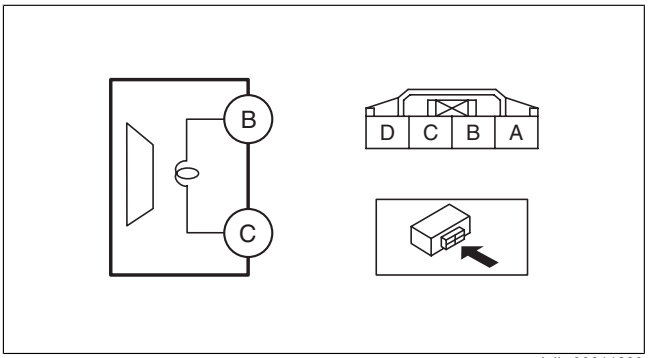

adejjw00011289