GLASS ANTENNA INSPECTION


id092000806200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glass antenna terminal cover. (5HB) (See DAB ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.)
3. Remove the glass antenna terminal cover. (4SD) (See AM/FM ANTENNA AMPLIFIER REMOVAL/ INSTALLATION.)
4. Visually inspect the glass antenna for damage.
5. Verify that the continuity is as indicated in the table.

○—○ : Continuity

Test condition	Terminal	
	A	B
Under any condition	○	○

am3zzw00009853

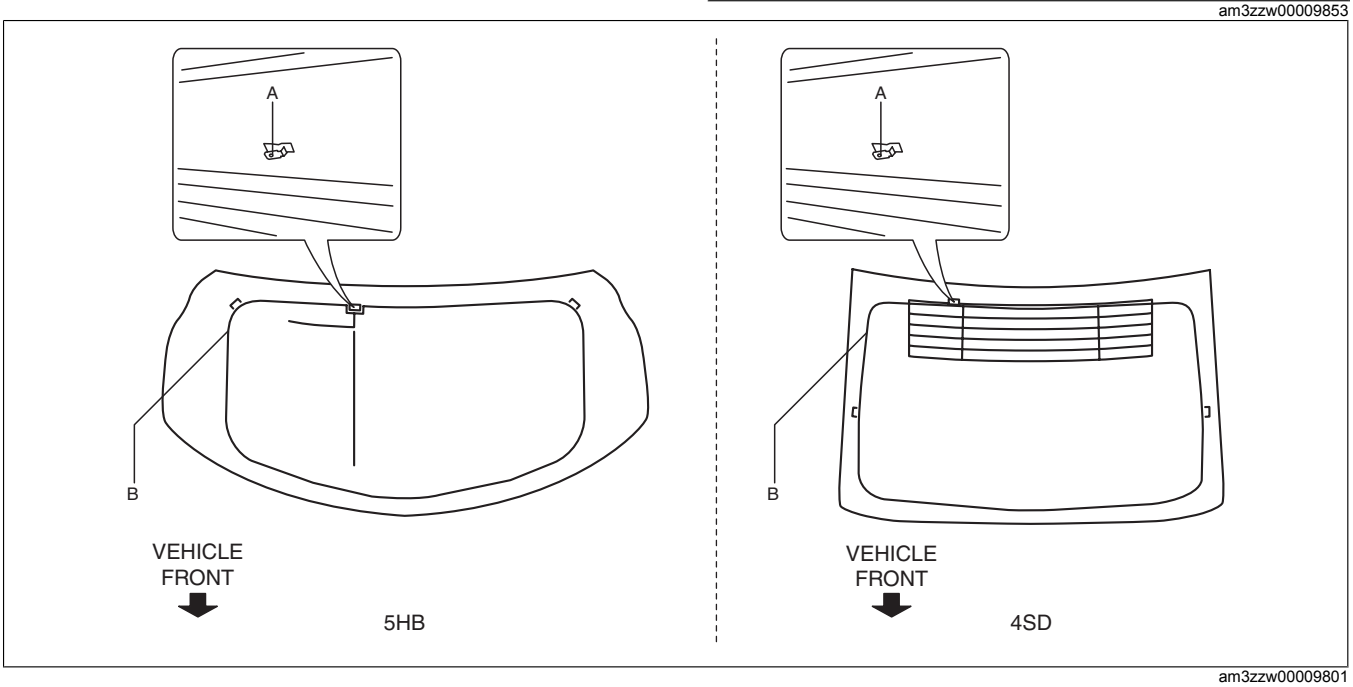

am3zzw00009801

- If not as indicated in the table, repair the glass antenna. (See REAR WINDOW DEFOGGER REPAIR.)