TWEETER INSPECTION

id092000808100


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the tweeter. (See TWEETER REMOVAL/INSTALLATION.)

Caution

- **Because the tweeter is built into the condenser, if the tester does not contact the measurement area shown in the figure, the correct resistance cannot be measured.**

3. Inspect the resistance between tweeter terminal A and the measurement area shown in the figure.

Tweeter resistance
3.4—4.6 ohms

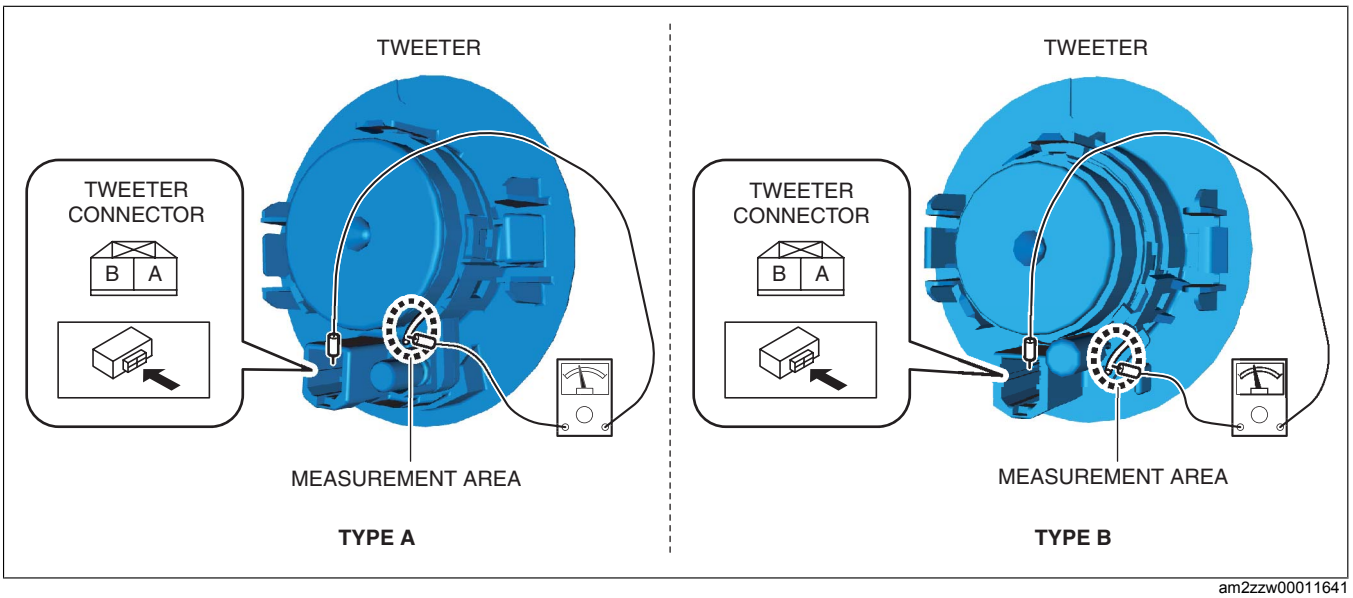

am2zzw00011641

- If not within the specification, replace the tweeter. (See TWEETER REMOVAL/INSTALLATION.)