
AUXILIARY JACK/USB PORT REMOVAL/INSTALLATION


id092000811500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. While pressing the hole cover tabs in the direction of arrows (1) shown in the figure, press the hole cover in the direction of arrow (2) and detach the hole cover tabs from the front console.
4. Remove the hole cover component.

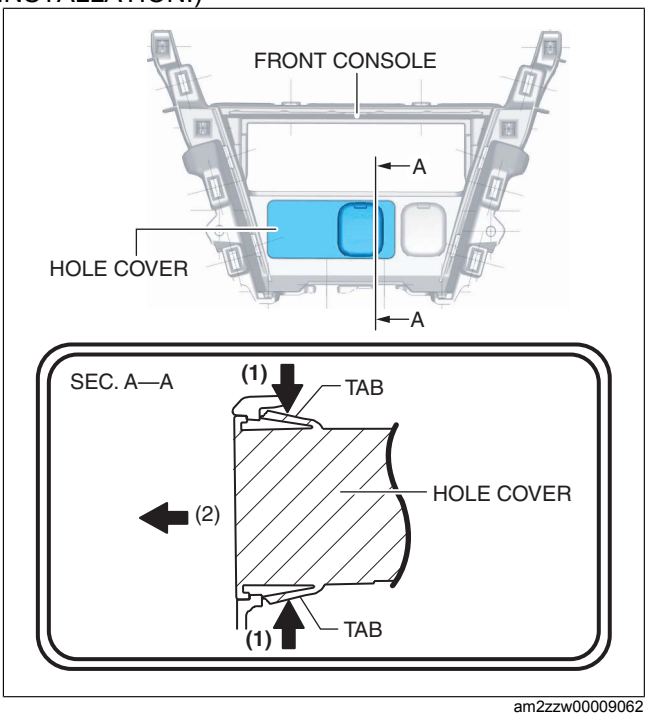

am2zzw00009062

5. While pressing the auxiliary jack/USB port tabs in the direction of arrows (1) shown in the figure using the flathead screwdriver wrapped in protective tape, move the auxiliary jack/USB port in the direction of arrow (2) and detach the auxiliary jack/USB port tabs from the hole cover.

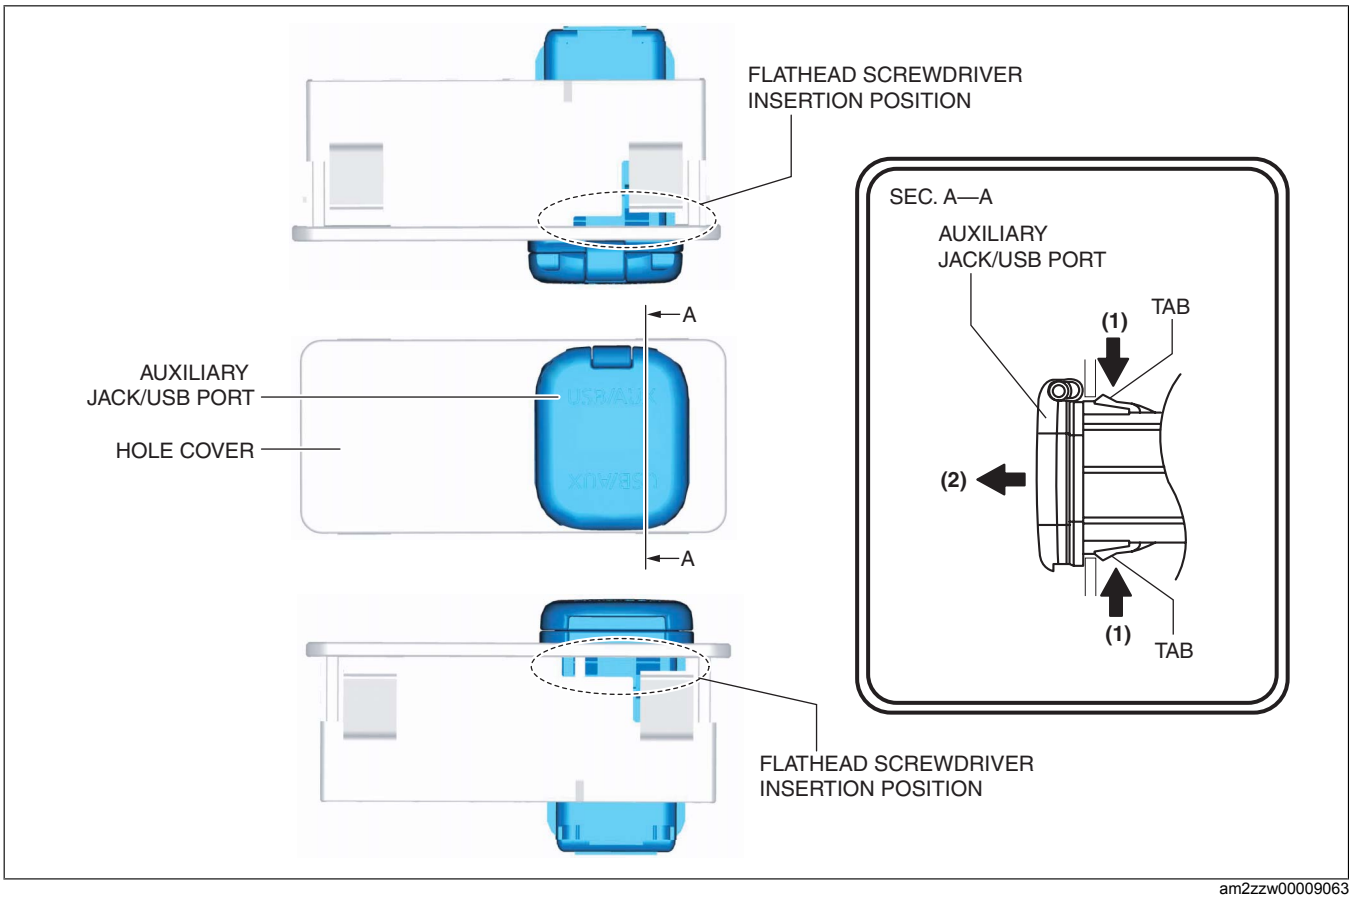

am2zzw00009063

6. Remove the auxiliary jack/USB port.
7. Install in the reverse order of removal.