
GPS ANTENNA FEEDER REMOVAL/INSTALLATION

id092000812100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (2) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
   (3) Instrument cluster (with active driving display) (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
   (4) GPS antenna (See GLOBAL POSITIONING SYSTEM (GPS) ANTENNA REMOVAL/INSTALLATION.)
   (5) Audio panel No.2. (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
   (6) Audio panel No.1. (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
   (7) Center display component (See CENTER DISPLAY REMOVAL/INSTALLATION.)
3. Remove clips A, B, and C in the position shown in the figure.

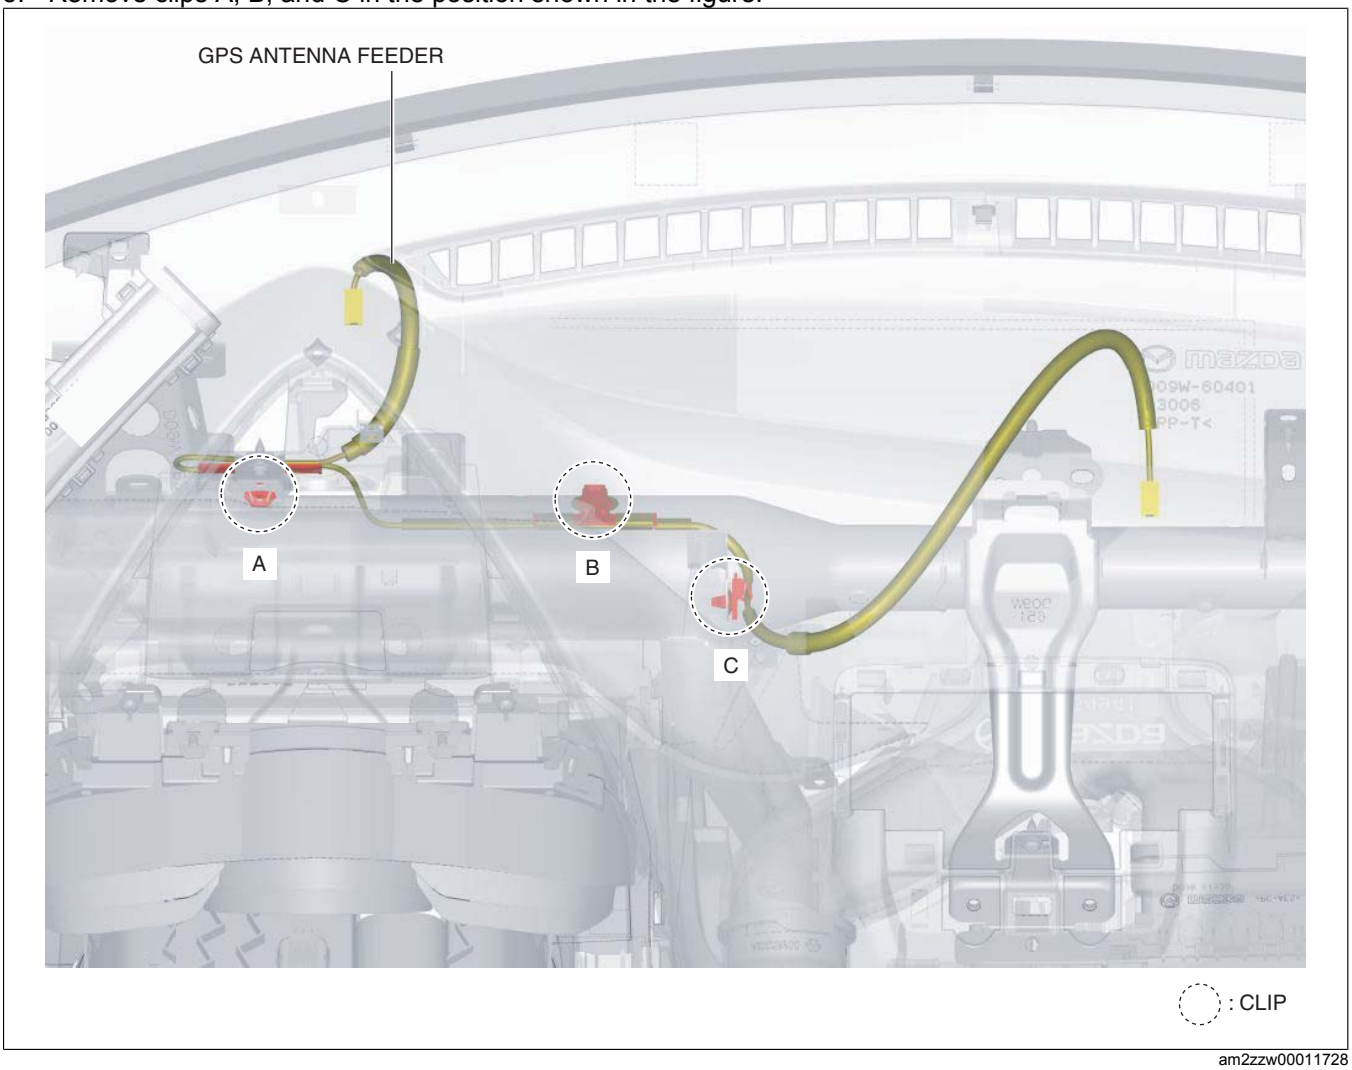

am2zzw00011728

4. Remove the GPS antenna feeder.
5. Install in the reverse order of removal.