
ANTENNA FEEDER NO.1 REMOVAL/INSTALLATION

id092000812200

Without Center Display
L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH)(See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
   (3) Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
   (4) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
   (5) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the connector.

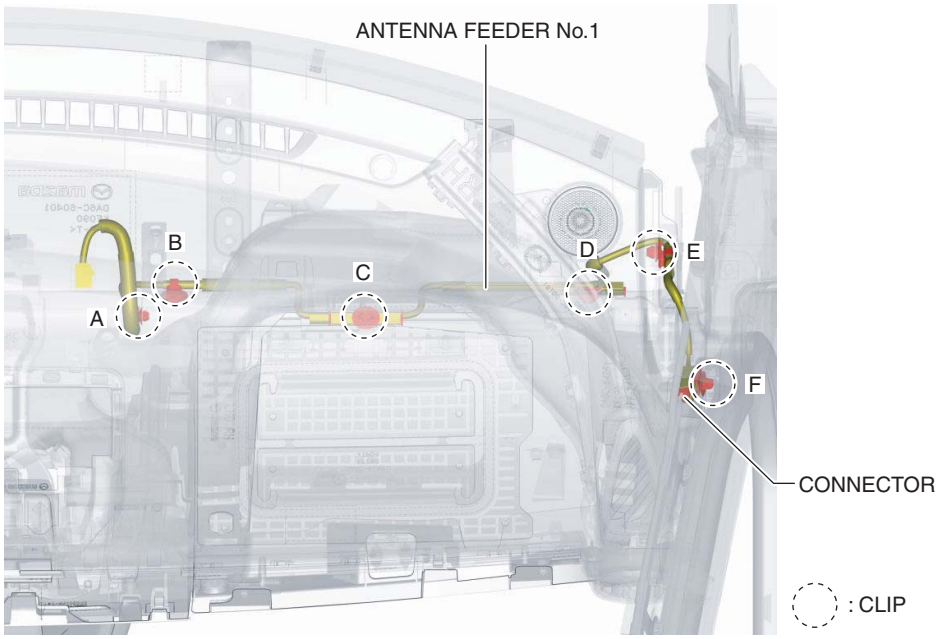


am2zzw00011246

4. Remove clips A, B, C, D, E, and F in the position shown in the figure.
5. Remove antenna feeder No.1.
6. Install in the reverse order of removal.

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH)(See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (4) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (5) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (6) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (7) Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
   (8) Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
   (9) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
3. Disconnect the connector.

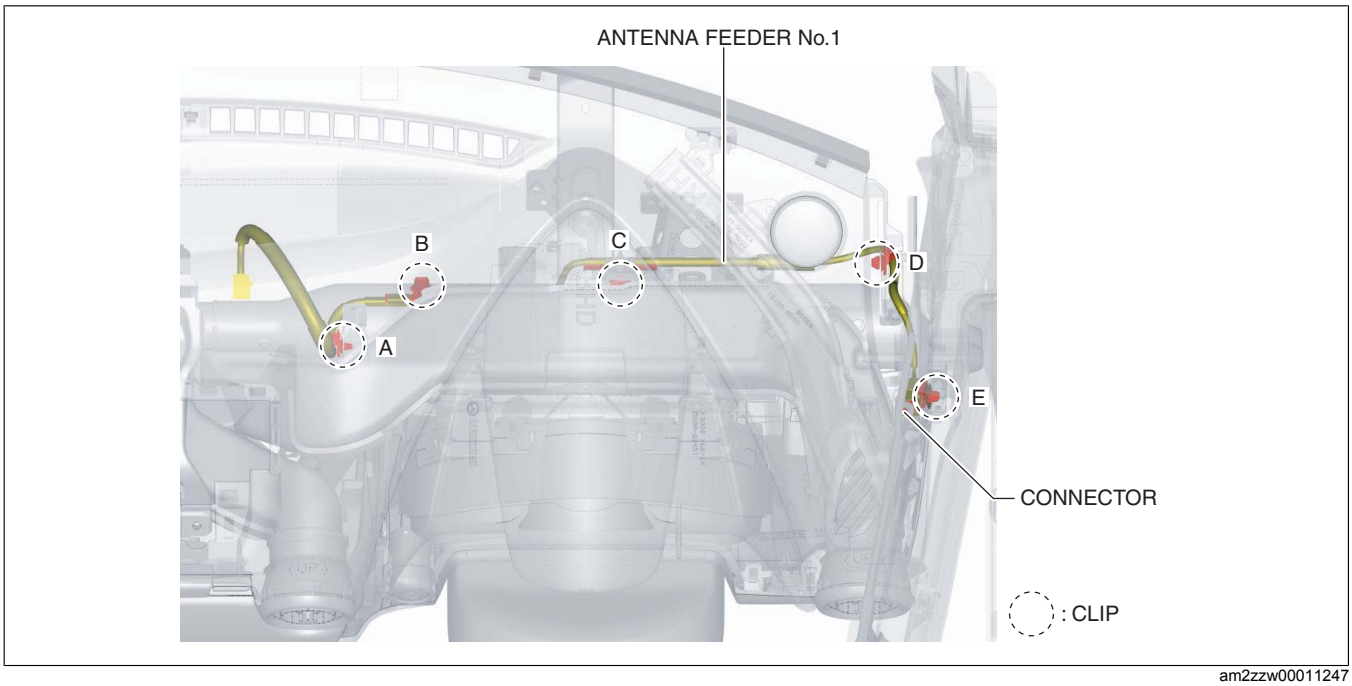


am2zzw00011247

4. Remove clips A, B, C, D, and E in the position shown in the figure.
5. Remove antenna feeder No.1.
6. Install in the reverse order of removal.

With Center Display
L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH)(See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (4) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (5) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (6) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (7) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the connectors.

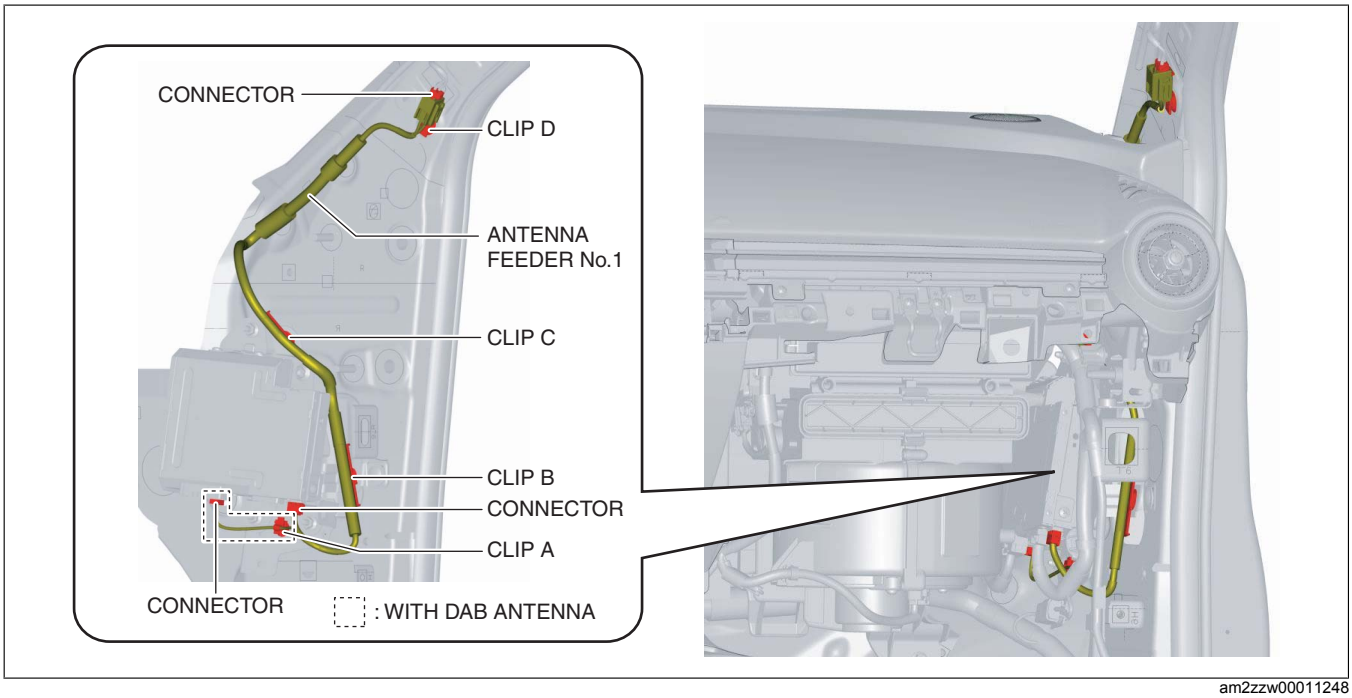


am2zzw00011248

4. Remove clips A, B, C, and D in the position shown in the figure.

5. Remove antenna feeder No.1.
6. Install in the reverse order of removal.

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove A-pillar trim. (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connectors.

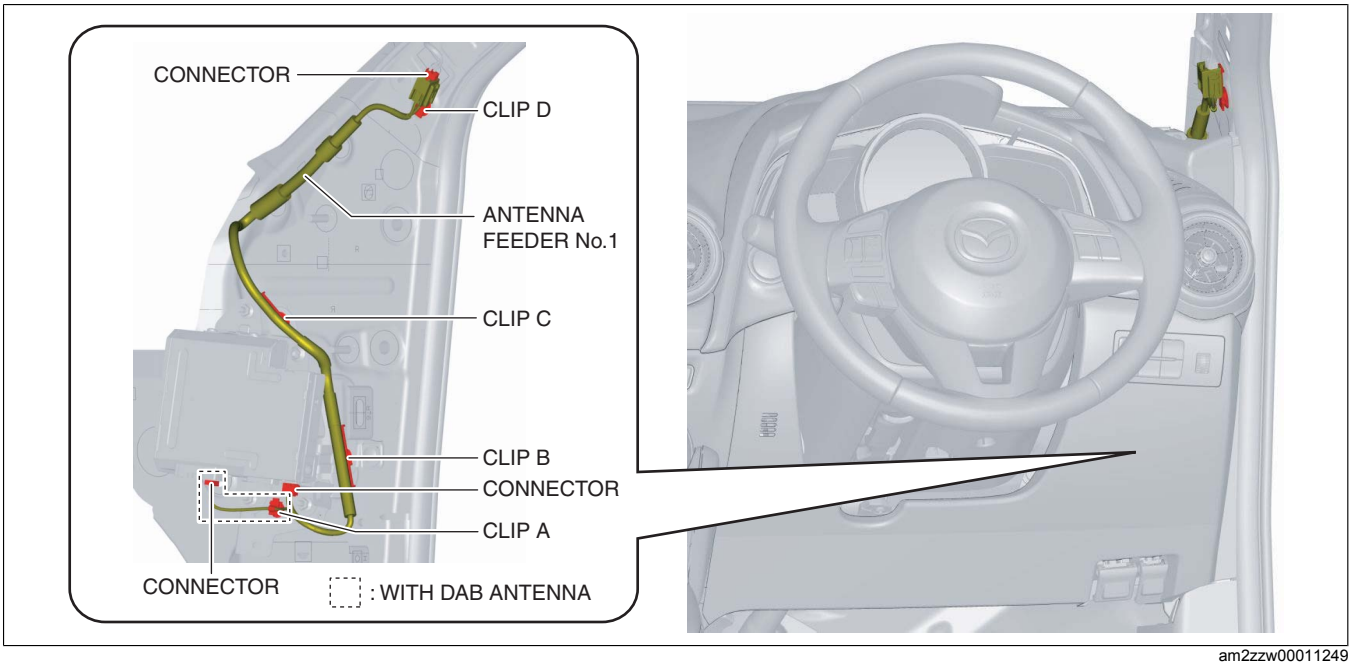

am2zzw00011249

4. Remove clips A, B, C, and D in the position shown in the figure.
5. Remove antenna feeder No.1.
6. Install in the reverse order of removal.