
ANTENNA FEEDER NO.1 INSPECTION

id092000812400


Without Center Display

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
   (3) Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
   (4) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
3. Disconnect the connector.

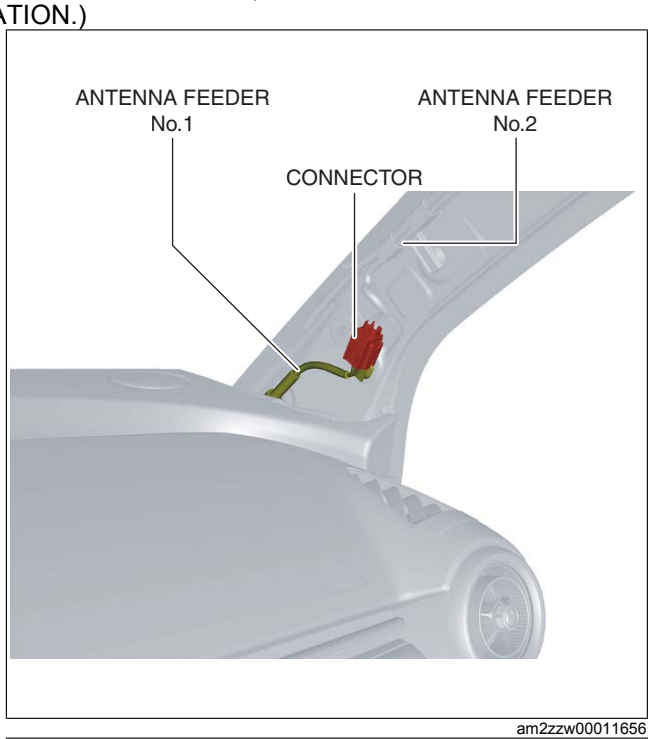


am2zzw00011656

4. Verify that the continuity between antenna feeder No.1 terminals is as indicated in the table.

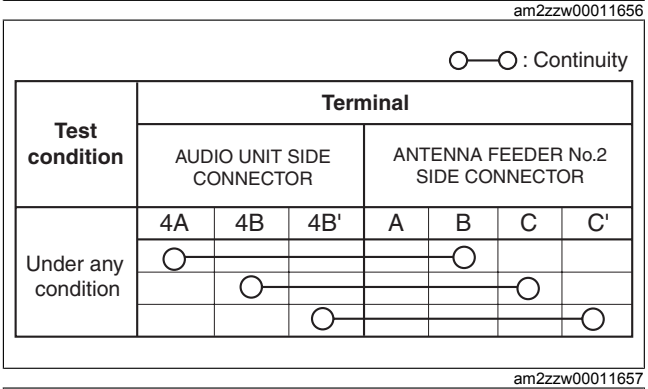

am2zzw00011657

- If not as indicated in the table, replace antenna feeder No.1. (See ANTENNA FEEDER NO.1 REMOVAL/INSTALLATION.)

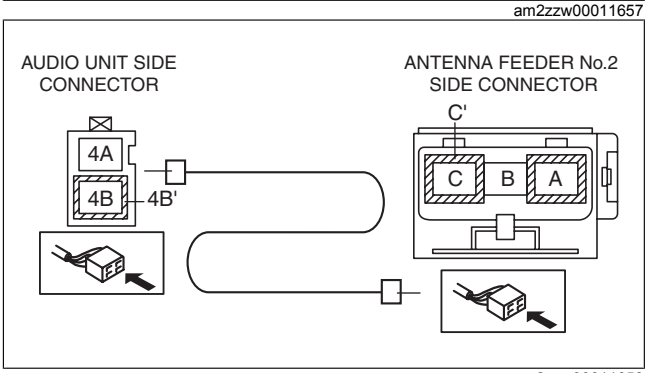


am2zzw00011658

With Center Display

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)

(2) Front scuff plate (RH) (L.H.D.) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
(3) Front side trim (RH) (L.H.D.) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)

3. Disconnect the connector.

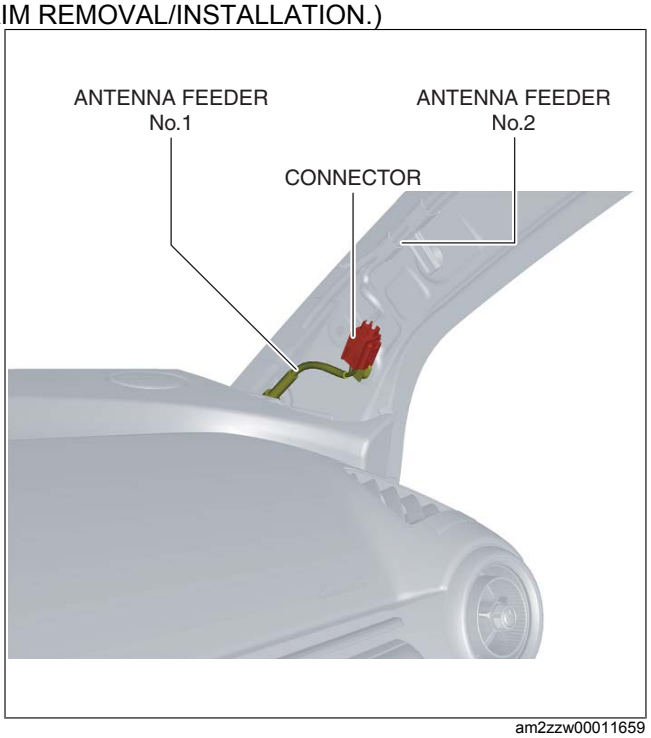


am2zzw00011659

4. Verify that the continuity between antenna feeder No.1 terminals is as indicated in the table.

○—○ : Continuity

Test condition	Terminal									
	TUNER AND AMP UNIT (TAU) SIDE CONNECTOR			TUNER AND AMP UNIT (TAU) SIDE CONNECTOR (WITH DAB ANTENNA AMPLIFIER)		ANTENNA FEEDER No.2 SIDE CONNECTOR				
	3A	3B	3B'	4A	4A'	A	A'	B	C	C'
Under any condition	○							○		
		○							○	
			○							○
				○		○				
					○		○			

am2zzw00011660

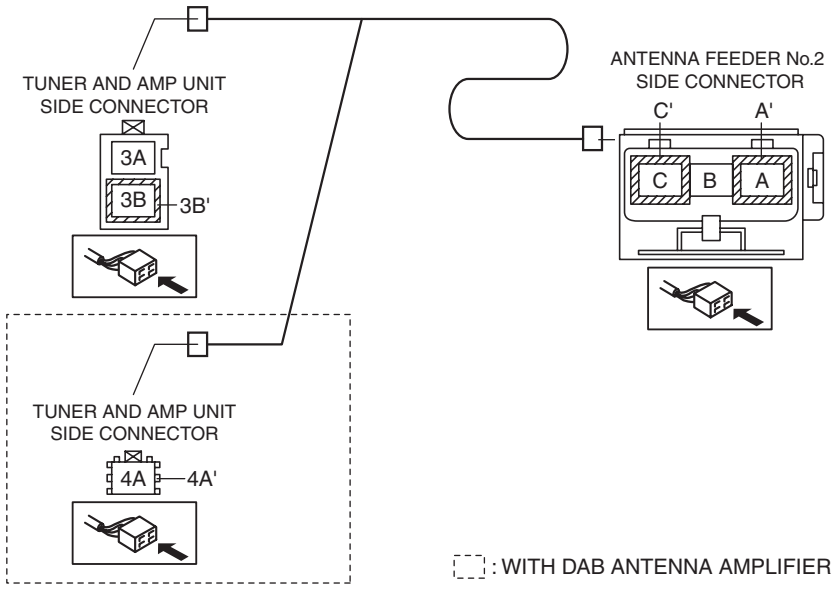

am2zzw00011661

- If not as indicated in the table, replace antenna feeder No.1. (See ANTENNA FEEDER NO.1 REMOVAL/INSTALLATION.)