
AM/FM ANTENNA AMPLIFIER REMOVAL/INSTALLATION


id092000813700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   (3) Front map light (dual light type) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
   (4) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   (5) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (6) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (7) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (8) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (9) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (10) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (11) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (12) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (13) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (14) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (15) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (16) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (17) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (18) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (19) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (20) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (21) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (22) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (23) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (24) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (25) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
   (26) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
3. Remove clips A, B, C and D.

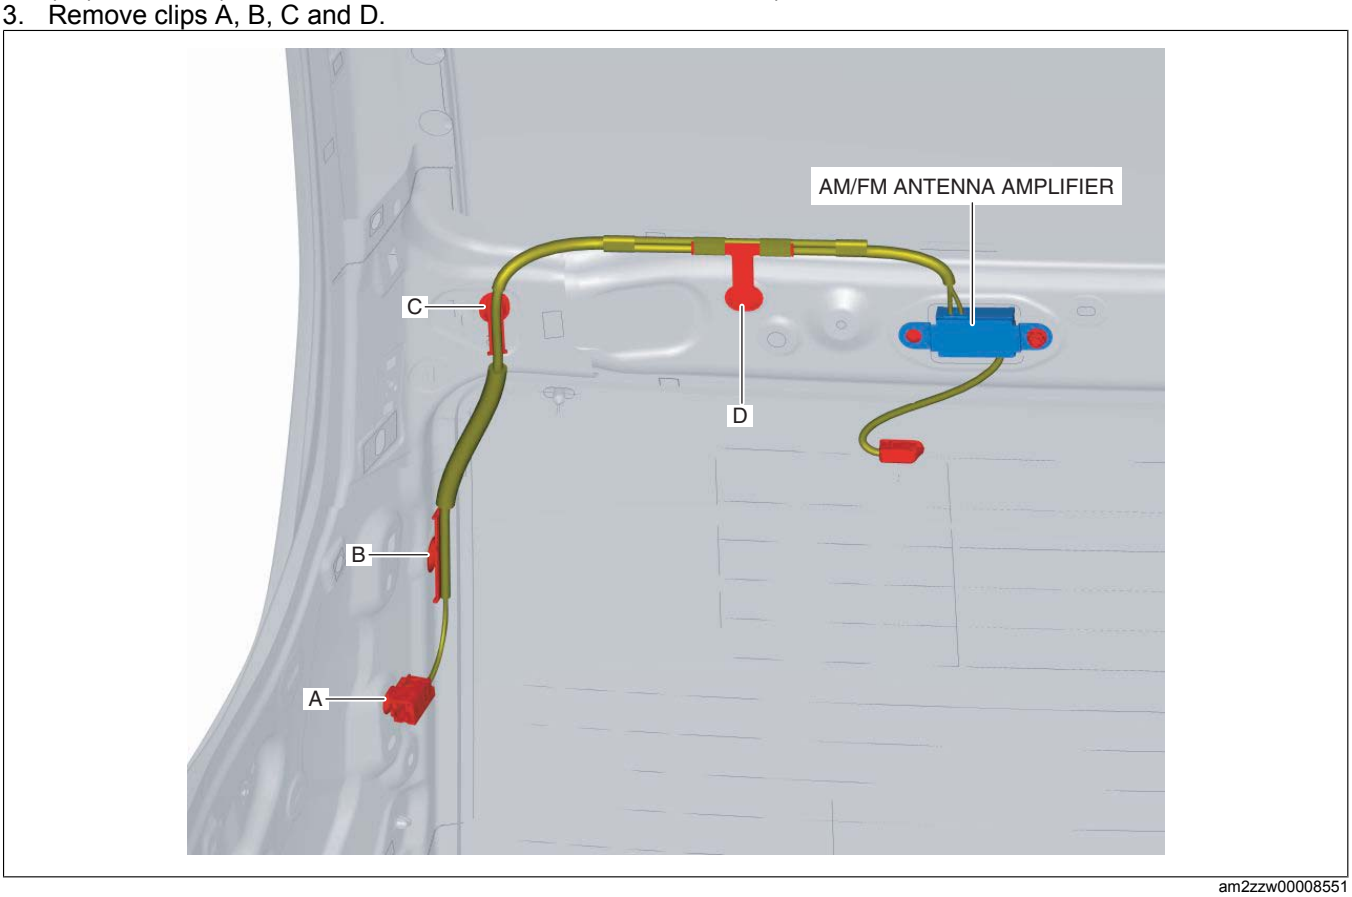


am2zzw00008551

4. Remove the glass antenna terminal cover in the direction of the arrow shown in the figure.

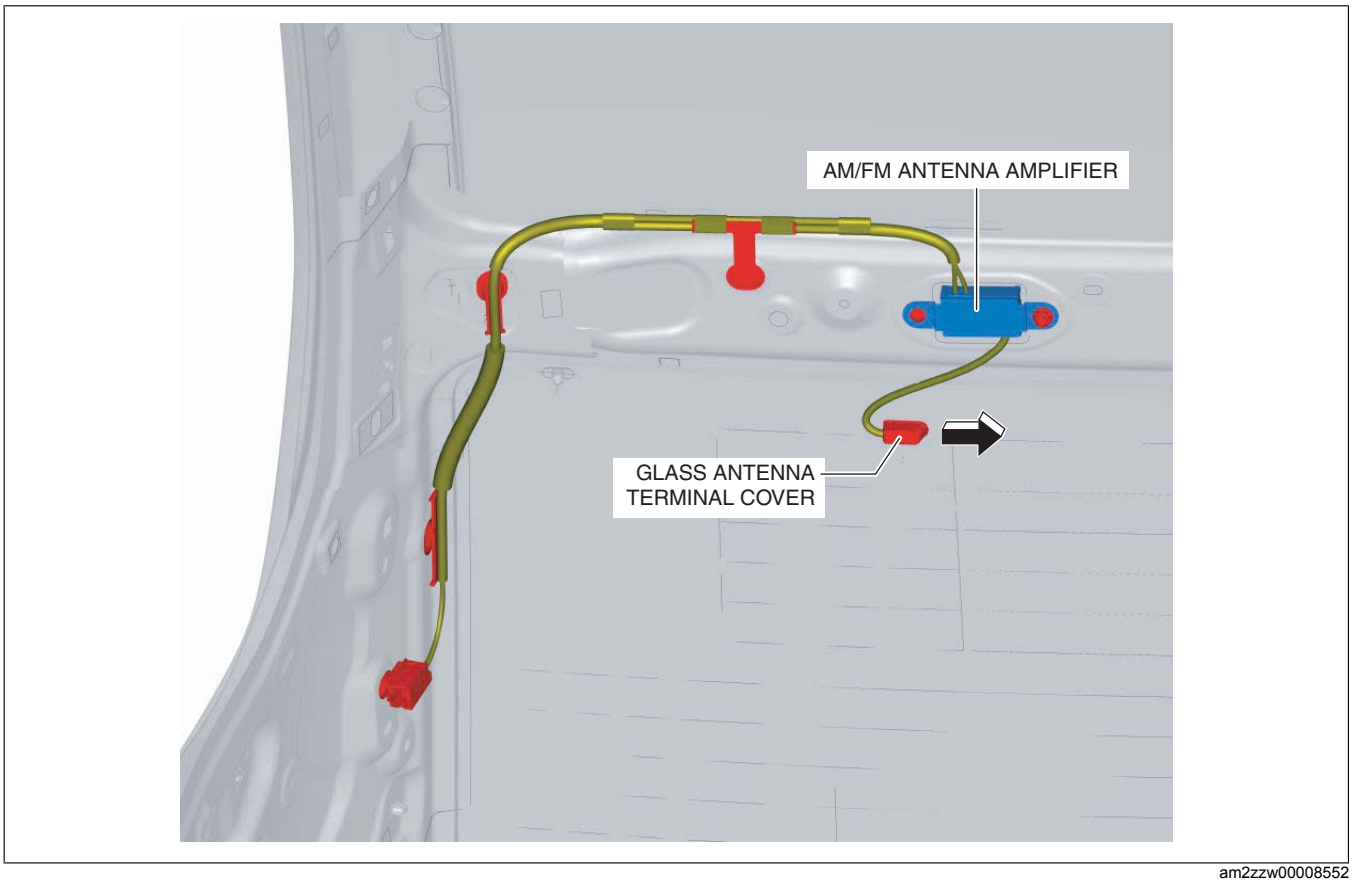

am2zzw00008552

5. Remove the fastener.

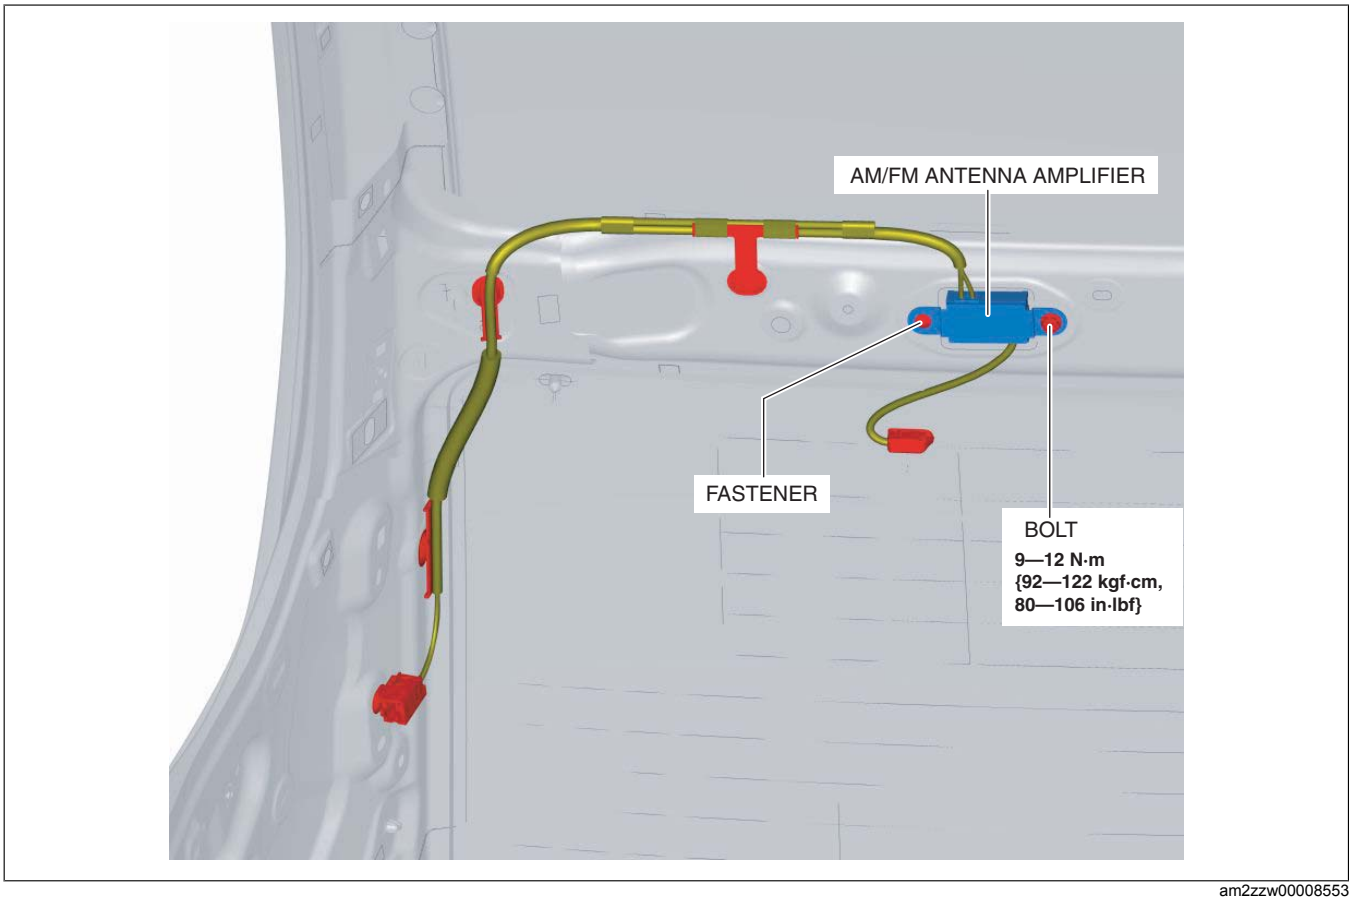

am2zzw00008553

6. Remove the bolt.
7. Remove the AM/FM antenna amplifier.
8. Install in the reverse order of removal.