
DAB ANTENNA AMPLIFIER INSPECTION

id092000815900

1. Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
2. Measure the voltage at DAB antenna amplifier connector terminal A.
   If the voltage is 8 V:
   - The DAB antenna amplifier is normal.

   If the voltage is other than 8 V:
   - Inspect the tuner and amp unit and the antenna feeder. (See ANTENNA FEEDER NO.1 INSPECTION.) (See ANTENNA FEEDER NO. 2 INSPECTION.) (See ANTENNA FEEDER NO.3 INSPECTION.)
     — If the tuner and amp unit and the antenna feeder are normal, replace the DAB antenna amplifier. (See DAB ANTENNA AMPLIFIER REMOVAL/INSTALLATION.)

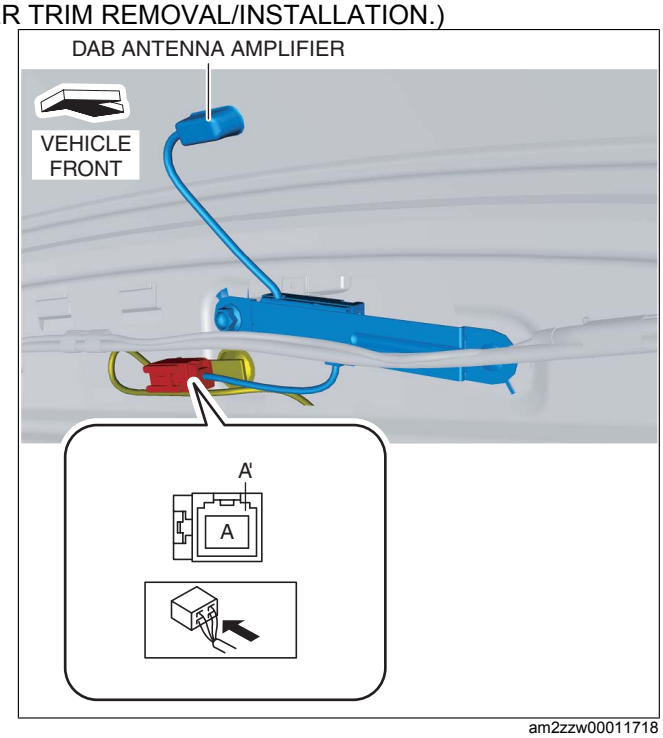

am2zzw00011718