STEERING SWITCH REMOVAL/INSTALLATION

id092000822500

Warning


- **Handling the driver-side air bag module improperly can accidentally operate (deploy) the air bag module, which may seriously injure you.Read the SRS air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

Note

- When removing the driver-side air bag module, it is necessary to rotate the steering wheel.If the ignition has been switched off with the driver's door closed, the steering wheel will be locked.Perform the procedure from Steps 1-3 so that the steering wheel will not be locked.

Without Steering Shift Switch


1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for 1 min or more. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
6. Remove the steering wheel. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
7. Affix protective tape to the gaps between the steering wheel and cover as shown in the figure.

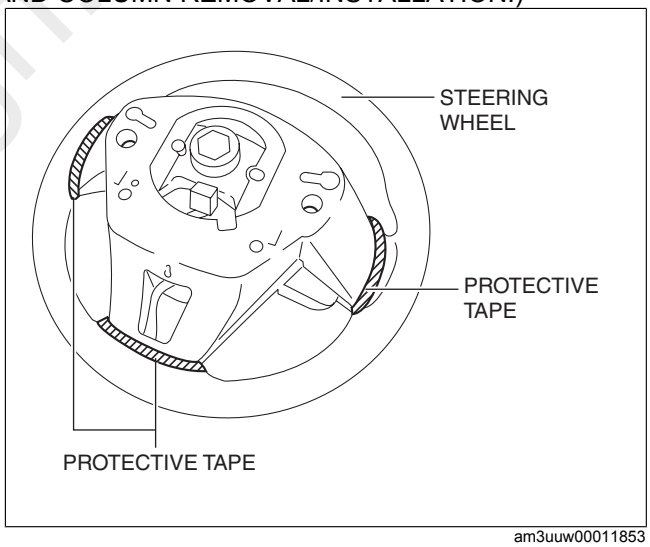

am3uuw00011853


8. Using a tape-wrapped flathead screwdriver, press the cover tabs in the direction of the arrows shown in the figure to detach the cover tabs from the steering wheel.

cardiagn.com

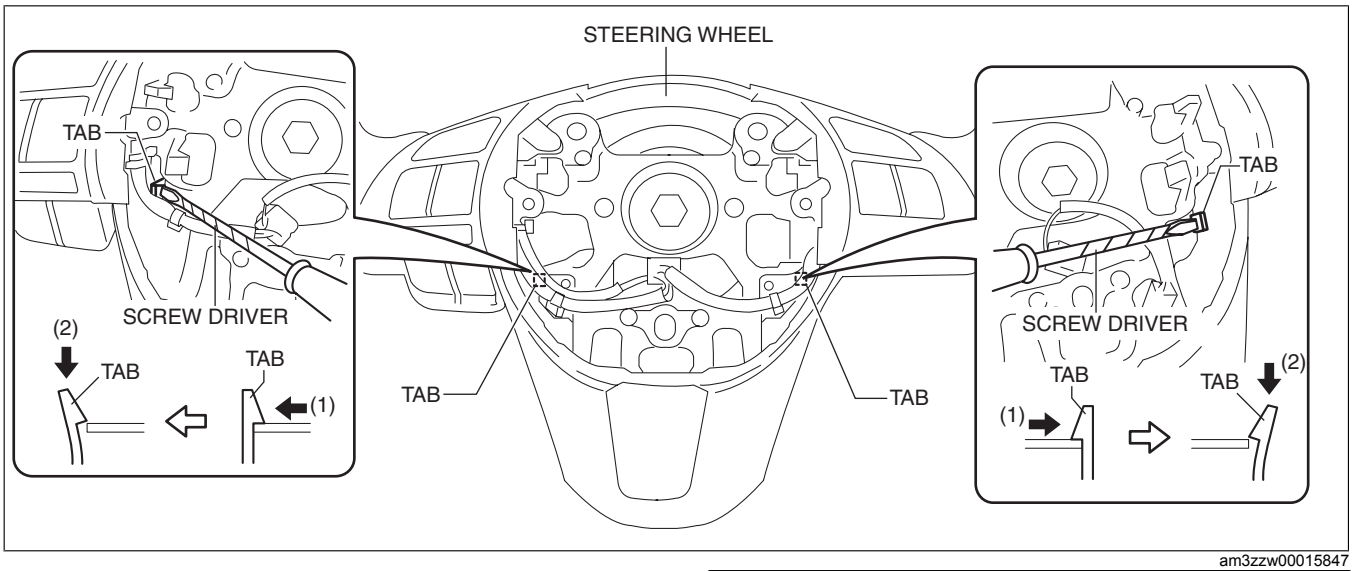


am3zzw00015847

9. Insert the fastener remover into the clearance between the steering wheel and cover as shown in the figure.
10. Move the fastener remover in the direction of the arrow shown in the figure and detach cover tab from the steering wheel.

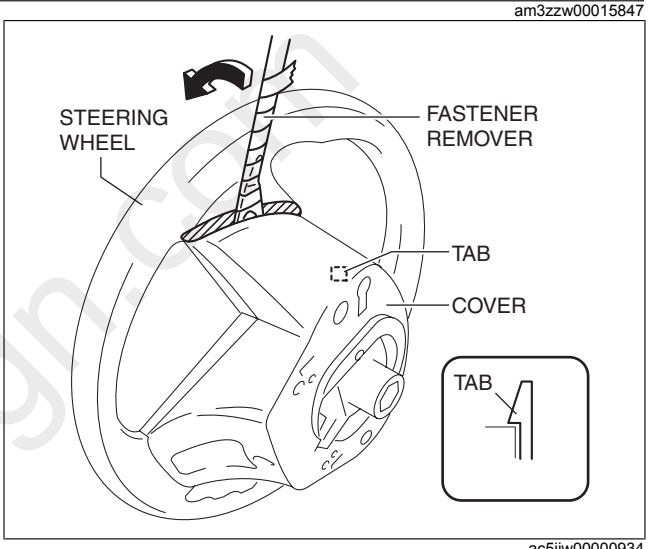

ac5jjw00000934


11. Remove the cover while detaching the pins from the steering wheel.

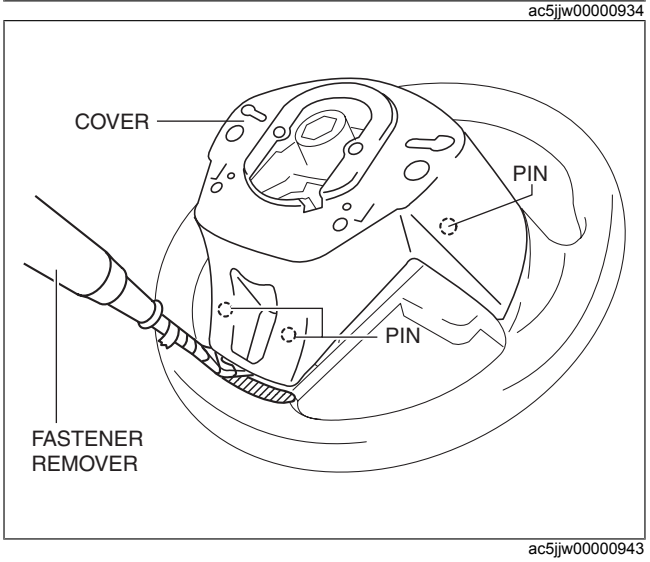

ac5jjw00000943


cardiagn.com

12. While pressing the clip tabs in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) to detach the clip tabs from the steering wheel.
13. Detach the clip.
14. Warm up the shaded area shown in the figure and soften the hard plastic area of the steering wheel using a heat gun.

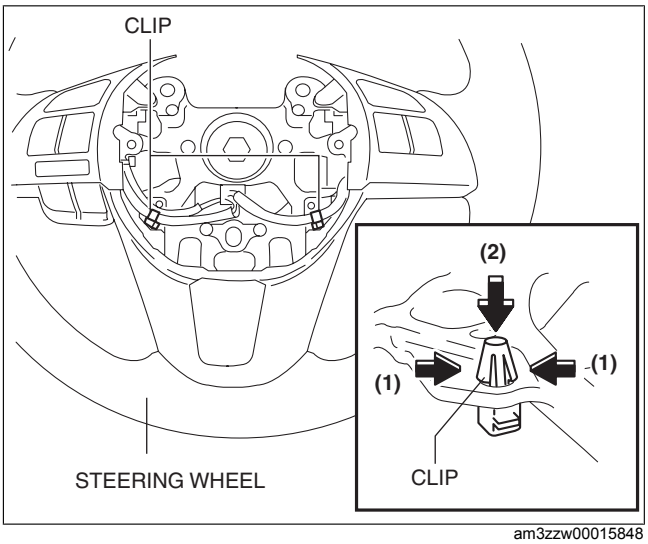


am3zzw00015848

15. While pressing the tabs of the steering switch in the direction of the arrows (1) shown in the figure, press the steering switch in the direction of the arrow (2) to detach the tabs of the steering switch from the steering wheel.

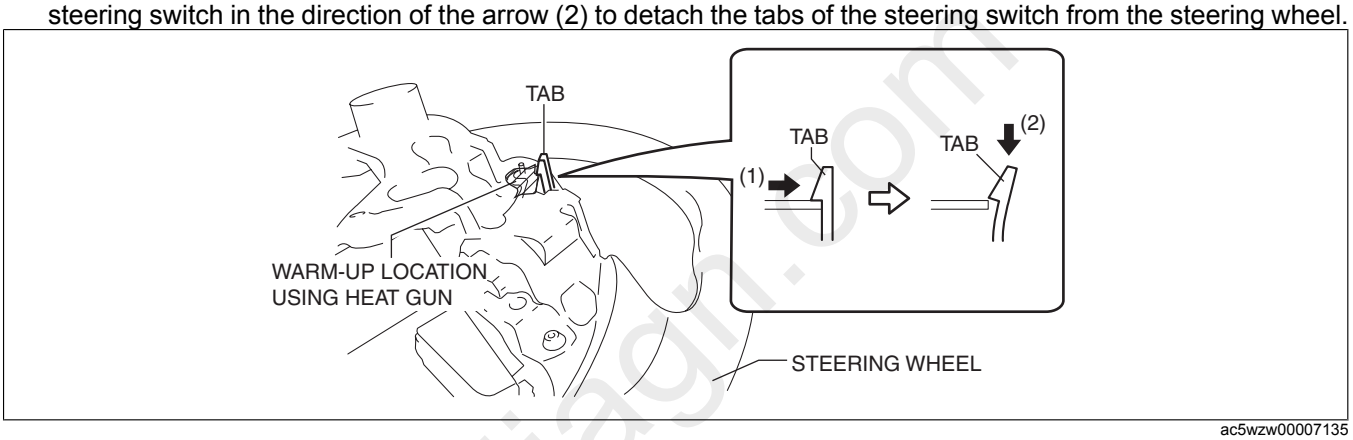

ac5wzw00007135

16. Warm up the shaded area shown in the figure and soften the hard plastic area of the steering wheel using a heat gun.
17. Insert a fastener remover into the position shown in the figure.

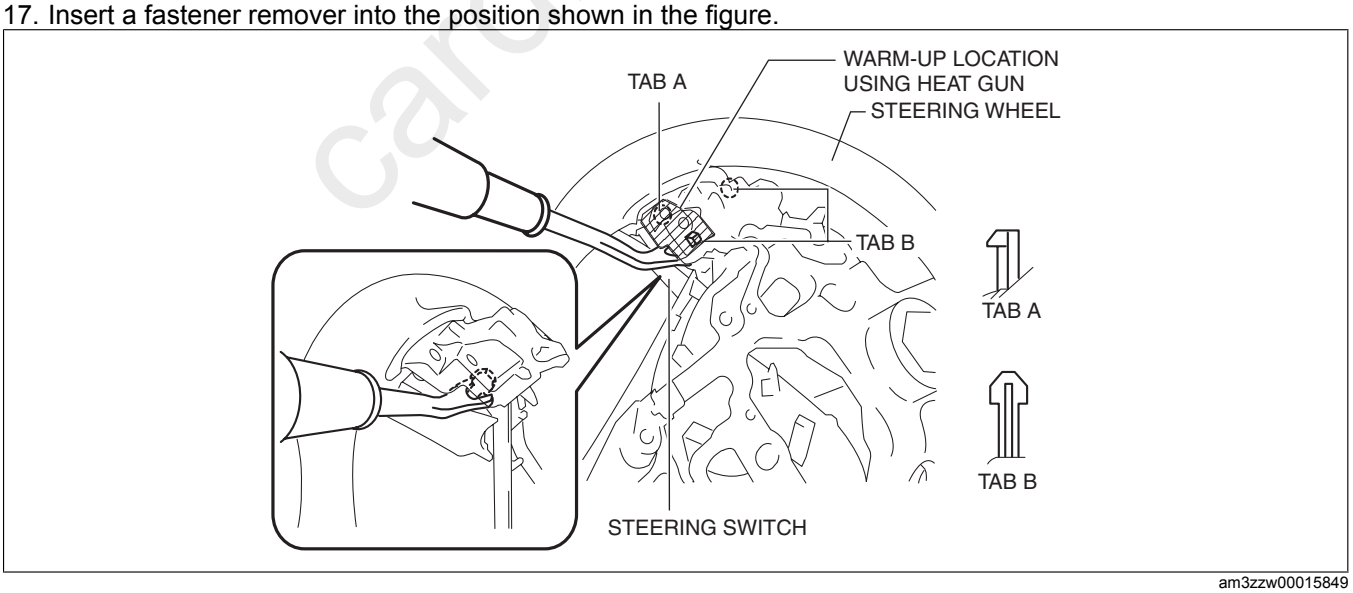

am3zzw00015849


18. Move the fastener remover straight in the direction shown in the figure and remove the tabs of the steering switch from the steering wheel.

Caution

- **When removing the pins of the steering switch, pull them out straight. If the fastener remover is moved at an angle, the pins could be damaged.**


cardiagn.com

Note
- Because the pins of the steering switch are installed to the hard plastic area of the steering wheel, the engagement is strong.

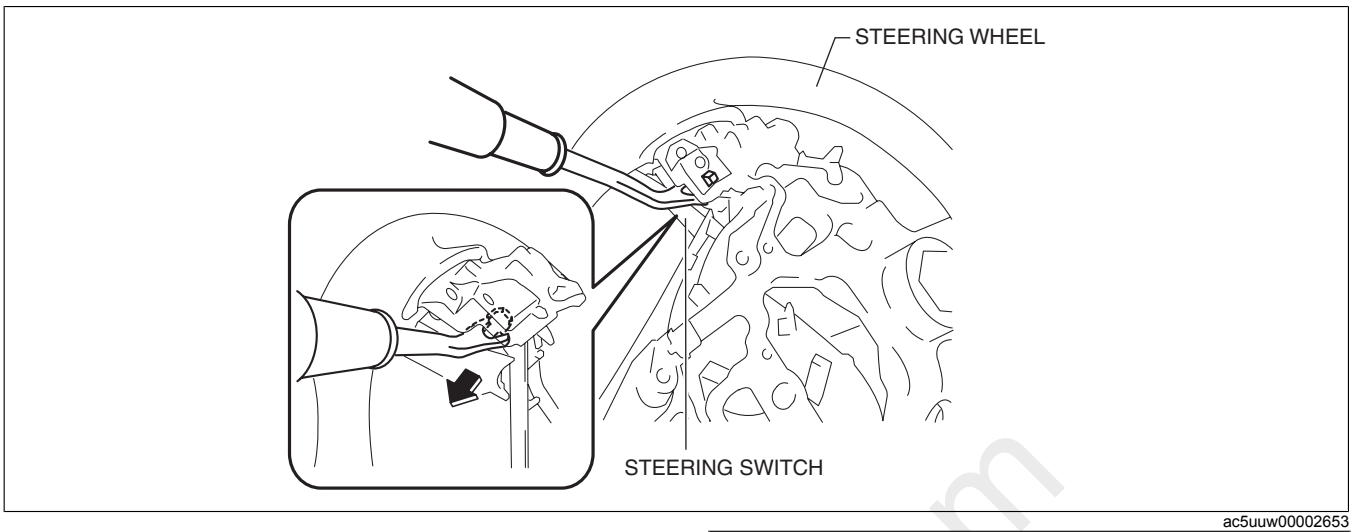

ac5uuw00002653

19. Remove the steering switch while detaching the pin and tabs of the steering wheel.
20. Install in the reverse order of removal.

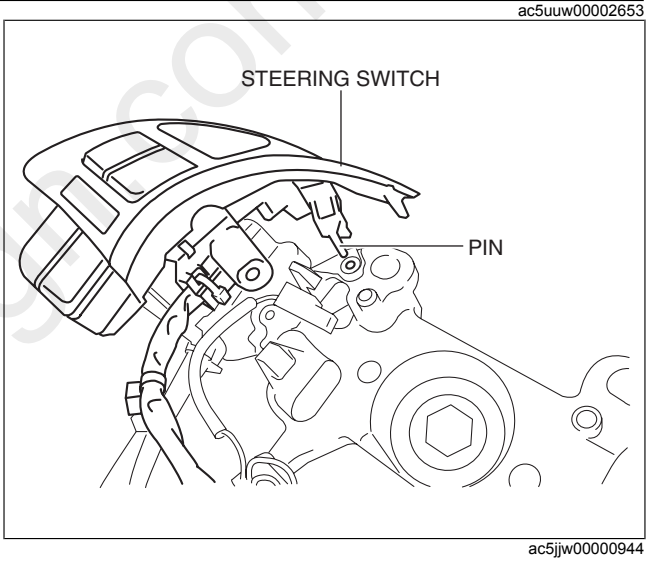


ac5jjw00000944

With Steering Shift Switch
1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for 1 min or more. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
6. Remove the steering wheel. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)


cardiagn.com

7. Remove the screws.
8. Disconnect the connectors.

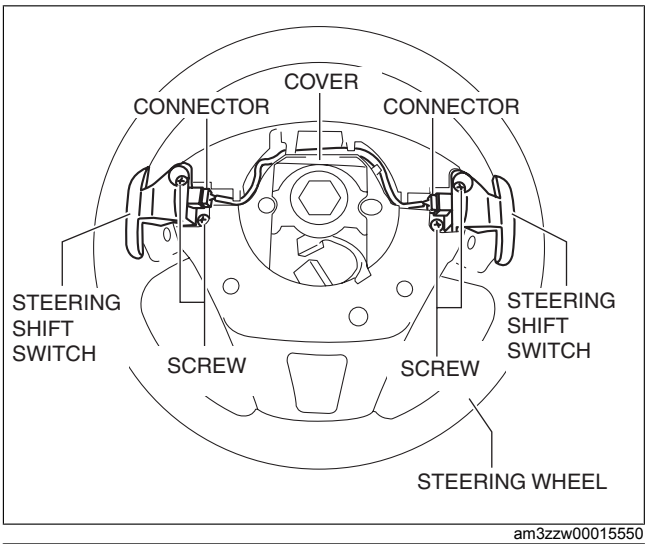


am3zzw00015550

9. While pressing the pin tabs in the direction of arrows (1) shown in the figure, press the pin in the direction of arrow (2) to detach the cover pin from the steering wheel.

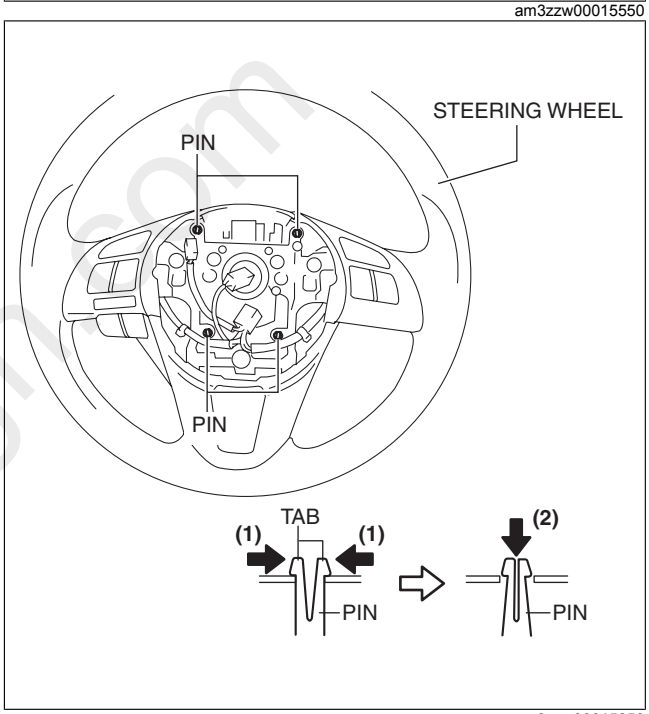

am3zzw00015850


10. Using a tape-wrapped flathead screwdriver, press the cover tabs in the direction of the arrows shown in the figure to detach the cover tabs from the steering wheel.

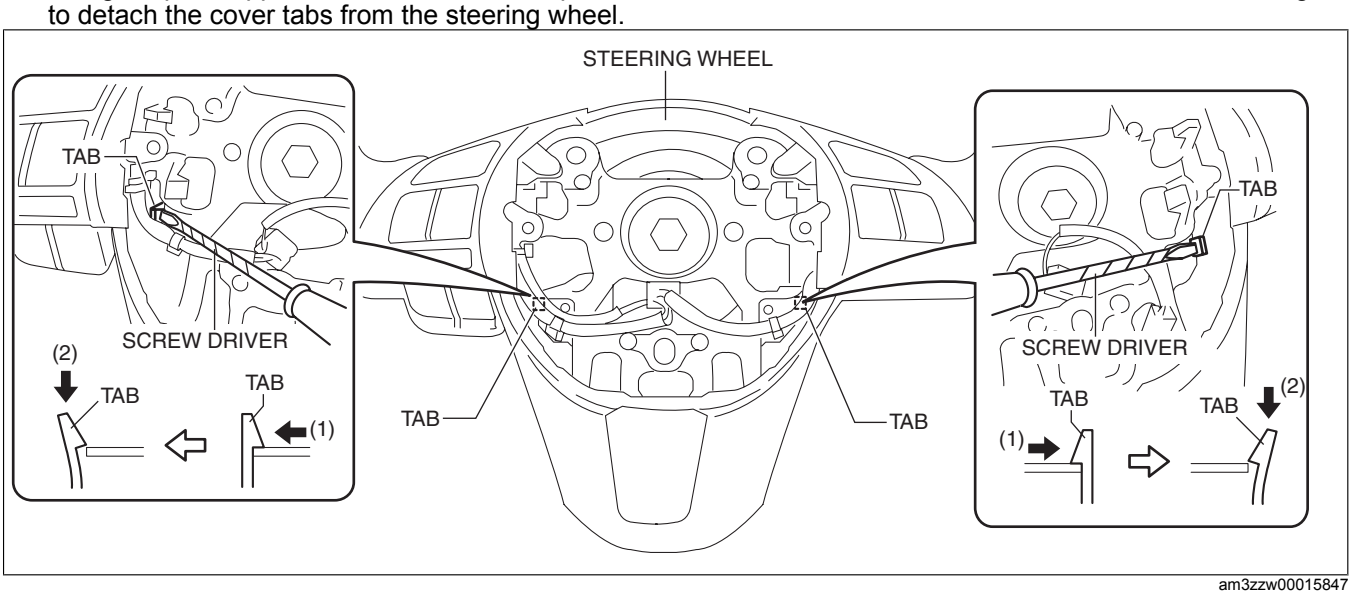

am3zzw00015847


cardiagn.com

11. Remove the cover.

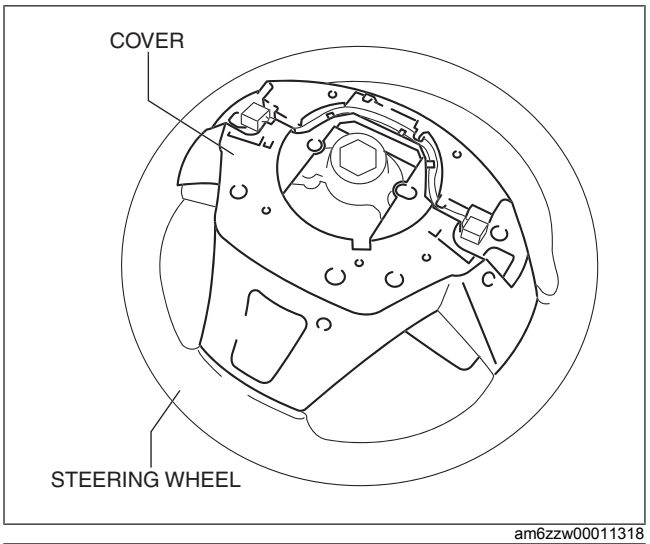


am6zzw00011318

12. While pressing the clip tabs in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) to detach the clip tabs from the steering wheel.
13. Detach the clip.
14. Warm up the shaded area shown in the figure and soften the hard plastic area of the steering wheel using a heat gun.

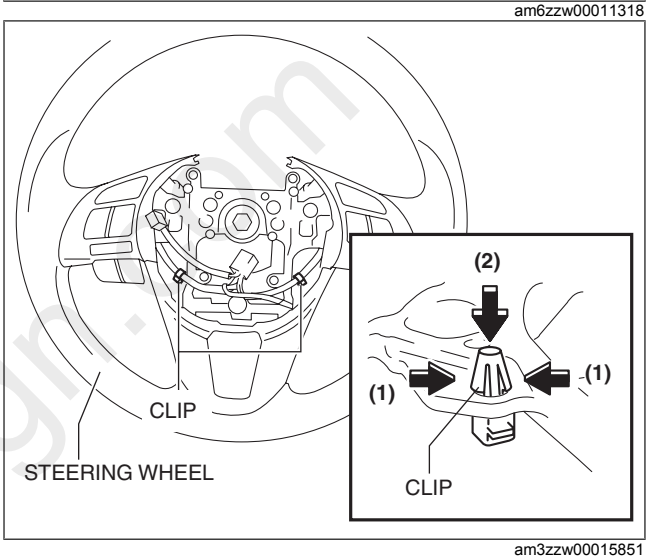

am3zzw00015851


15. While pressing the tabs of the steering switch in the direction of the arrows (1) shown in the figure, press the steering switch in the direction of the arrow (2) to detach the tabs of the steering switch from the steering wheel.

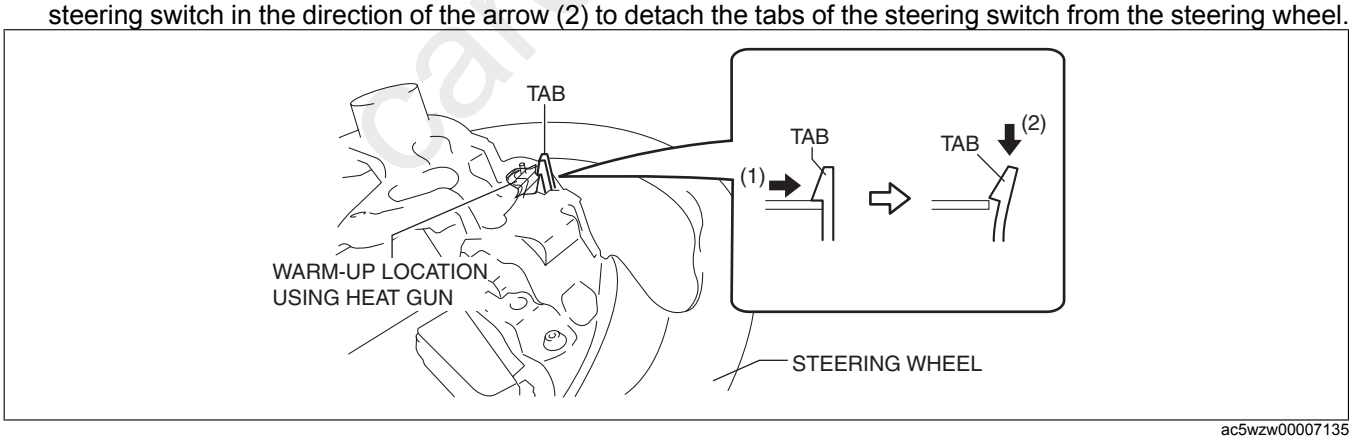

ac5wzw00007135

16. Warm up the shaded area shown in the figure and soften the hard plastic area of the steering wheel using a heat gun.
17. Insert a fastener remover into the position shown in the figure.

cardiagn.com

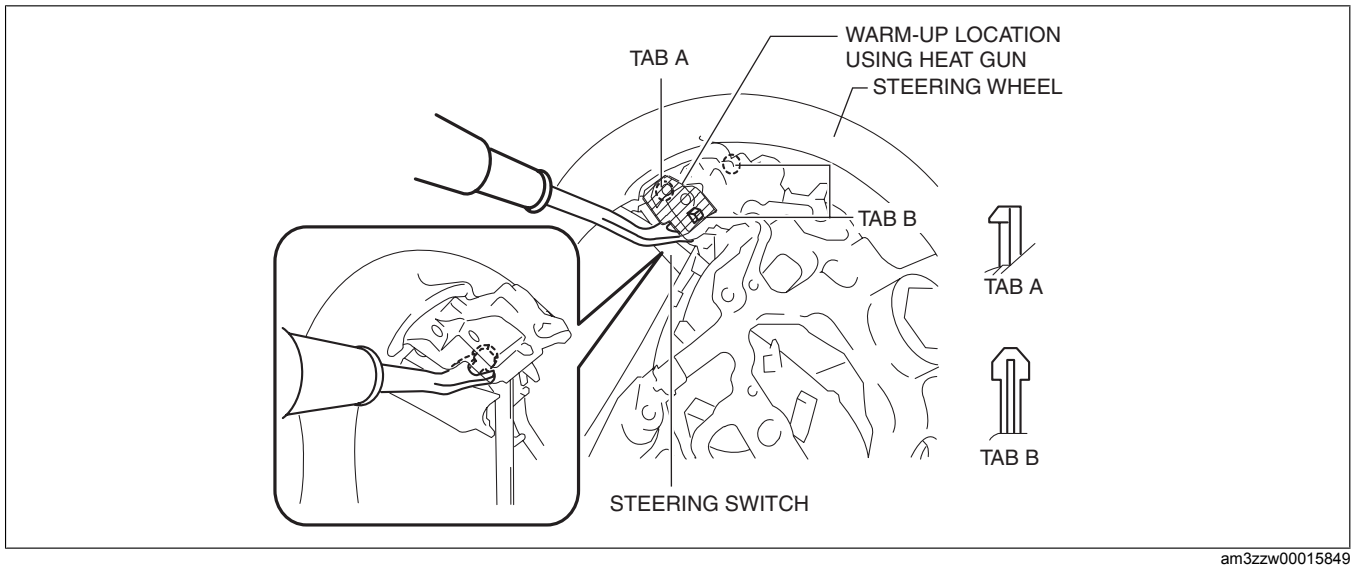

am3zzw00015849


18. Move the fastener remover straight in the direction shown in the figure and remove the tabs of the steering switch from the steering wheel.

Caution

- **When removing the pins of the steering switch, pull them out straight. If the fastener remover is moved at an angle, the pins could be damaged.**

Note


- Because the pins of the steering switch are installed to the hard plastic area of the steering wheel, the engagement is strong.

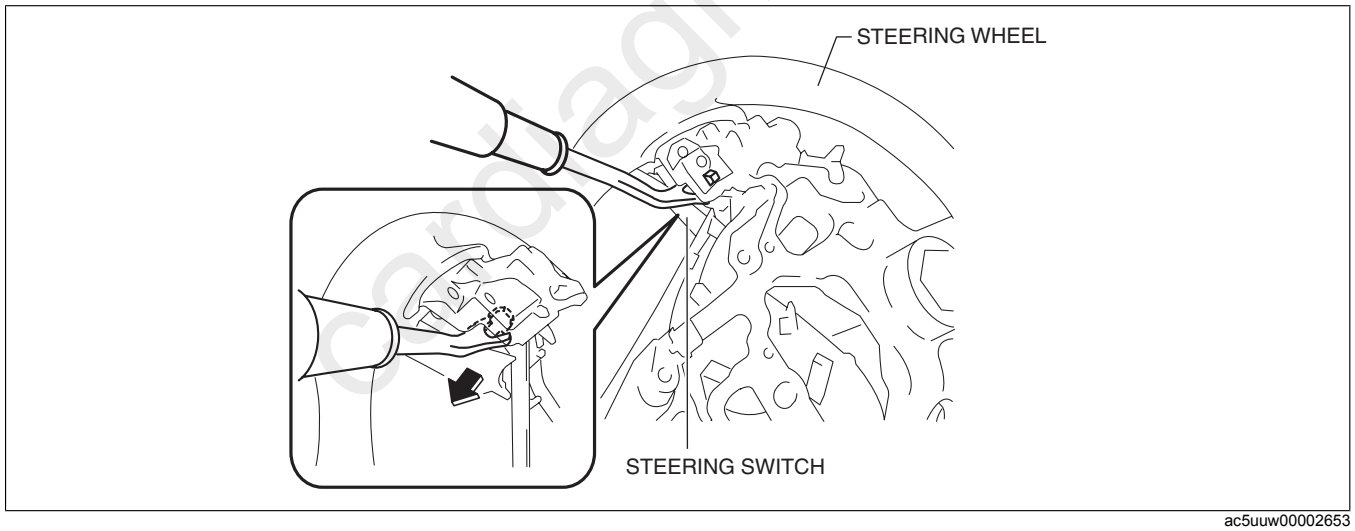

ac5uuw00002653

carqagn.com

19. Remove the steering switch while detaching the pin and tabs of the steering wheel.
20. Install in the reverse order of removal.

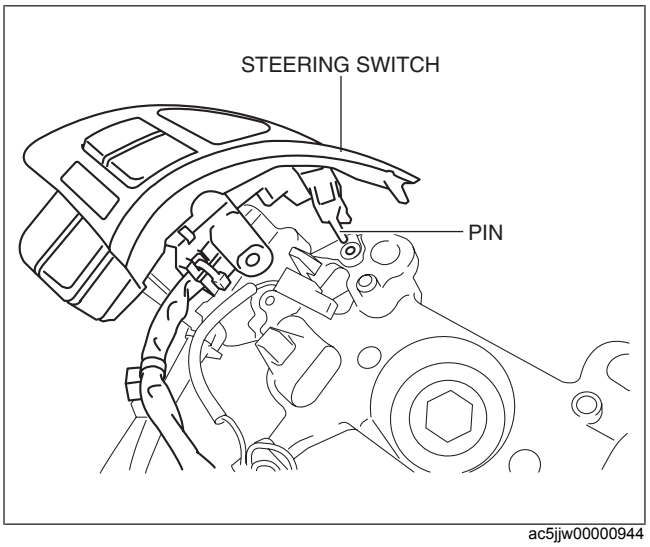

ac5jjw00000944

cardiagn.com