CD PLAYER [WITHOUT CENTER DISPLAY]

id0920z9113700

Purpose, Function


- The CD player sends the audio signal and music information, such as the album name and artist name of the inserted CD, to the audio unit.

Specification

Type	Playback function file
Music/MP3/WMA/AAC CD player	• Music data (CD-DA) • MP3/WMA (Windows Media Audio)/AAC (Advanced Audio Coding) files


Construction

- The CD player is located in the front console.

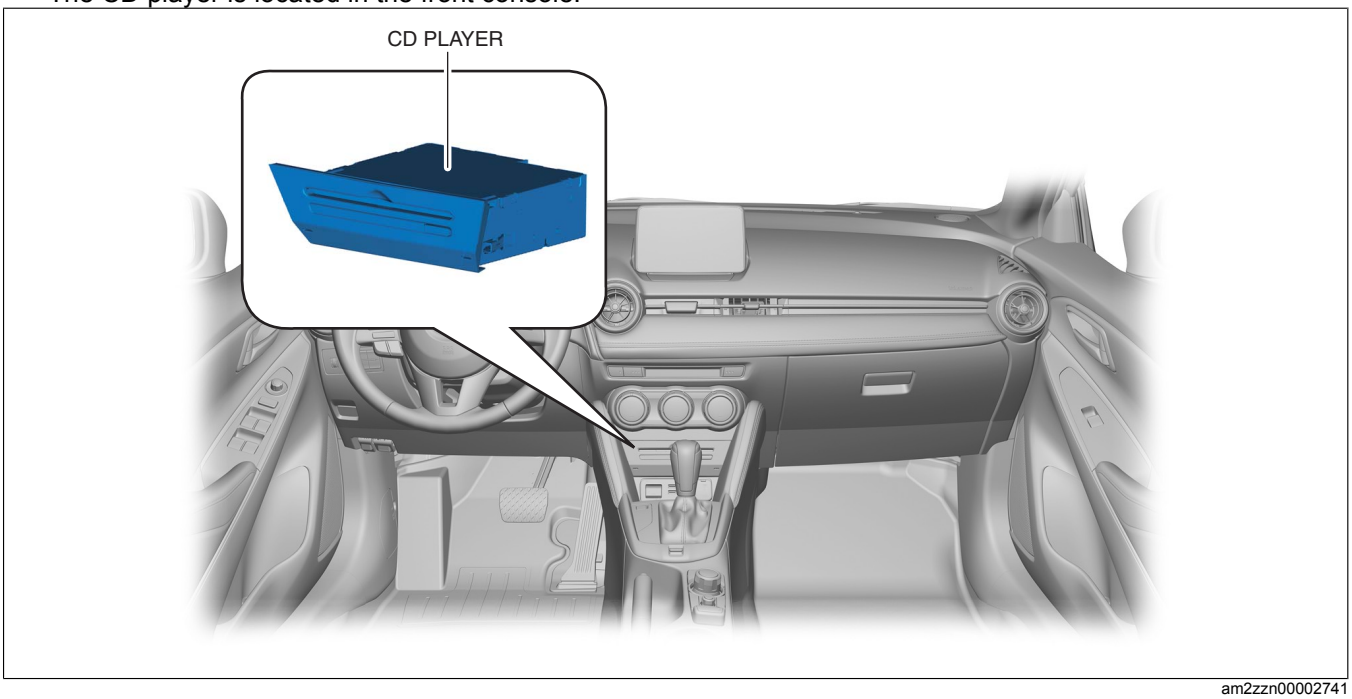

am2zzn00002741

Input/output signal table

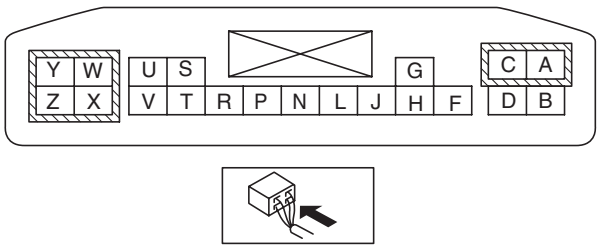Terminal		Signal
	A	Ground
	B	—
	C	—
	D	Illumination power supply (-)
	F	—
	G	Local MS-CAN (+)
	H	Local MS-CAN (-)
	J	Shield ground
	L	CD audio output LH (+)
	N	CD audio output LH (-)
	P	CD audio output RH (+)
	R	CD audio output RH (-)
	S	—
	T	—
	U	—
	V	—
	W	TNS signal input
	X	—
	Y	ACC
	Z	B+

Operation

- For the CD player operation, refer to the ENTERTAINMENT SYSTEM. (See ENTERTAINMENT SYSTEM [WITHOUT CENTER DISPLAY].)

Fail-safe

- Not applicable