TUNER AND AMP UNIT [WITH CENTER DISPLAY]

id0920zz113500

Purpose

- Controls the audio signal from the entertainment system-related parts.

Function

Tuner switching function

- The tuner and amplifier unit (TAU) switches the tuner mode built-into the TAU based on the control signal sent from the connectivity master unit (CMU).

Audio signal output function

- The TAU outputs the audio signal sent from the following units to the speakers.
  - — CMU
  - — CD player
  - — DVD/CD player
  - — Auxiliary jack/USB port/SD card slot hub (only auxiliary jack)

RS485 *1 signal conversion function

Note

- The RS485*1 signal wiring harness is used in the following cases:
  RDS-TCM
  - — Traffic information such as location and length of traffic jams is sent to CMU from TAU

- The TAU creates data from the radio waves received from the antenna amplifier (4SD)/center roof antenna (5HB) and converts the created data to a RS485 signal and sends it to the CMU.

*1 : RS485 corresponds to a linear, multi-drop configuration with bi-directional transmission, which is one of the possible types of serial communication, having a maximum transmission speed of **10 Mbps**.

ALC (auto level control) function

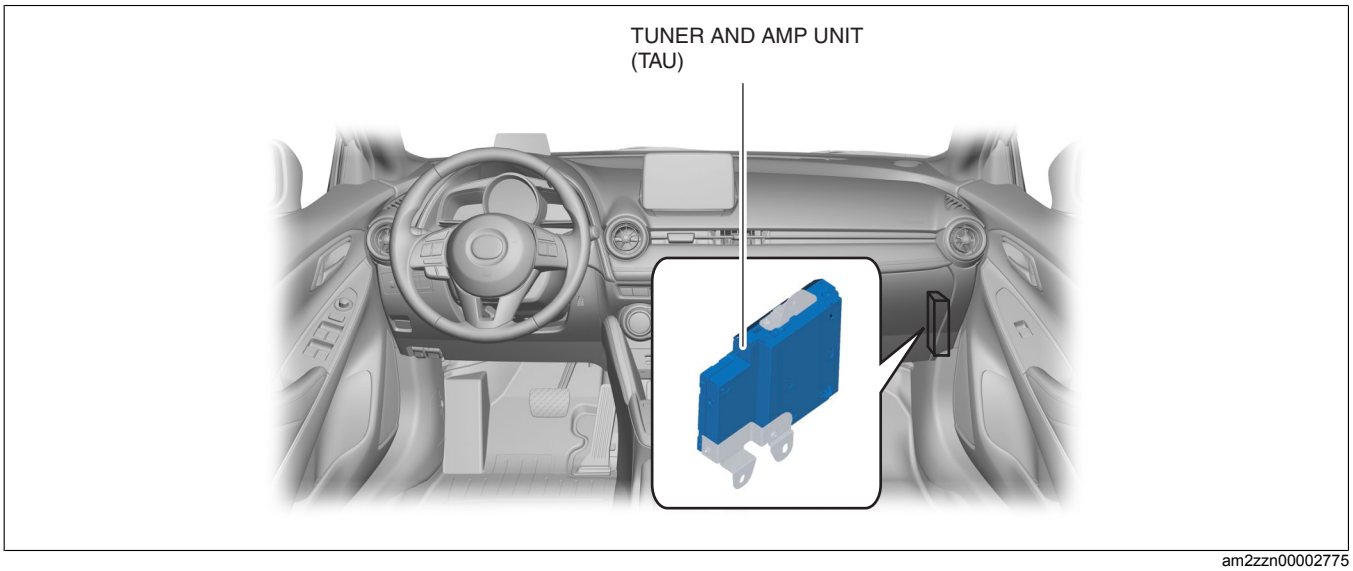
- When the TAU receives the vehicle speed signal sent from the instrument cluster, it automatically changes the volume and audio quality according to the vehicle speed and compensates for the passengers' sense of a lack of audio volume which occurs as a result of external noise while driving.

Specification

Item			Specification
Rated voltage		(V)	12
Frequency range	AM	(kHz)	522—1629 (With AM frequency pitch: 9KHz pitch) 530—1620 (With AM frequency pitch: 5KHz pitch) 531—1602 (With AM frequency pitch: 9KHz pitch)
	FM	(MHz)	87.5—108
Amplifier maximum output		(W)	25×4
Output impedance		(ohm)	4

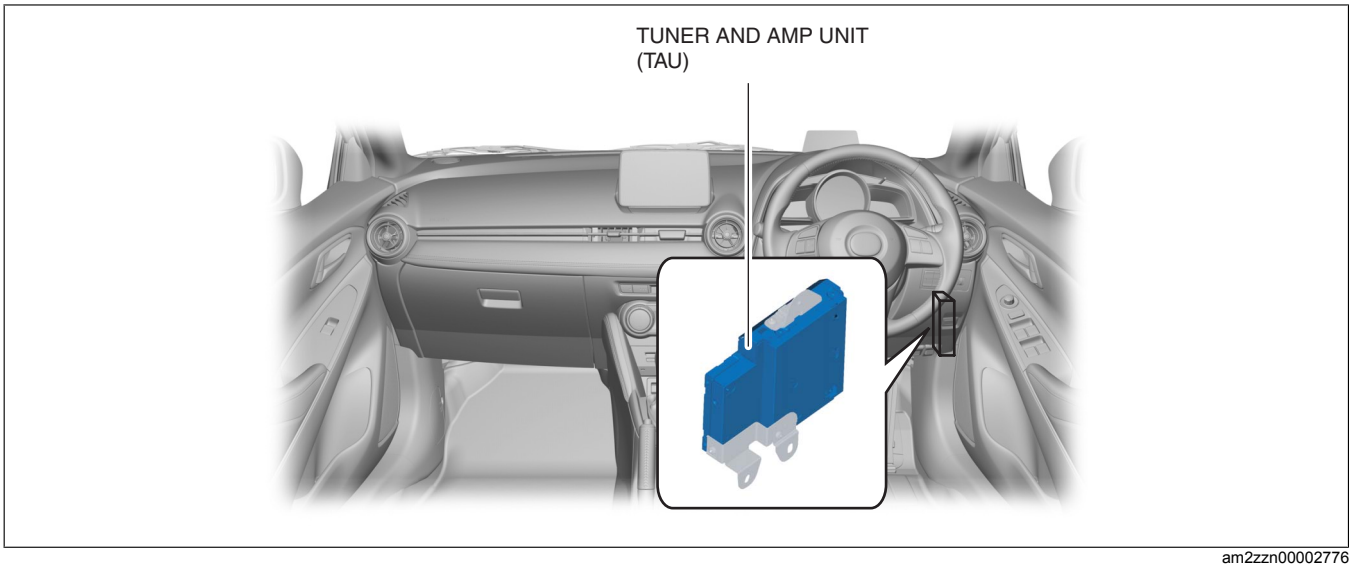
Construction

L.H.D.



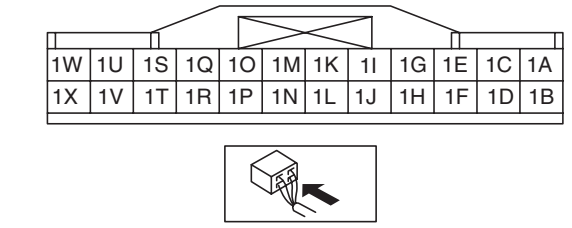
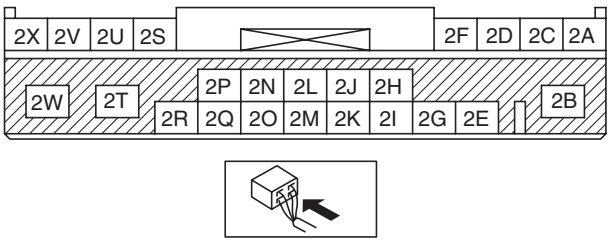
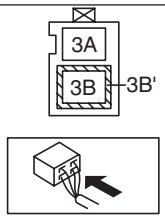
am2zzn00002775

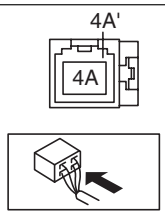
R.H.D.



am2zzn00002776

Input/output signal table

Terminal		Signal
	1A	—
	1B	—
	1C	—
	1D	—
	1E	—
	1F	—
	1G	—
	1H	—
	1I	AUX audio input LH (+)
	1J	AUX audio input LH/RH (-)
	1K	AUX audio input RH (+)
	1L	AUX connection detection
	1M	DVD/CD audio input LH (+)
	1N	DVD/CD audio input LH (-)
	1O	DVD/CD audio input RH (+)
	1P	DVD/CD audio input RH (-)
	1Q	CMU audio input LH (+)
	1R	CMU audio input LH (-)
	1S	CMU audio input RH (+)
	1T	CMU audio input RH (-)
	1U	—
	1V	—
	1W	RS485 signal (+)
	1X	RS485 signal (-)
	2A	Front door speaker output LH (+)
	2B	B+
	2C	Front door speaker output LH (-)
	2D	Front door speaker output RH (+)
	2E	—
	2F	Front door speaker output RH (-)
	2G	—
	2H	i-stop signal input
	2I	Vehicle speed input signal
	2J	—
	2K	—
	2L	—
	2M	—
	2N	—
	2O	Local HS-CAN (+)
	2P	—
	2Q	Local HS-CAN (-)
	2R	ACC
	2S	Rear door speaker output LH (+)
	2T	—
	2U	Rear door speaker output LH (-)
	2V	Rear door speaker output RH (+)
	2W	Ground
	2X	Rear door speaker output RH (-)
	3A	AM/FM antenna amplifier power supply
	3B	AM/FM radio input
	3B'	Ground

Terminal		Signal
	4A	DAB radio input
	4A'	Ground

Operation

- For the TAU operation, refer to the ENTERTAINMENT SYSTEM. (See ENTERTAINMENT SYSTEM [WITH CENTER DISPLAY].)

Fail-safe

- Not applicable