
FUSE BLOCK

id092100528800

Purpose
- Fuses used by each system are grouped and housed together for smooth inspection and replacement servicing.

Function
- Fuses used by each system are grouped and housed together.

Construction
- The fuse block is located inside the front side trim (LH).

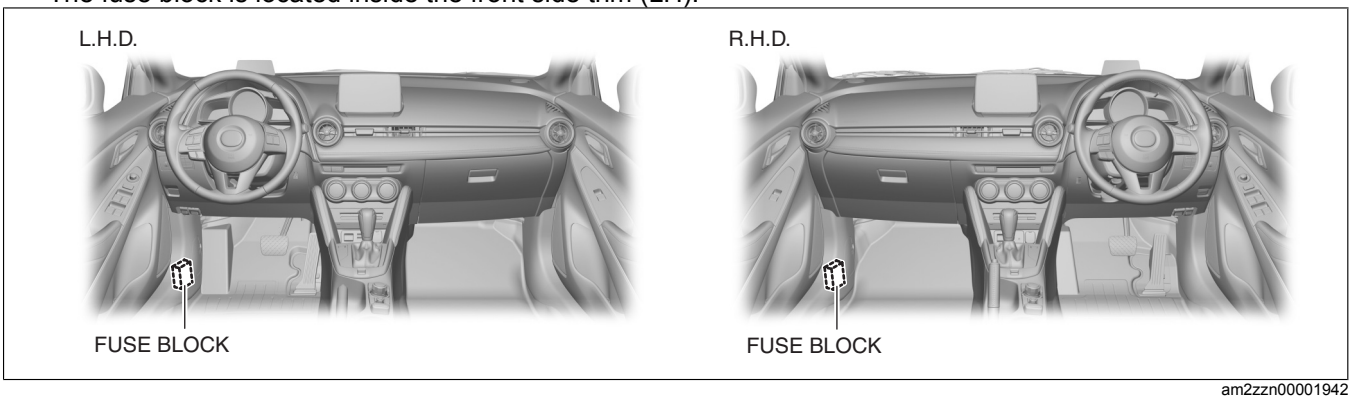

am2zzn00001942

Operation
Fuse operation
1. If electric current of the specified value or more flow to a fuse, the fuse blows due to heat generation.
2. The current between the fuse and ground is interrupted.

Fail-safe
- Not applicable