MAIN FUSE

id092100800000

Purpose

- If electric current of the specified value or more flow to a fuse, the fuse blows due to heat generation to protect the systems and parts downstream of the fuse.


Function

- If electric current of the specified value or more flow to a fuse, the fuse blows due to heat generation.

Construction


- The main fuse is located at the battery positive terminal.

SKYACTIV-G 1.3, SKYACTIV-G 1.5

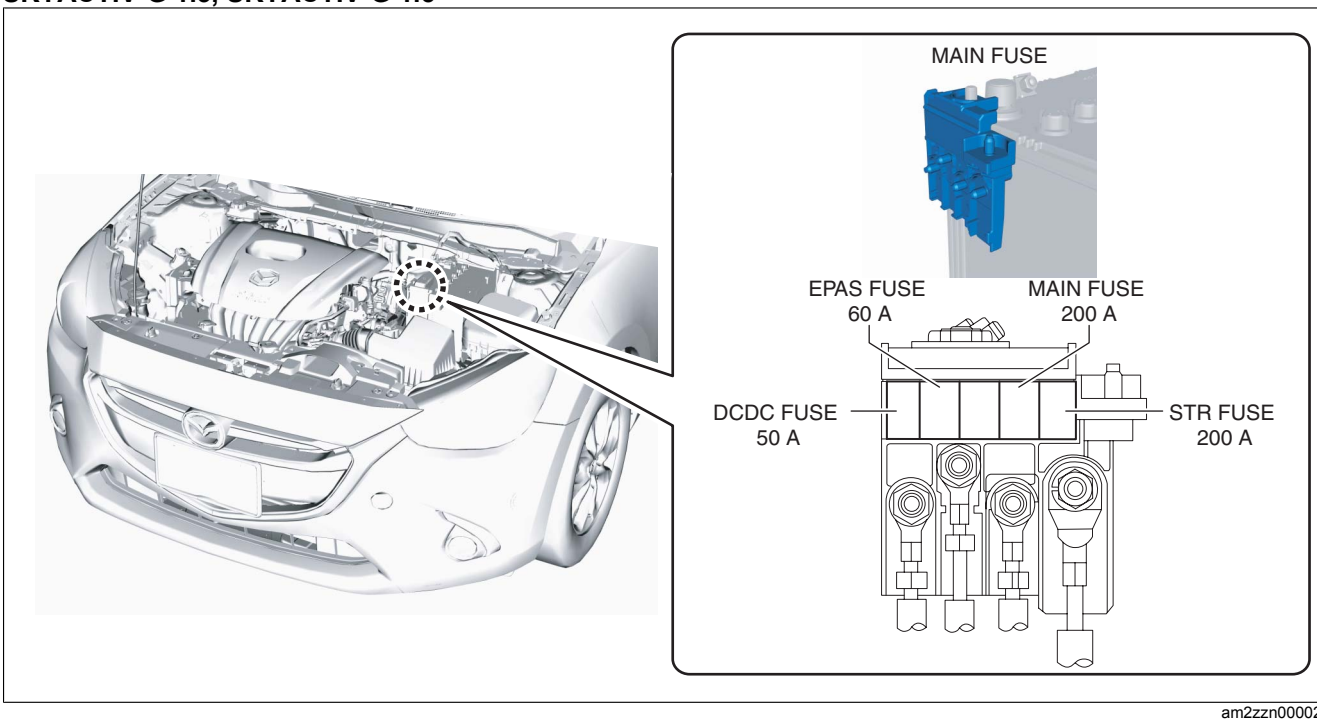

am2zzn00002027

SKYACTIV-D 1.5

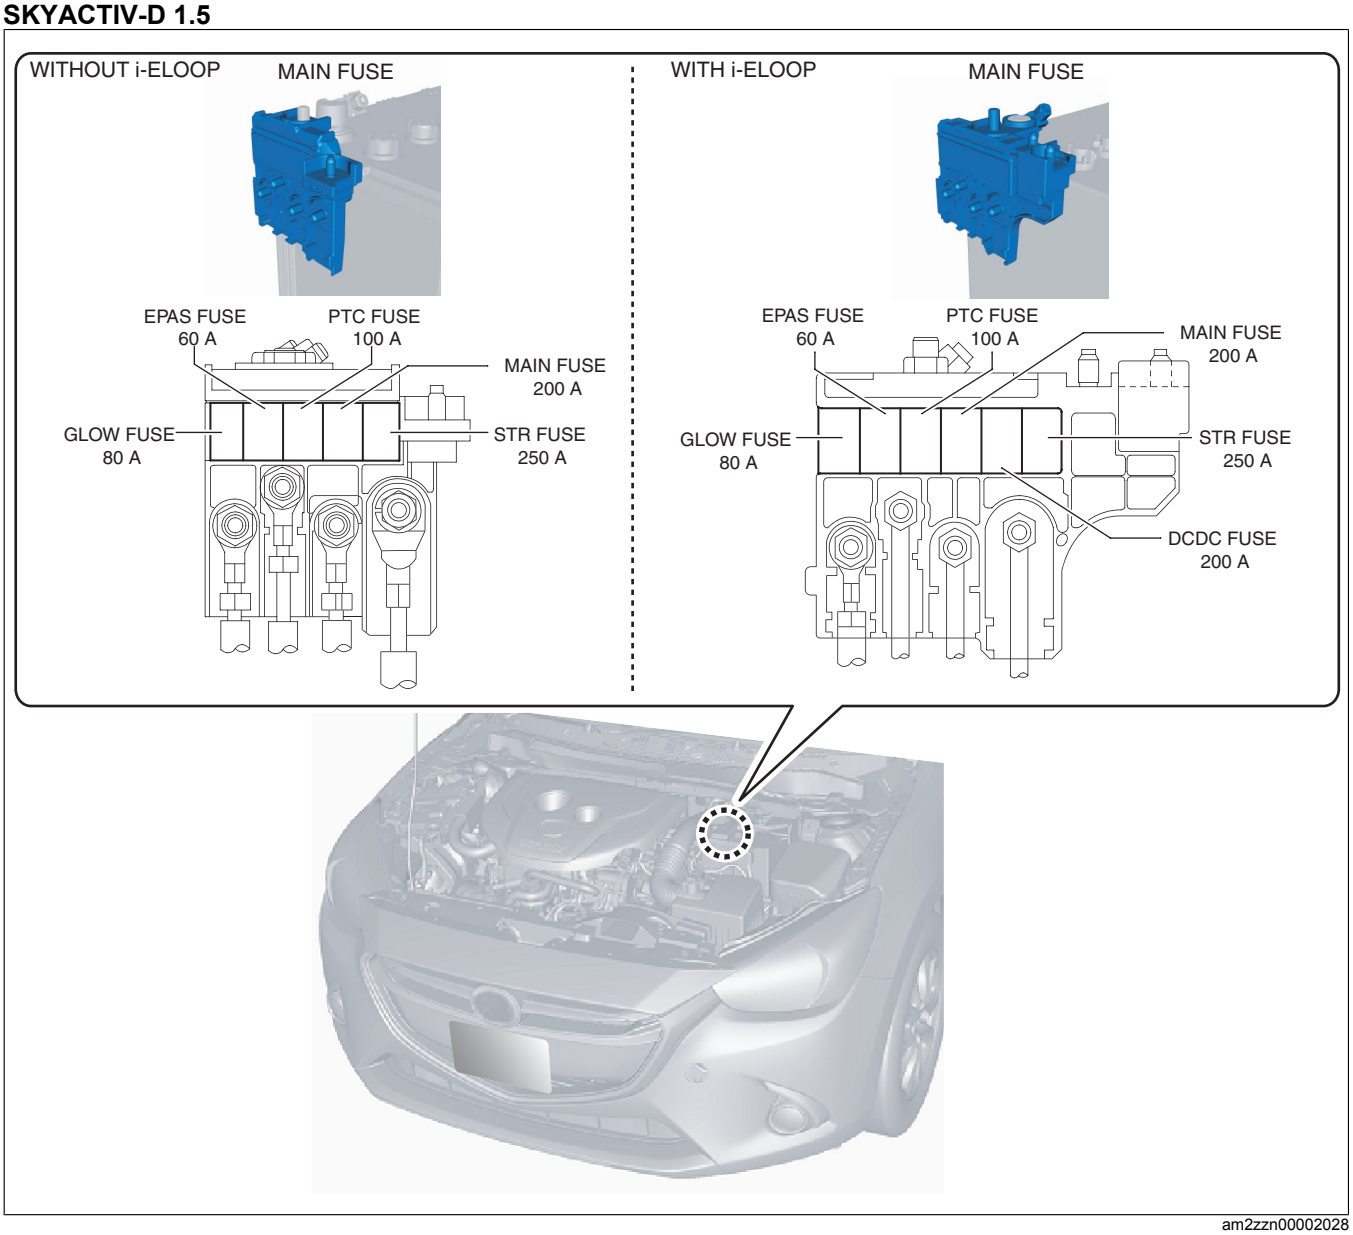

am2zzn00002028

Operation

1. If electric current of the specified value or more flow to a fuse, the fuse blows due to heat generation.
2. Current between the fuse and ground is interrupted.

Fail-safe

- Not applicable