RELAY INSPECTION

id092100800300

Relay Type


Connector type	Part name
Type A	• IG1 RELAY • A/C RELAY • FRONT FOG LIGHT RELAY • HEADLIGHT CLEANER RELAY • THEFT-DETERRENT RELAY • ELECTRIC AT OIL PUMP RELAY • IGNITION RELAY (ACC_STAB) • HORN RELAY • STARTER RELAY • ELECTRIC VARIABLE VALVE TIMING RELAY • ACC RELAY • REAR WINDOW DEFROSTER RELAY • IGNITION RELAY (IG1_STAB) • FUEL PUMP RELAY*1 • BLOW-BY HEATER RELAY*2 • FUEL INJECTOR RELAY*1 • CHECK CONNECTOR*2 • MAIN RELAY • COOLING FAN RELAY NO.1*1 • COOLING FAN RELAY NO.2*1
Type B	• BRAKE LIGHT RELAY • WIPER INT RELAY • WIPER HI RELAY
Type C	• BLOWER RELAY • COOLING FAN RELAY

*1 : SKYACTIV-G 1.3, 1.5

*2 : SKYACTIV-D 1.5

Type A

1. Remove the relay. (See RELAY LOCATION.)
2. Verify the continuity between relay terminals C and D.
   - If it can be verified, replace the relay. (See RELAY LOCATION.)
   - If it cannot be verified, go to the next step.
3. Verify the continuity between relay terminals E and A.
   - If it can be verified, go to the next step.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)
4. Apply battery voltage to relay terminal E, and connect terminal A to ground.
5. Verify the continuity between relay terminals C and D.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)

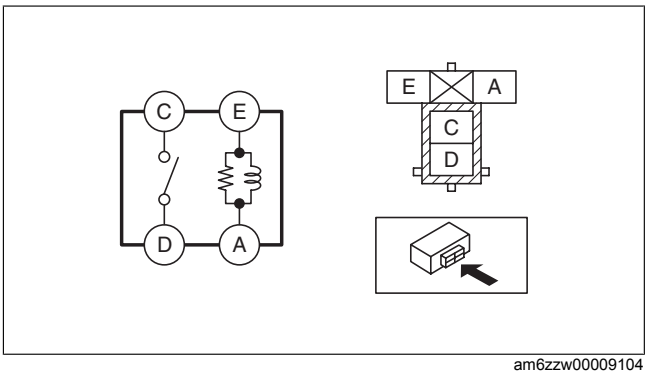


am6zzw00009104

Type B

1. Remove the relay. (See RELAY LOCATION.)


2. Verify the continuity between relay terminals C and D.
   - If it can be verified, replace the relay. (See RELAY LOCATION.)
   - If it cannot be verified, go to the next step.
3. Verify the continuity between the relay terminals E and A.
   - If it can be verified, go to the next step.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)
4. Verify the continuity between the relay terminals B and D.
   - If it can be verified, go to the next step.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)
5. Apply battery voltage to relay terminal E, and connect terminal A to ground.
6. Verify the continuity between relay terminals C and D.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)

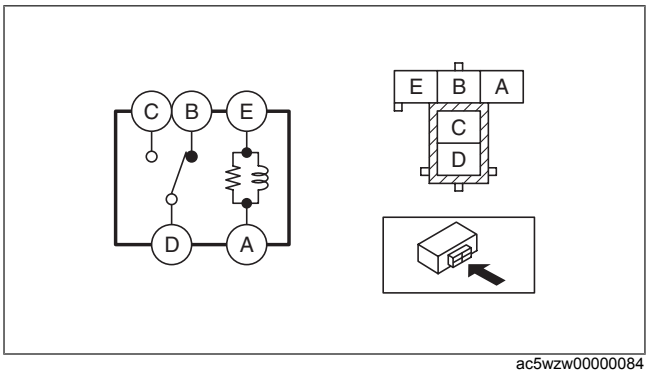

ac5wzw00000084

Type C

1. Remove the relay. (See RELAY LOCATION.)
2. Verify the continuity between the relay terminals C and A.
   - If it can be verified, replace the relay. (See RELAY LOCATION.)
   - If it cannot be verified, go to the next step.
3. Verify the continuity between the relay terminals D and B.
   - If it can be verified, go to the next step.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)
4. Apply battery voltage to relay terminal D, and connect terminal B to ground.
5. Verify the continuity between relay terminals C and A.
   - If it cannot be verified, replace the relay. (See RELAY LOCATION.)

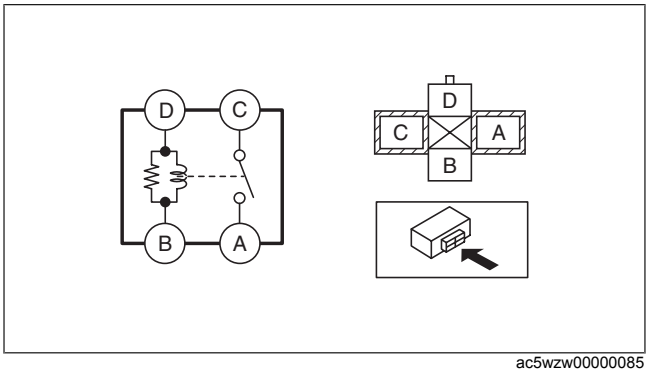

ac5wzw00000085