## RELAY AND FUSE BLOCK

id092100960100

### Purpose

- Relays and fuses used by each system are grouped and housed together for smooth inspection and replacement servicing.


### Function

- Relays and fuses used by each system are grouped and housed together.

### Construction


- Relay and fuse block is positioned in the engine compartment.

**SKYACTIV-G 1.3, SKYACTIV-G 1.5**

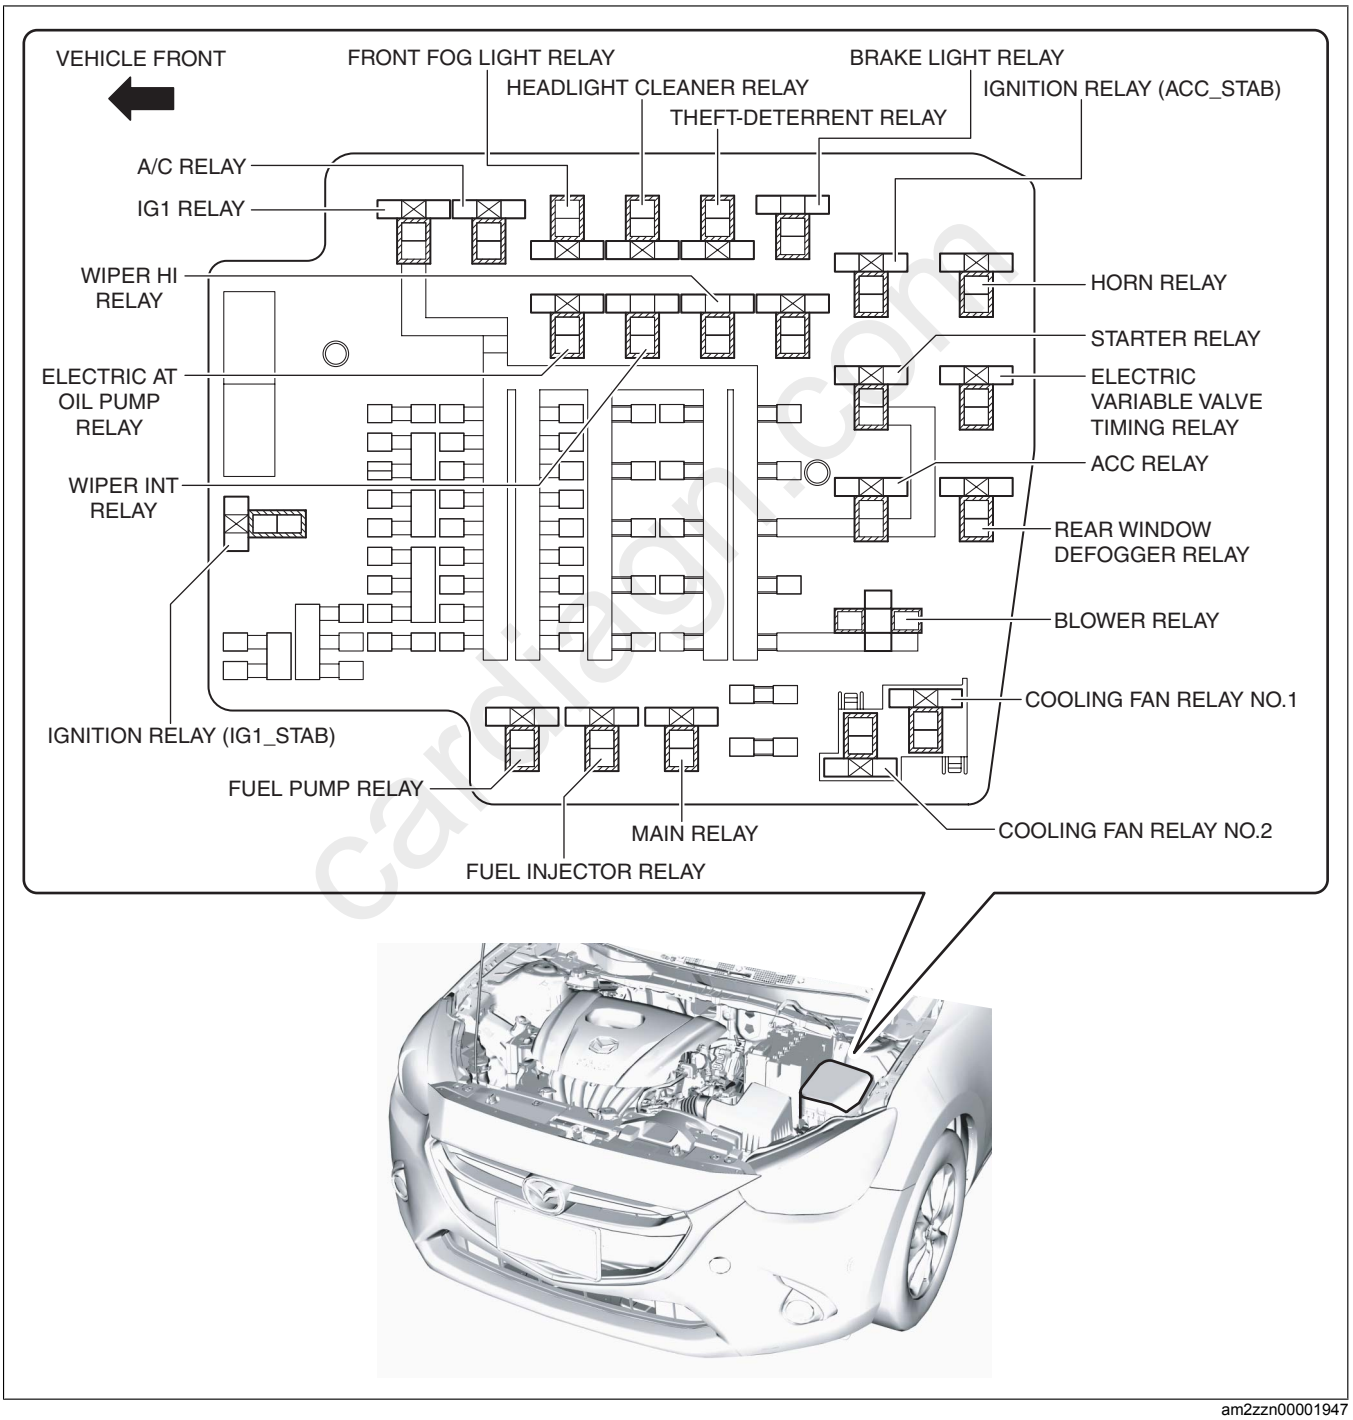


am2zzn00001947


**SKYACTIV-D 1.5**

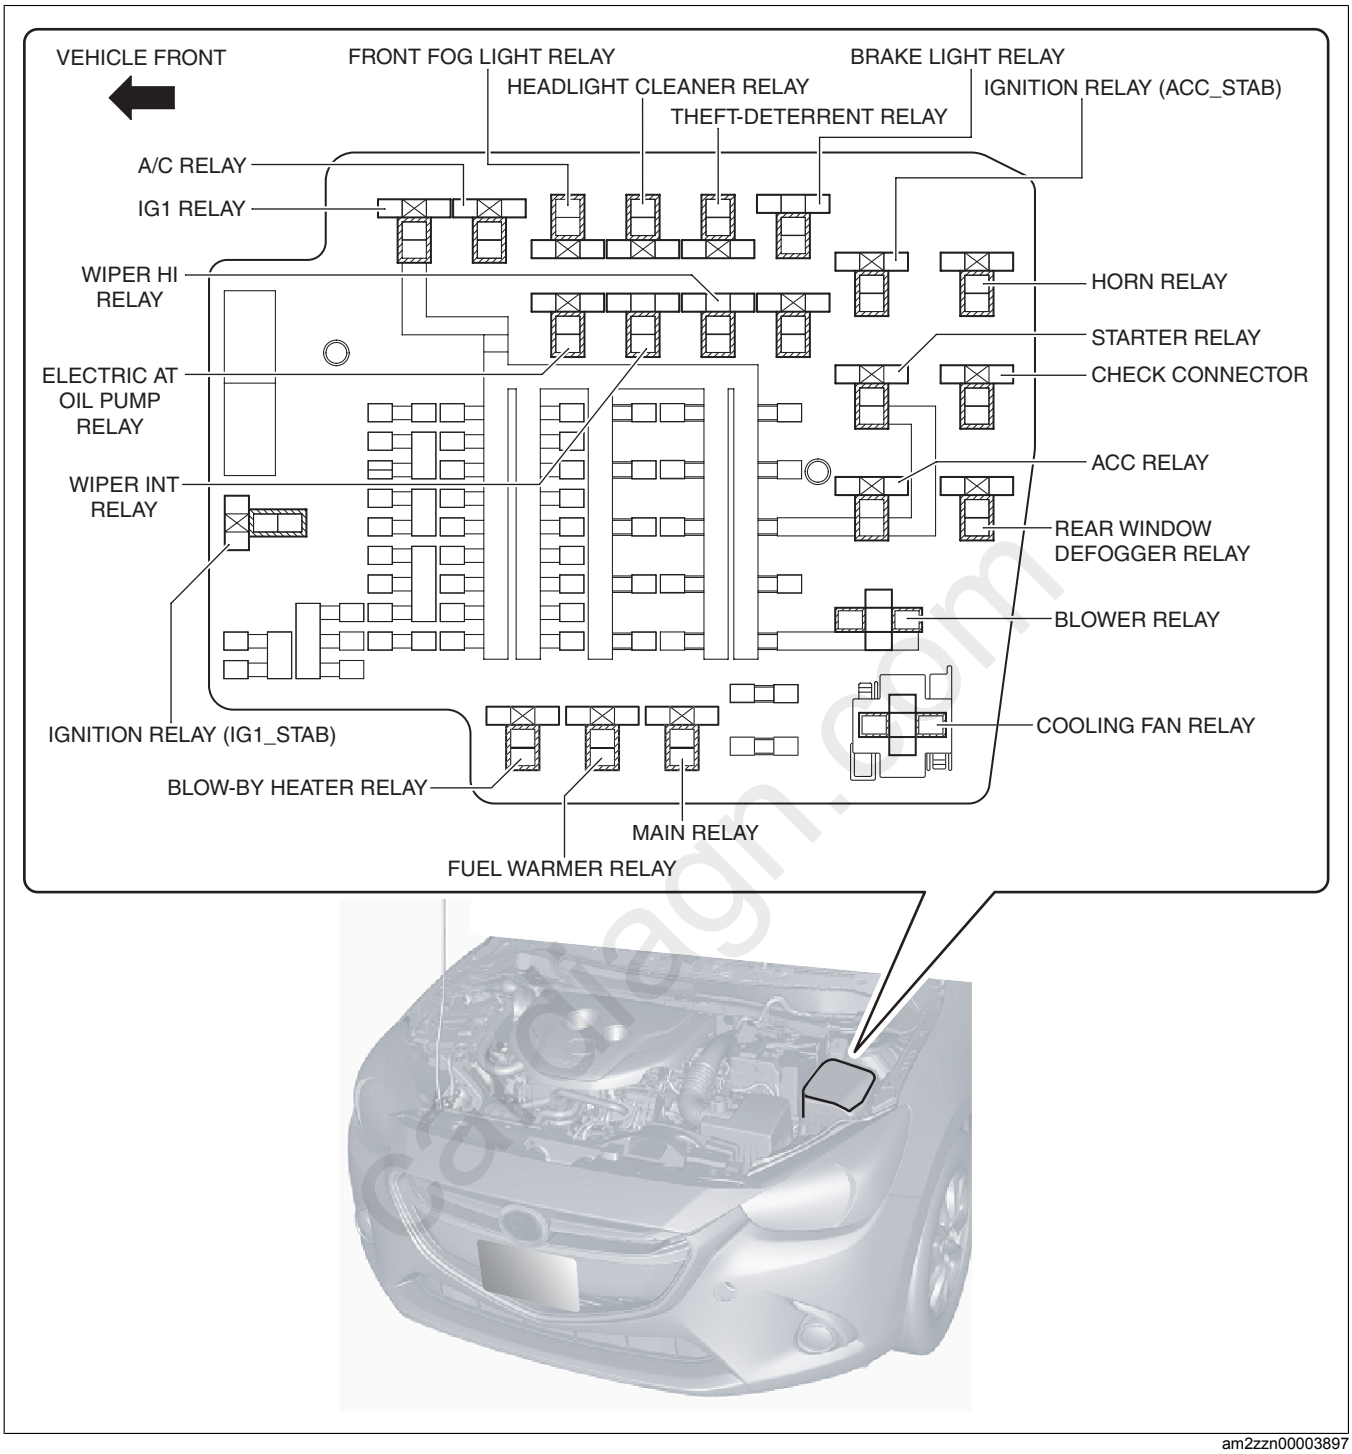


am2zzn00003897

**Operation**
**Relay operation**

1. When electric current flows to the coil, electromagnetic power is generated.
2. The switch is attracted by the generated electromagnetic power and switches on.

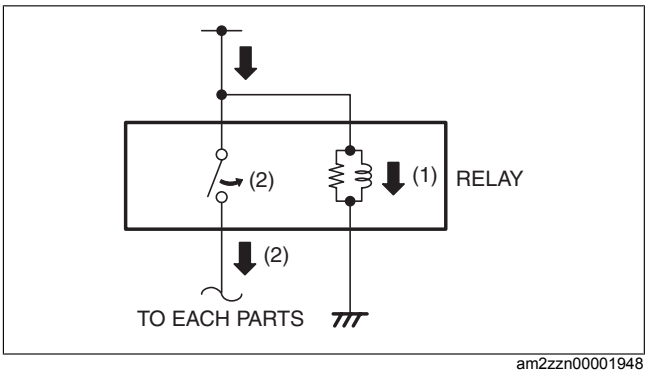

am2zzn00001948

**Fuse operation**

1. If electric current of the specified value or more flows to a fuse, the fuse generates heat and blows.

   **Note**
   - The time until a fuse blows depends on the amount of electrical current.

2. Current between the fuse and ground is interrupted.

**Fail-safe**

- Not applicable

cardiagn.com