FUEL GAUGE SENDER UNIT INSPECTION


id092200012100

SKYACTIV-G 1.3, SKYACTIV-G 1.5

Note
- The fuel gauge sender unit is located in the fuel pump unit. Therefore when replacing the fuel gauge sender unit, refer to FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY. (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
3. Remove the fuel pump unit. (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Verify that the resistance at fuel pump unit terminals D and C is as follows according to the height of the float.

Resistance when float is in the highest position
— 18.5—21.5 ohms
Resistance when float is in the lowest position
— 197—203 ohms

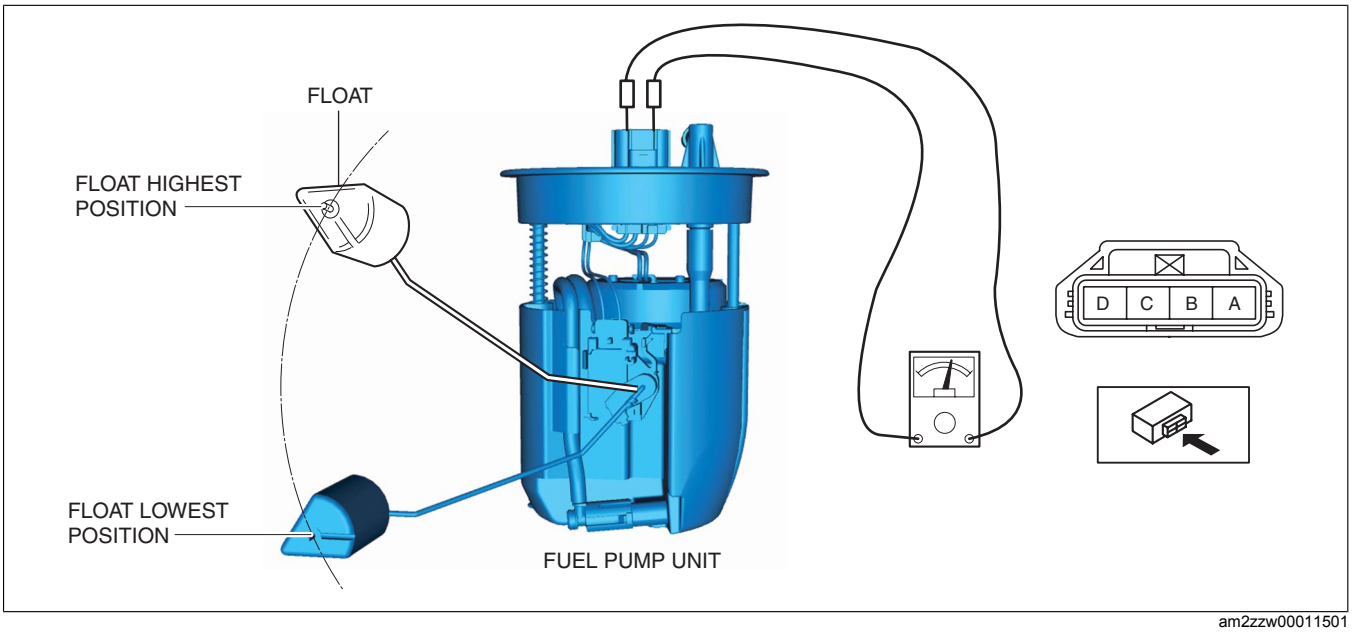


am2zzw00011501

- If the resistance is not within the specification, replace the fuel gauge sender unit. (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

SKYACTIV-D 1.5

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
3. Remove the fuel gauge sender unit. (See FUEL GAUGE SENDER UNIT REMOVAL/INSTALLATION.)
4. Verify that the resistance at fuel gauge sender unit terminals D and C is as follows according to the height of the float.

Resistance when float is in the highest position
— 18.5—21.5 ohms
Resistance when float is in the lowest position
— 197—203 ohms

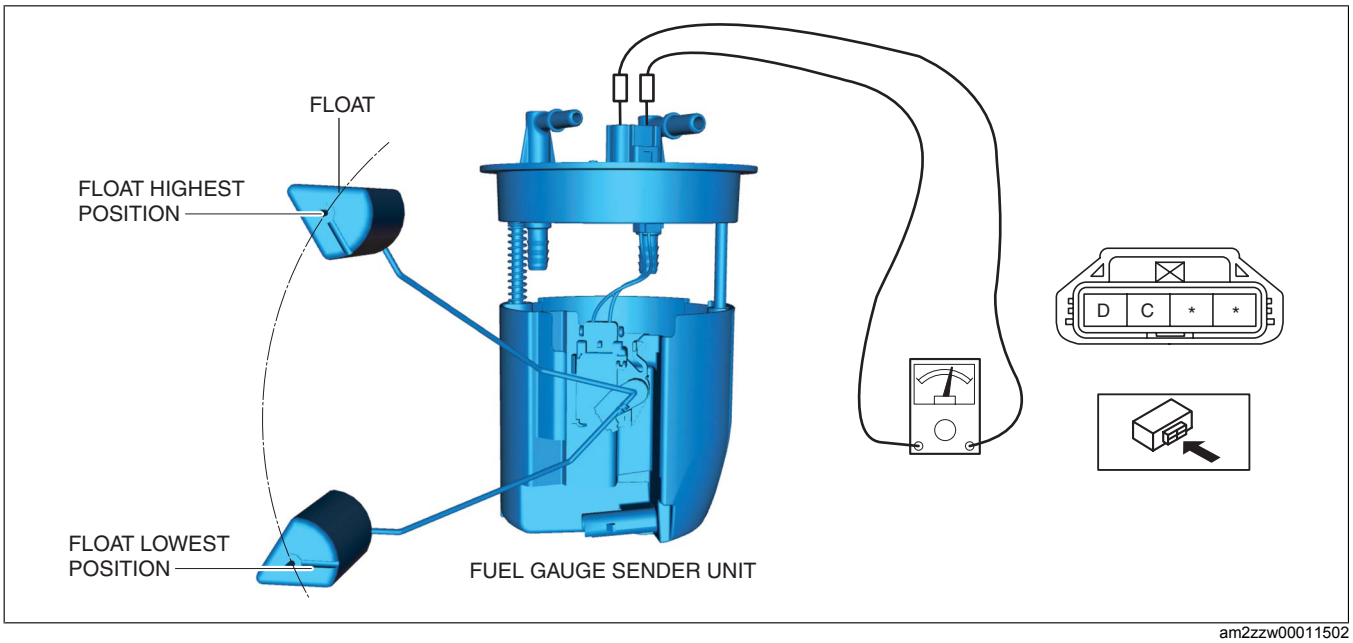

am2zzw00011502

- If the resistance is not within the specification, replace the fuel gauge sender unit. (See FUEL GAUGE SENDER UNIT REMOVAL/INSTALLATION.)