
## HORN INSPECTION

id092200012700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the horn. (See HORN REMOVAL/INSTALLATION.)
4. Apply battery positive voltage to horn terminal A, and connect the horn retaining bolt to ground as shown in the figure, and then verify that the horn sounds.
   - If the horn does not sound, replace the horn. (See HORN REMOVAL/INSTALLATION.)

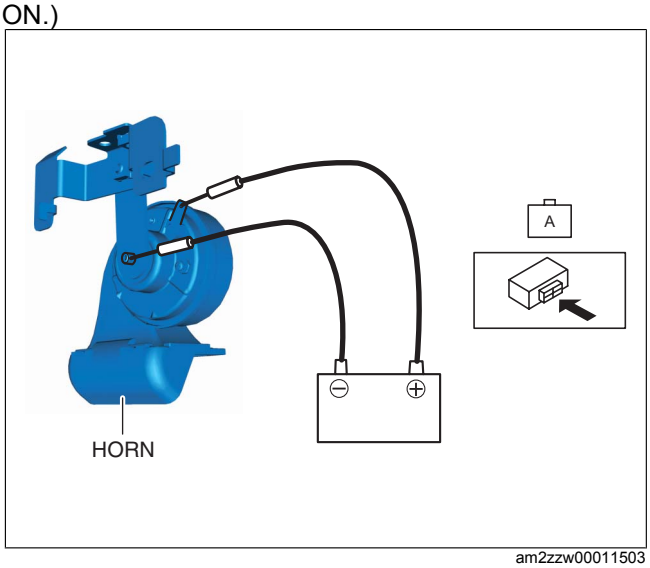


am2zzw00011503