
BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/INSTALLATION

id092200013900


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (2) Rear splash shield (See SPLASH SHIELD REMOVAL/INSTALLATION.)
   (3) Rear bumper (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
   (4) Blind spot monitoring (BSM) control module (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/INSTALLATION.)
3. Remove the nuts.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

5HB

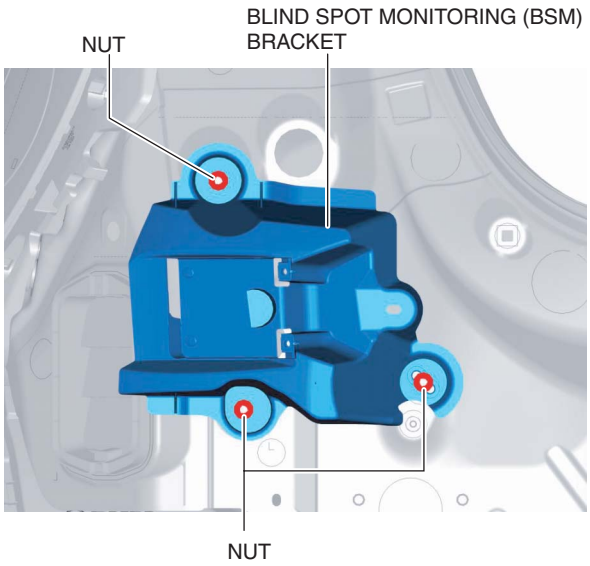

4SD

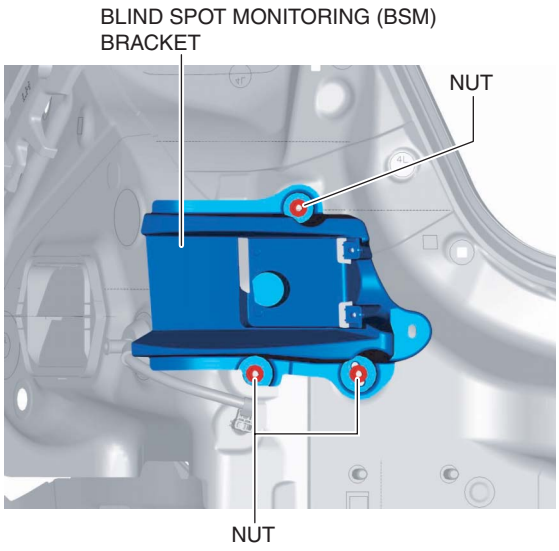

NUT : **8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}**

am2zzw00009901

4. Remove the blind spot monitoring (BSM) bracket.
5. Install in the reverse order of removal.

Caution

- **If the blind spot monitoring (BSM) bracket is replaced, not performing the blind spot monitoring (BSM) radar aiming will cause a deviation in the radar emission angle which could result in the system not detecting a vehicle approaching from the rear correctly. When the blind spot monitoring (BSM) bracket is replaced, perform the blind spot monitoring (BSM) radar aiming.**

6. When the blind spot monitoring (BSM) bracket is replaced, perform the blind spot monitoring (BSM) radar aiming. (See BLIND SPOT MONITORING (BSM) RADAR AIMING.)