LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED)

id092200018300

Purpose

Low engine coolant temperature indicator light (blue)

- The low engine coolant temperature indicator light (blue) notifies the driver that the engine coolant temperature is low and vaporization of the fuel is difficult.


High engine coolant temperature warning light (red)

- The high engine coolant temperature warning light (red) warns the driver that the engine coolant temperature is high and that there is the danger of overheating.

Function

Low engine coolant temperature indicator light (blue)


- The low engine coolant temperature indicator light (blue) turns on when the engine coolant temperature is low.
- Illumination condition of the low engine coolant temperature indicator light (blue) is as shown in the figure.

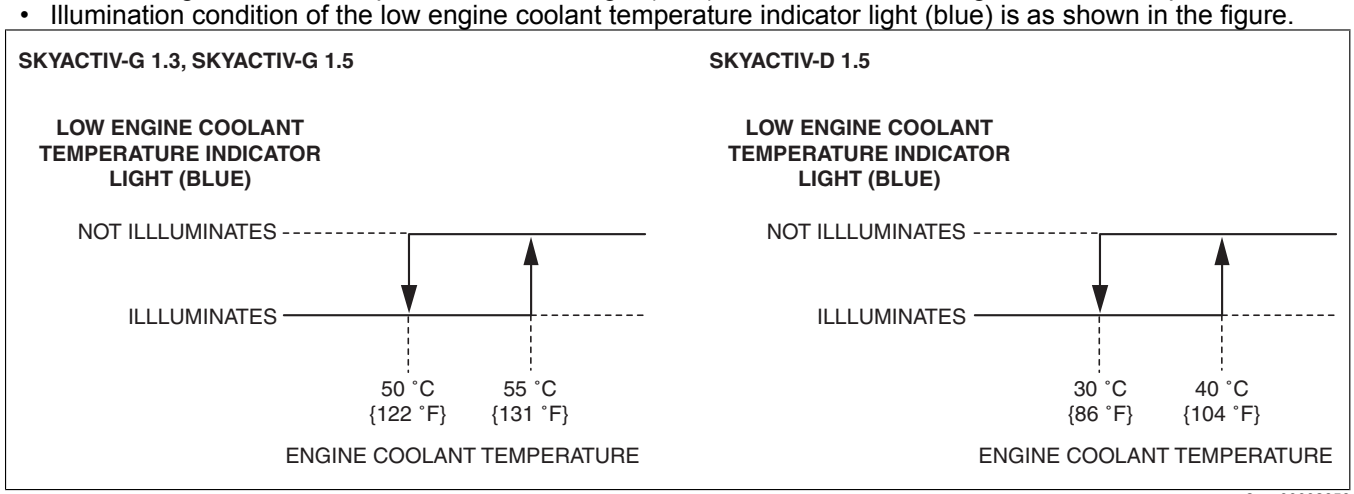

am2zzn00002858

High engine coolant temperature warning light (red)

- The high engine coolant temperature warning light (red) flashes at **0.5 s** intervals when the engine coolant temperature exceeds the set value, and turns on if the temperature increases further.
- The flashing/illumination condition of the high engine coolant temperature warning light (red) is as shown in the figure.

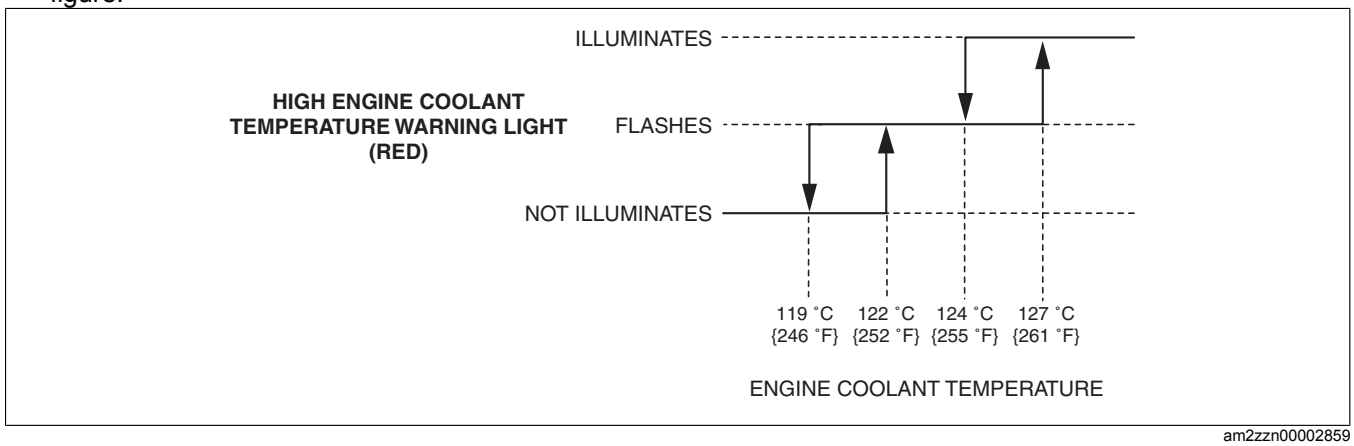


am2zzn00002859

Construction

- Turning on, flashing, or turning off of the low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red) is controlled by the instrument cluster microcomputer based on the engine coolant temperature signal from the PCM.

- The low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red) are built into the instrument cluster.
- For vehicles with the center display, a warning message in the center display is displayed when the high engine coolant temperature warning light is turned on or flashed. For the message content and verification method, refer to [CENTER DISPLAY]. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

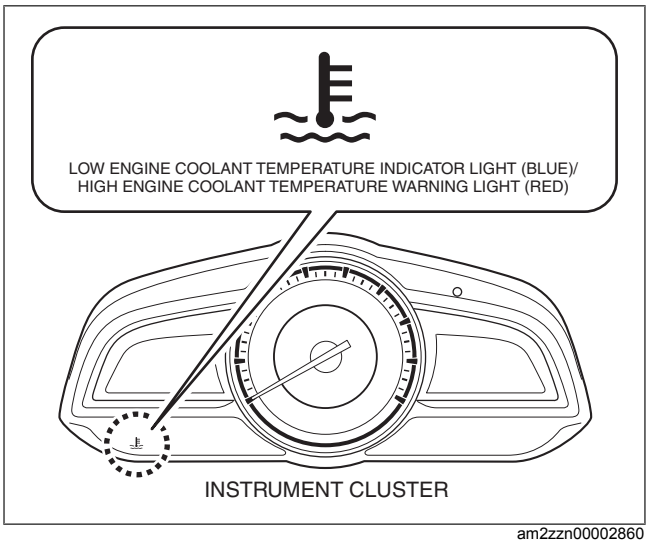


am2zzn00002860

Operation

Low engine coolant temperature indicator light (blue)


1. When the ignition is switched ON (engine on), the instrument cluster receives (1) an engine coolant temperature signal from the PCM via CAN communication.
2. The instrument cluster turns the transistor on (2) based on the engine coolant temperature signal.
3. When the transistor turns on, the ground circuit with the low engine coolant temperature indicator light (blue) is established and the low engine coolant temperature indicator light (blue) turns on (3).

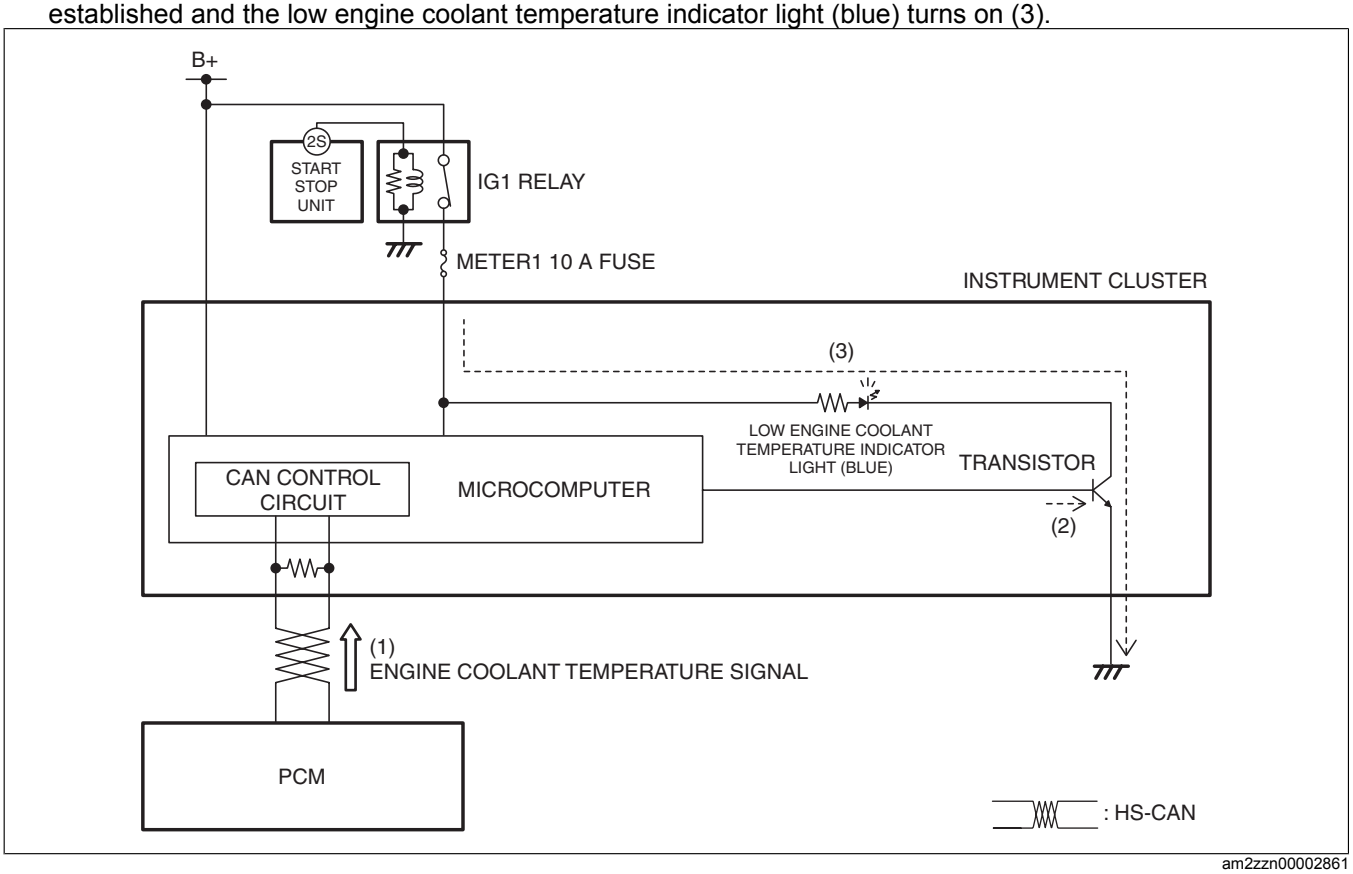

am2zzn00002861

High engine coolant temperature warning light (red)

1. When the ignition is switched ON (engine on), the instrument cluster receives (1) an engine coolant temperature signal from the PCM via the CAN communication.
2. The instrument cluster turns the transistor on (2) intermittently for flashing and continuously for illumination based on the engine coolant temperature signal.
3. The high engine coolant temperature warning light (red) flashes (3) when the transistor is turned on intermittently, and it turns on (3) when the transistor is turned on continuously.

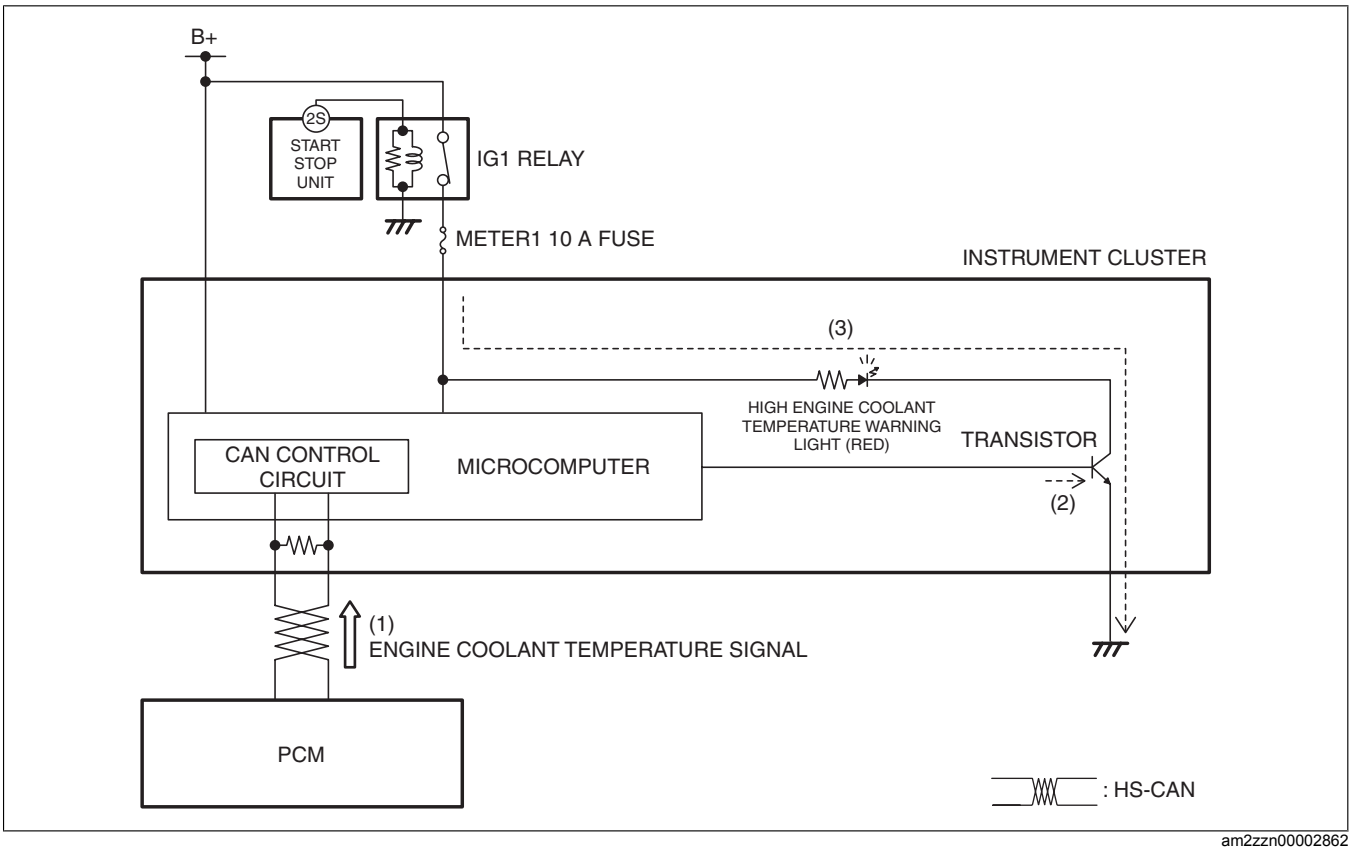

am2zzn00002862

Fail-safe

- Not applicable