INSTRUMENT CLUSTER

id092200018500

Outline

- The instrument cluster centrally controls the following:

Digital speedometer type

— Digital speedometer
— Analog tachometer
— Odometer/tripmeter
— Fuel gauge
— Warning light/Indicator light
— Warning beep
— Trip computer
— Active driving display
— LCD
— Panel light

Analog speedometer type (Type A)

— Analog speedometer
— Digital tachometer
— Odometer/tripmeter
— Fuel gauge
— Warning light/Indicator light
— Warning beep
— Trip computer
— LCD
— Panel light
— Manual air conditioner (With manual air conditioner system)

Analog speedometer type (Type B)

— Analog speedometer
— Odometer/tripmeter
— Fuel gauge
— Warning light/Indicator light
— Warning beep
— Trip computer
— LCD
— Panel light
— Manual air conditioner (With manual air conditioner system)

Analog speedometer type (Type C)

— Analog speedometer
— Odometer/tripmeter
— Fuel gauge
— Warning light/Indicator light
— Warning beep
— LCD
— Panel light
— Manual air conditioner (With manual air conditioner system)

Function

- The instrument cluster displays the following information to notify the driver of the vehicle conditions.
  — Vehicle speed (speedometer display function)
  — Engine speed (tachometer display function)
  — Remaining fuel quantity (fuel gauge display function)
  — Traveled distance (odometer/tripmeter display function)
  — Average fuel economy (with tachometer), average vehicle speed (with tachometer), instantaneous fuel economy, remaining distance to empty (trip computer calculation function)
  — Warning/indicator light (warning/indicator light turn on/flash function)

Speedometer display function

- The instrument cluster controls the speedometer based on the vehicle speed signal sent via CAN communication from the PCM, and displays the current vehicle speed. For details on the speedometer, refer to [SPEEDOMETER]. (See SPEEDOMETER.)

Tachometer display function

- The instrument cluster controls the tachometer based on the engine speed signal sent via CAN communication from the PCM, and displays the current engine speed. For details on the tachometer, refer to [TACHOMETER]. (See TACHOMETER.)

Fuel gauge display function

- The instrument cluster displays the remaining fuel quantity based on the fuel gauge sender unit voltage signal sent via CAN communication from the BCM, and the vehicle speed and fuel injection amount signals sent via CAN communication from the PCM. For details on the remaining fuel quantity, refer to [FUEL GAUGE]. (See FUEL GAUGE.)

Odometer/tripmeter display function

- The instrument cluster displays the total traveled distance/traveled distance over a specific interval based on the travel distance signal sent via CAN communication from the PCM. For details on the odometer/tripmeter, refer to [ODOMETER/TRIPMETER]. (See ODOMETER/TRIPMETER.)


Trip computer calculation function

- The instrument cluster calculates the average fuel economy (with tachometer), average vehicle speed (with tachometer), instantaneous fuel economy, and the remaining distance to empty, and displays it on the LCD in the instrument cluster. For details on the trip computer, refer to [TRIP COMPUTER INFORMATION SYSTEM]. (See TRIP COMPUTER INFORMATION SYSTEM.)

Warning/indicator light turn on/flash function, message/system operation status display function

- The instrument cluster turns on/flashes the warning/indicator lights to notify the driver of the vehicle system status.
- The types of warning/indicator lights are as follows: For details on each warning/indicator light, refer to each reference.
- For vehicles with the center display, a warning message in the center display is displayed when the warning/indicator light is turned on or flashed. For the display content, refer to [CENTER DISPLAY]. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

Digital speedometer type

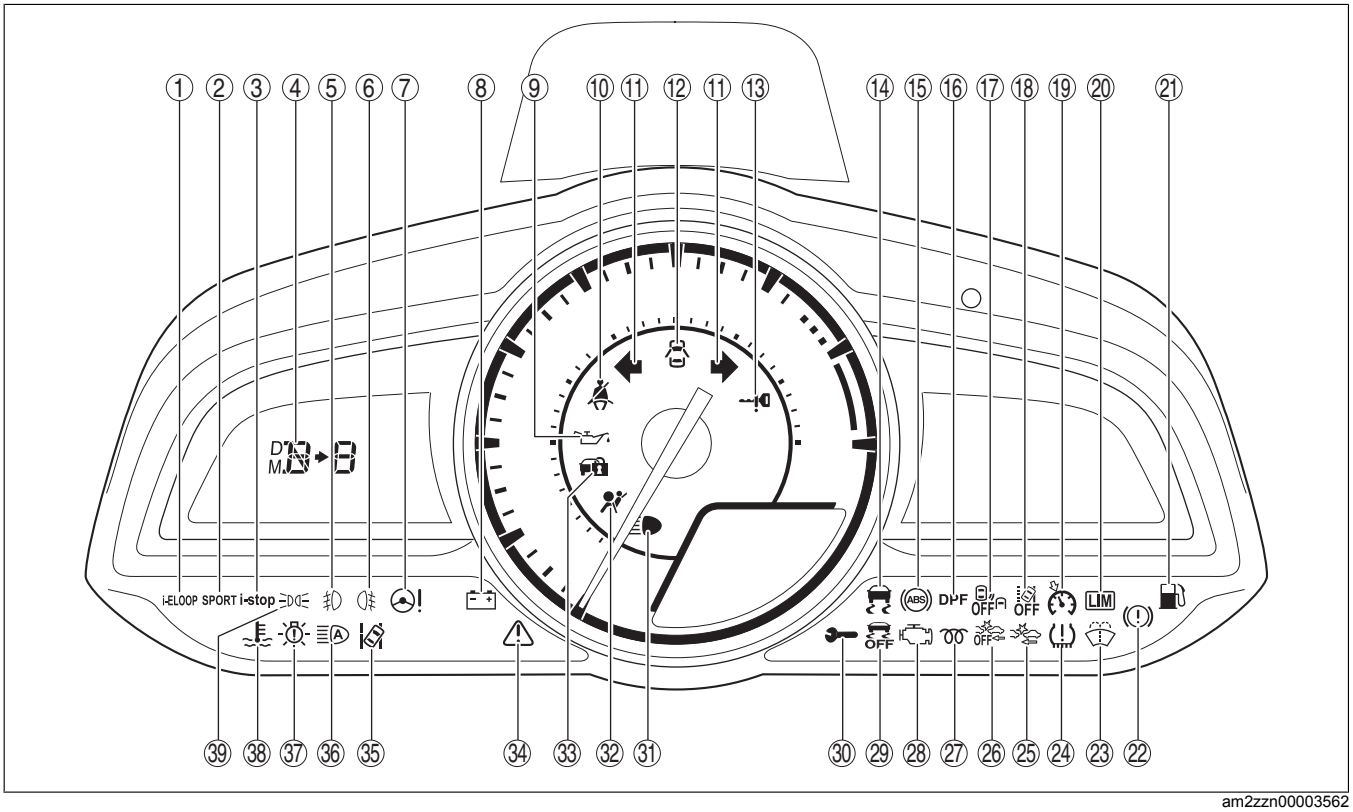

am2zzn00003562

X: Applicable
—: Not applicable

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
1	i-ELOOP	i-ELOOP indicator light (green)/i-ELOOP warning light (amber)	—	With i-ELOOP	—	(See i-ELOOP INDICATOR LIGHT (GREEN) [i-ELOOP].) (See i-ELOOP WARNING LIGHT (AMBER) [i-ELOOP].)
2	SPORT	Select mode indicator light	—	SKYACTIV-G 1.3, SKYACTIV-G 1.5	—	(See SELECT MODE INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	i-stop	i-stop warning light (amber)/i-stop indicator light (green)	×	With i-stop system	×	(See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 1.5].)
4		Gear shift indicator	—	—	—	(See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)
5		Fog light indicator light	—	With front fog lights	—	(See FRONT FOG LIGHT INDICATOR LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
6		Rear fog light indicator light	—	With rear fog light	—	(See REAR FOG LIGHT INDICATOR LIGHT.)
7		Power steering malfunction indicator light	×	—	×	(See POWER STEERING MALFUNCTION INDICATOR LIGHT.)
8		Charging system warning light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-D 1.5].) (See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9		Engine oil warning light	×	—	×	(See ENGINE OIL WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL WARNING LIGHT [SKYACTIV-D 1.5].)
10		Seat belt warning light	—	—	—	(See SEAT BELT WARNING LIGHT.)
11		Direction indicator/hazard warning indicator lights	—	—	—	(See DIRECTION INDICATOR/ HAZARD WARNING INDICATOR LIGHTS.)
12		Door-ajar warning light	—	—	—	(See DOOR-AJAR WARNING LIGHT.)
13		KEY warning light (red)/KEY indicator light (green)	×	—	×	(See KEY WARNING LIGHT (RED)/ KEY INDICATOR LIGHT (GREEN).)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
14		TCS/DSC indicator light	×	—	×	(See TCS/DSC INDICATOR LIGHT.)
15		ABS warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
16	DPF	Diesel particulate filter indicator light	×	SKYACTIV-D 1.5	×	(See DIESEL PARTICULATE FILTER INDICATOR LIGHT [SKYACTIV-D 1.5].)
17		Blind spot monitoring (BSM) OFF indicator light	—	With blind spot monitoring (BSM) system	×	(See BLIND SPOT MONITORING (BSM) OFF INDICATOR LIGHT.)
18		LDWS OFF indicator light	—	With lane departure warning system (LDWS)	×	(See LDWS OFF INDICATOR LIGHT.)
19		Cruise main indicator light (amber)/ cruise set indicator light (green)	—	With cruise control system	—	(See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].)


No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
20		Adjustable speed limiter main indicator light (amber)/adjustable speed limiter set indicator light (green)	—	With adjustable speed limiter	—	(See ADJUSTABLE SPEED LIMITER MAIN INDICATOR LIGHT (AMBER), ADJUSTABLE SPEED LIMITER SET INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ADJUSTABLE SPEED LIMITER MAIN INDICATOR LIGHT (AMBER), ADJUSTABLE SPEED LIMITER SET INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].)
21		Low fuel warning light	×	—	—	(See LOW FUEL WARNING LIGHT.)
22		Brake system warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
23		Low washer fluid level warning light	×	With washer fluid-level sensor	—	(See WASHER FLUID LEVEL WARNING SYSTEM.)
24		Tire pressure monitoring system warning light	×	With TPMS	×	(See TIRE PRESSURE MONITORING SYSTEM WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
25		Smart city brake support (SCBS) indicator light (red)/smart city brake support (SCBS) warning light (amber)	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) INDICATOR LIGHT/SMART CITY BRAKE SUPPORT (SCBS) WARNING LIGHT.)
26		Smart city brake support (SCBS) OFF indicator light	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) OFF SWITCH, SMART CITY BRAKE SUPPORT (SCBS) OFF INDICATOR LIGHT.)
27		Glow indicator light	×	SKYACTIV-D 1.5	×	(See GLOW INDICATOR LIGHT [SKYACTIV-D 1.5].)
28		Check engine light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-D 1.5].) (See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
29		DSC OFF indicator light	—	—	×	(See DSC OFF SWITCH, DSC OFF INDICATOR LIGHT.)
30		Wrench indicator light	—	—	×	(See WRENCH INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See WRENCH INDICATOR LIGHT [SKYACTIV-D 1.5].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
31		Headlight high-beam indicator light	—	—	—	(See HEADLIGHT HIGH-BEAM INDICATOR LIGHT.)
32		Air bag/seat belt pretensioner system warning light	×	—	×	(See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [STANDARD DEPLOYMENT CONTROL SYSTEM].)
33		Security indicator light	—	—	×	(See SECURITY INDICATOR LIGHT.)
34		Master warning light	×	—	×	(See MASTER WARNING LIGHT.)
35		LDWS warning light	×	With lane departure warning system (LDWS)	×	(See LDWS WARNING LIGHT.)
36		HBC indicator light (green)/HBC warning light (amber)	×	With high beam control (HBC) system	×	(See HBC INDICATOR LIGHT (GREEN)/HBC WARNING LIGHT (AMBER).)
37		LED headlight warning light	—	With front combination light (LED type)	×	(See LED HEADLIGHT WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
38		Low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red)	×	—	×	(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/ HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)
39		Lights-on indicator light	—	—	—	(See LIGHTS-ON INDICATOR LIGHT.)

Analog speedometer type (Type A)

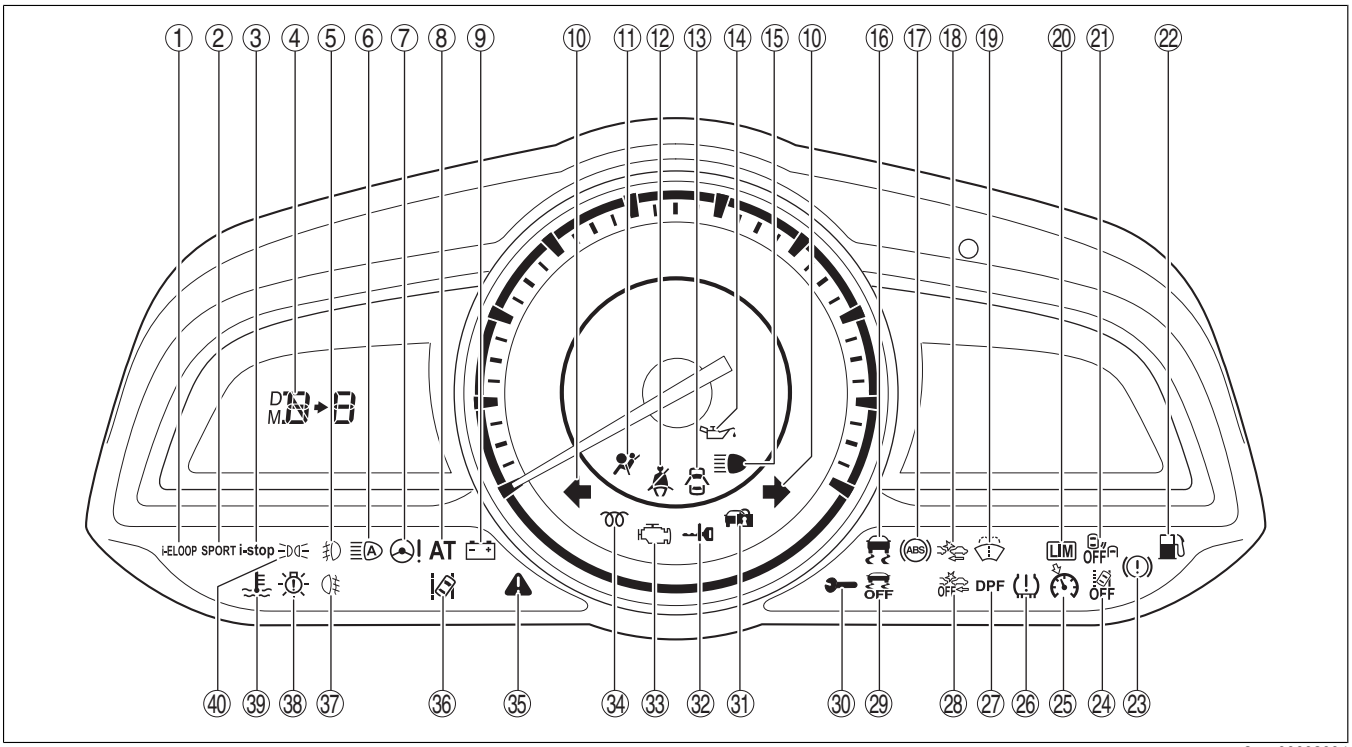

am2zzn00002994

X: Applicable
—: Not applicable

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
1	i-ELOOP	i-ELOOP indicator light (green)/i-ELOOP warning light (amber)	—	With i-ELOOP	—	(See i-ELOOP INDICATOR LIGHT (GREEN) [i-ELOOP].) (See i-ELOOP WARNING LIGHT (AMBER) [i-ELOOP].)
2	SPORT	Select mode indicator light	—	SKYACTIV-G 1.3, SKYACTIV-G 1.5 (MTX)	—	(See SELECT MODE INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	i-stop	i-stop warning light (amber)/i-stop indicator light (green)	×	With i-stop system	×	(See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 1.5].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
4		Shift position indicator/gear position indicator/gear shift indicator	—	—	—	(See SHIFT POSITION INDICATION [CW6A-EL].) (See SHIFT POSITION INDICATION [EW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [EW6A-EL].) (See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)
5		Fog light indicator light	—	With front fog lights	—	(See FRONT FOG LIGHT INDICATOR LIGHT.)
6		HBC indicator light (green)/HBC warning light (amber)	×	With high beam control (HBC) system	×	(See HBC INDICATOR LIGHT (GREEN)/HBC WARNING LIGHT (AMBER).)
7		Power steering malfunction indicator light	×	—	×	(See POWER STEERING MALFUNCTION INDICATOR LIGHT.)
8	AT	Automatic transaxle warning light	×	ATX	×	(See AUTOMATIC TRANSAXLE WARNING LIGHT [CW6A-EL].) (See AUTOMATIC TRANSAXLE WARNING LIGHT [EW6A-EL].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
9		Charging system warning light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-D 1.5].) (See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10		Direction indicator/hazard warning indicator lights	—	—	—	(See DIRECTION INDICATOR/ HAZARD WARNING INDICATOR LIGHTS.)
11		Air bag/seat belt pretensioner system warning light	×	—	×	(See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [STANDARD DEPLOYMENT CONTROL SYSTEM].)
12		Seat belt warning light	—	—	—	(See SEAT BELT WARNING LIGHT.)
13		Door-ajar warning light	—	—	—	(See DOOR-AJAR WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
14		Engine oil warning light	×	—	×	(See ENGINE OIL WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL WARNING LIGHT [SKYACTIV-D 1.5].)
15		Headlight high-beam indicator light	—	—	—	(See HEADLIGHT HIGH-BEAM INDICATOR LIGHT.)
16		TCS/DSC indicator light	×	—	×	(See TCS/DSC INDICATOR LIGHT.)
17		ABS warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
18		Smart city brake support (SCBS) indicator light (red)/smart city brake support (SCBS) warning light (amber)	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) INDICATOR LIGHT/SMART CITY BRAKE SUPPORT (SCBS) WARNING LIGHT.)
19		Low washer fluid level warning light	×	With washer fluid-level sensor	—	(See WASHER FLUID LEVEL WARNING SYSTEM.)


No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
20		Adjustable speed limiter main indicator light (amber)/adjustable speed limiter set indicator light (green)	—	With adjustable speed limiter	—	(See ADJUSTABLE SPEED LIMITER MAIN INDICATOR LIGHT (AMBER), ADJUSTABLE SPEED LIMITER SET INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ADJUSTABLE SPEED LIMITER MAIN INDICATOR LIGHT (AMBER), ADJUSTABLE SPEED LIMITER SET INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].)
21		Blind spot monitoring (BSM) OFF indicator light	—	With blind spot monitoring (BSM) system	×	(See BLIND SPOT MONITORING (BSM) OFF INDICATOR LIGHT.)
22		Low fuel warning light	×	—	—	(See LOW FUEL WARNING LIGHT.)
23		Brake system warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
24		LDWS OFF indicator light	—	With lane departure warning system (LDWS)	×	(See LDWS OFF INDICATOR LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
25		Cruise main indicator light (amber)/ cruise set indicator light (green)	—	With cruise control system	—	(See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].)
26		Tire pressure monitoring system warning light	×	With TPMS	×	(See TIRE PRESSURE MONITORING SYSTEM WARNING LIGHT.)
27	DPF	Diesel particulate filter indicator light	×	SKYACTIV-D 1.5	×	(See DIESEL PARTICULATE FILTER INDICATOR LIGHT [SKYACTIV-D 1.5].)
28		Smart city brake support (SCBS) OFF indicator light	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) OFF SWITCH, SMART CITY BRAKE SUPPORT (SCBS) OFF INDICATOR LIGHT.)
29		DSC OFF indicator light	—	—	×	(See DSC OFF SWITCH, DSC OFF INDICATOR LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
30		Wrench indicator light	—	—	×	(See WRENCH INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See WRENCH INDICATOR LIGHT [SKYACTIV-D 1.5].)
31		Security indicator light	—	—	×	(See SECURITY INDICATOR LIGHT.)
32		KEY warning light (red)/KEY indicator light (green)	×	—	×	(See KEY WARNING LIGHT (RED)/ KEY INDICATOR LIGHT (GREEN).)
33		Check engine light	×	—	×	(See CHECK ENGINE LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHECK ENGINE LIGHT [SKYACTIV-D 1.5].)
34		Glow indicator light	×	SKYACTIV-D 1.5	×	(See GLOW INDICATOR LIGHT [SKYACTIV-D 1.5].)
35		Master warning light	×	—	×	(See MASTER WARNING LIGHT.)
36		LDWS warning light	×	With lane departure warning system (LDWS)	×	(See LDWS WARNING LIGHT.)
37		Rear fog light indicator light	—	With rear fog light	—	(See REAR FOG LIGHT INDICATOR LIGHT.)
38		LED headlight warning light	—	With front combination light (LED type)	×	(See LED HEADLIGHT WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
39		Low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red)	×	—	×	(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/ HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)
40		Lights-on indicator light	—	—	—	(See LIGHTS-ON INDICATOR LIGHT.)

Analog speedometer type (Type B)

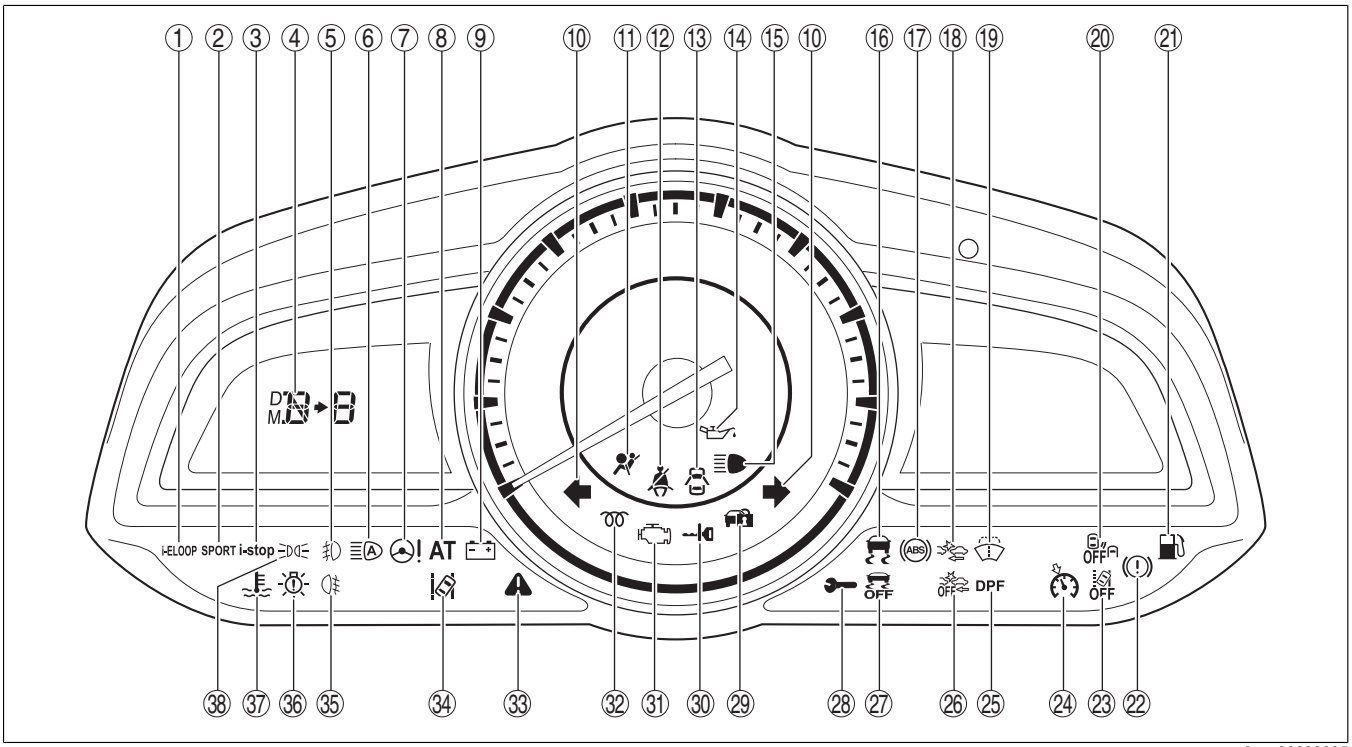

am2zzn00002995

X: Applicable
—: Not applicable

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
1	i-ELOOP	i-ELOOP indicator light (green)/i-ELOOP warning light (amber)	—	With i-ELOOP	—	(See i-ELOOP INDICATOR LIGHT (GREEN) [i-ELOOP].) (See i-ELOOP WARNING LIGHT (AMBER) [i-ELOOP].)
2	SPORT	Select mode indicator light	—	SKYACTIV-G 1.3, SKYACTIV-G 1.5 (MTX)	—	(See SELECT MODE INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	i-stop	i-stop warning light (amber)/i-stop indicator light (green)	×	With i-stop system	×	(See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 1.5].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
4		Shift position indicator/gear position indicator/gear shift indicator	—	—	—	(See SHIFT POSITION INDICATION [CW6A-EL].) (See SHIFT POSITION INDICATION [EW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [EW6A-EL].) (See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)
5		Fog light indicator light	—	With front fog lights	—	(See FRONT FOG LIGHT INDICATOR LIGHT.)
6		HBC indicator light (green)/HBC warning light (amber)	×	With high beam control (HBC) system	×	(See HBC INDICATOR LIGHT (GREEN)/HBC WARNING LIGHT (AMBER).)
7		Power steering malfunction indicator light	×	—	×	(See POWER STEERING MALFUNCTION INDICATOR LIGHT.)
8	AT	Automatic transaxle warning light	×	ATX	×	(See AUTOMATIC TRANSAXLE WARNING LIGHT [CW6A-EL].) (See AUTOMATIC TRANSAXLE WARNING LIGHT [EW6A-EL].)


No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
9		Charging system warning light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-D 1.5].) (See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10		Direction indicator/hazard warning indicator lights	—	—	—	(See DIRECTION INDICATOR/ HAZARD WARNING INDICATOR LIGHTS.)
11		Air bag/seat belt pretensioner system warning light	×	—	×	(See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [STANDARD DEPLOYMENT CONTROL SYSTEM].)
12		Seat belt warning light	—	—	—	(See SEAT BELT WARNING LIGHT.)
13		Door-ajar warning light	—	—	—	(See DOOR-AJAR WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
14		Engine oil warning light	×	—	×	(See ENGINE OIL WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE OIL WARNING LIGHT [SKYACTIV-D 1.5].)
15		Headlight high-beam indicator light	—	—	—	(See HEADLIGHT HIGH-BEAM INDICATOR LIGHT.)
16		TCS/DSC indicator light	×	—	×	(See TCS/DSC INDICATOR LIGHT.)
17		ABS warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
18		Smart city brake support (SCBS) indicator light (red)/smart city brake support (SCBS) warning light (amber)	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) INDICATOR LIGHT/SMART CITY BRAKE SUPPORT (SCBS) WARNING LIGHT.)
19		Low washer fluid level warning light	×	With washer fluid-level sensor	—	(See WASHER FLUID LEVEL WARNING SYSTEM.)
20		Blind spot monitoring (BSM) OFF indicator light	—	With blind spot monitoring (BSM) system	×	(See BLIND SPOT MONITORING (BSM) OFF INDICATOR LIGHT.)
21		Low fuel warning light	×	—	—	(See LOW FUEL WARNING LIGHT.)
22		Brake system warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
23		LDWS OFF indicator light	—	With lane departure warning system (LDWS)	×	(See LDWS OFF INDICATOR LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
24		Cruise main indicator light (amber)/ cruise set indicator light (green)	—	With cruise control system	—	(See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRUISE MAIN INDICATOR LIGHT (AMBER), CRUISE SET INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5].)
25	DPF	Diesel particulate filter indicator light	×	SKYACTIV-D 1.5	×	(See DIESEL PARTICULATE FILTER INDICATOR LIGHT [SKYACTIV-D 1.5].)
26		Smart city brake support (SCBS) OFF indicator light	—	With smart city brake support (SCBS)	×	(See SMART CITY BRAKE SUPPORT (SCBS) OFF SWITCH, SMART CITY BRAKE SUPPORT (SCBS) OFF INDICATOR LIGHT.)
27		DSC OFF indicator light	—	—	×	(See DSC OFF SWITCH, DSC OFF INDICATOR LIGHT.)
28		Wrench indicator light	—	—	×	(See WRENCH INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See WRENCH INDICATOR LIGHT [SKYACTIV-D 1.5].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
29		Security indicator light	—	—	×	(See SECURITY INDICATOR LIGHT.)
30		KEY warning light (red)/KEY indicator light (green)	×	—	×	(See KEY WARNING LIGHT (RED)/ KEY INDICATOR LIGHT (GREEN).)
31		Check engine light	×	—	×	(See CHECK ENGINE LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CHECK ENGINE LIGHT [SKYACTIV-D 1.5].)
32		Glow indicator light	×	SKYACTIV-D 1.5	×	(See GLOW INDICATOR LIGHT [SKYACTIV-D 1.5].)
33		Master warning light	×	—	×	(See MASTER WARNING LIGHT.)
34		LDWS warning light	×	With lane departure warning system (LDWS)	×	(See LDWS WARNING LIGHT.)
35		Rear fog light indicator light	—	With rear fog light	—	(See REAR FOG LIGHT INDICATOR LIGHT.)
36		LED headlight warning light	—	With front combination light (LED type)	×	(See LED HEADLIGHT WARNING LIGHT.)
37		Low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red)	×	—	×	(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/ HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)
38		Lights-on indicator light	—	—	—	(See LIGHTS-ON INDICATOR LIGHT.)

Analog speedometer type (Type C)

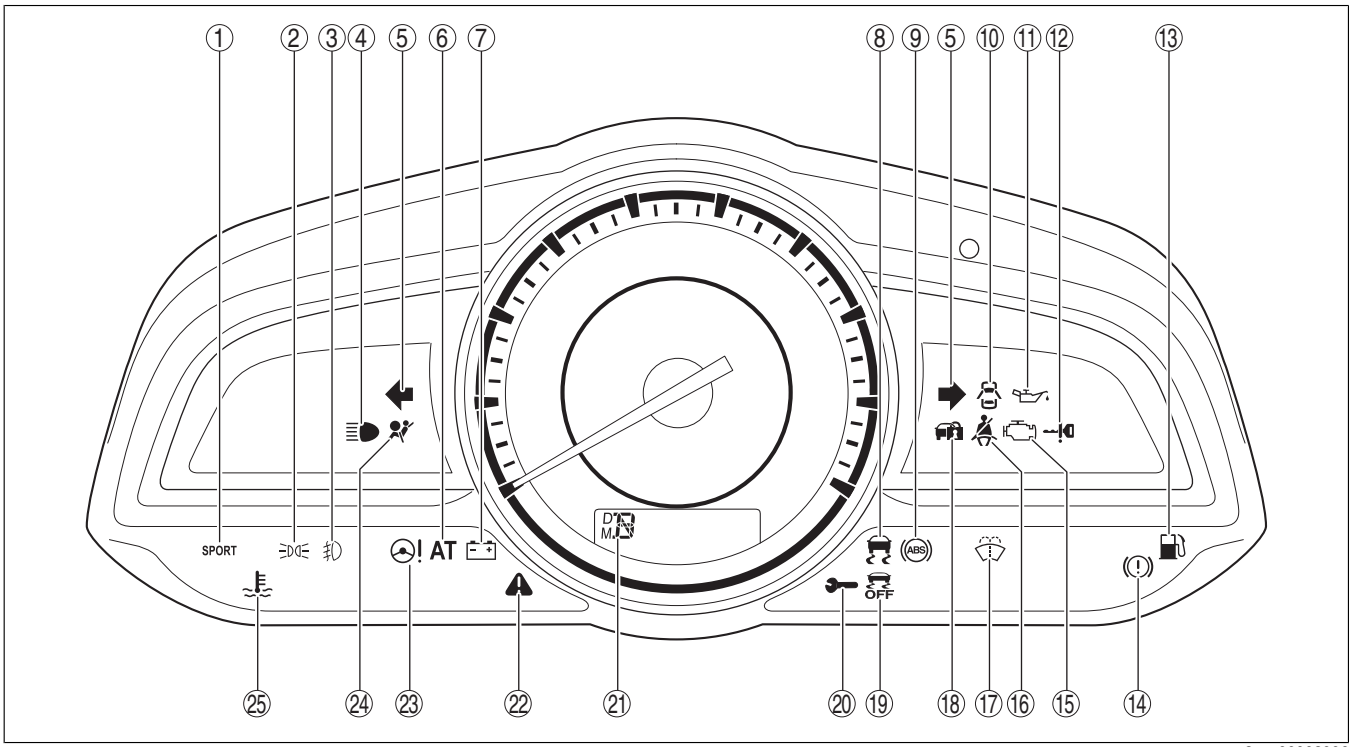

am2zzn00002996

X: Applicable
—: Not applicable

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
1	SPORT	Select mode indicator light	—	MTX	—	(See SELECT MODE INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2		Lights-on indicator light	—	—	—	(See LIGHTS-ON INDICATOR LIGHT.)
3		Fog light indicator light	—	With front fog lights	—	(See FRONT FOG LIGHT INDICATOR LIGHT.)
4		Headlight high-beam indicator light	—	—	—	(See HEADLIGHT HIGH-BEAM INDICATOR LIGHT.)
5		Direction indicator/hazard warning indicator lights	—	—	—	(See DIRECTION INDICATOR/ HAZARD WARNING INDICATOR LIGHTS.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
6	AT	Automatic transaxle warning light	×	ATX	×	(See AUTOMATIC TRANSAXLE WARNING LIGHT [CW6A-EL].)
7		Charging system warning light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8		TCS/DSC indicator light	×	—	×	(See TCS/DSC INDICATOR LIGHT.)
9		ABS warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
10		Door-ajar warning light	—	—	—	(See DOOR-AJAR WARNING LIGHT.)
11		Engine oil warning light	×	—	×	(See ENGINE OIL WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
12		KEY warning light (red)/KEY indicator light (green)	×	—	×	(See KEY WARNING LIGHT (RED)/ KEY INDICATOR LIGHT (GREEN).)
13		Low fuel warning light	×	—	—	(See LOW FUEL WARNING LIGHT.)
14		Brake system warning light	×	—	×	(See BRAKE SYSTEM/ABS WARNING LIGHT.)
15		Check engine light	×	—	×	(See CHARGING SYSTEM WARNING LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
16		Seat belt warning light	—	—	—	(See SEAT BELT WARNING LIGHT.)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
17		Low washer fluid level warning light	×	With washer fluid-level sensor	—	(See WASHER FLUID LEVEL WARNING SYSTEM.)
18		Security indicator light	—	—	×	(See SECURITY INDICATOR LIGHT.)
19		DSC OFF indicator light	—	—	×	(See DSC OFF SWITCH, DSC OFF INDICATOR LIGHT.)
20		Wrench indicator light	—	—	×	(See WRENCH INDICATOR LIGHT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
21		Shift position indicator/gear position indicator/gear shift indicator	—	—	—	(See SHIFT POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].)
22		Master warning light	×	—	×	(See MASTER WARNING LIGHT.)
23		Power steering malfunction indicator light	×	—	×	(See POWER STEERING MALFUNCTION INDICATOR LIGHT.)
24		Air bag/seat belt pretensioner system warning light	×	—	×	(See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG/ SEAT BELT PRE-TENSIONER SYSTEM WARNING LIGHT [STANDARD DEPLOYMENT CONTROL SYSTEM].)

No	Warning light/ Indicator light	Name	Message is displayed in center display when warning/ indicator light turns on/flashes	Comment	Turns on when IG-ON	Reference
25		Low engine coolant temperature indicator light (blue)/high engine coolant temperature warning light (red)	×	—	×	(See LOW ENGINE COOLANT TEMPERATURE INDICATOR LIGHT (BLUE)/ HIGH ENGINE COOLANT TEMPERATURE WARNING LIGHT (RED).)

Buzzer operation function

- The instrument cluster sounds the alarm using the buzzer built into the instrument cluster to notify the driver of the vehicle conditions.
- The alarm types are as follows: For details on each alarm, refer to each reference.

Name	Reference
Lights-on reminder warning alarm	(See LIGHTS-ON REMINDER WARNING ALARM.)
Seat belt warning alarm	(See SEAT BELT WARNING ALARM.)
Keyless warning alarm	(See KEYLESS WARNING ALARM.)
Air bag system warning alarm	(See AIR BAG SYSTEM WARNING ALARM [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM WARNING ALARM [STANDARD DEPLOYMENT CONTROL SYSTEM].)
LDWS warning alarm	(See LDWS WARNING ALARM.)
i-stop indicator alarm	(See i-stop INDICATOR ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop INDICATOR ALARM [SKYACTIV-D 1.5].)
i-stop warning alarm	(See i-stop WARNING ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop WARNING ALARM [SKYACTIV-D 1.5].)
Smart city brake support (SCBS) warning alarm	(See SMART CITY BRAKE SUPPORT (SCBS).)
Power steering warning buzzer	(See POWER STEERING WARNING BUZZER.)
Panel light control indicator alarm	(See PANEL LIGHT CONTROL INDICATOR ALARM.)
Turn and hazard indicator alarm	(See TURN AND HAZARD INDICATOR ALARM.)
120 km/h warning alarm	(See 120 km/h WARNING ALARM.)
Tire pressure monitoring system warning alarm	(See TIRE PRESSURE MONITORING SYSTEM WARNING ALARM.)
Blind spot monitoring (BSM) warning buzzer	(See BLIND SPOT MONITORING (BSM) WARNING BUZZER.)
Adjustable speed limiter warning alarm	(See ADJUSTABLE SPEED LIMITER WARNING ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ADJUSTABLE SPEED LIMITER WARNING ALARM [SKYACTIV-D 1.5].)
Vehicle speed alarm	(See TRIP COMPUTER INFORMATION SYSTEM.)
Over rev. warning alarm	(See OVER REV. WARNING ALARM [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See OVER REV. WARNING ALARM [SKYACTIV-D 1.5].)

- If several alarm request signals are received simultaneously, the alarms sound according to the order of precedence in the following table.

With ignition switched off

Order of precedence	Name
1	Keyless warning alarm (pattern A, B)
2	Lights-on reminder warning alarm

Order of precedence	Name
3	Keyless warning alarm (pattern C)
4	Turn and hazard indicator alarm
5	Panel light control indicator alarm

With ignition switched ON (engine off or on)

Order of precedence	Name
1	Blind spot monitoring (BSM) warning buzzer (Rear cross traffic alert (RCTA) function)
2	120 km/h warning alarm
3	Over rev. warning alarm
4	i-stop warning alarm
5	Seat belt warning alarm (driver/passenger)
6	Seat belt warning alarm (rear)
7	Tire pressure monitoring system warning alarm
8	Smart city brake support (SCBS) warning alarm
9	Adjustable speed limiter warning alarm
10	Blind spot monitoring (BSM) warning buzzer (Blind spot monitoring (BSM) function)
11	LDWS warning alarm
12	Keyless warning alarm
13	Air bag system warning alarm
14	Power steering warning buzzer
15	Ambient temperature warning alarm
16	Vehicle speed alarm
17	Turn and hazard indicator alarm
18	Panel light control indicator alarm

Panel light control function

- The instrument cluster changes the brightness of the panel light based on the panel light control switch rotation signal and TNS signal sent via CAN communication from the BCM. For details on the panel light, refer to [PANEL LIGHT]. (See PANEL LIGHT.)

Vehicle specification information transmission function

- The instrument cluster sends vehicle specification information stored during configuration to the following modules via CAN communication. The following modules perform configuration automatically by reading the vehicle specification information from the instrument cluster.
  - — PCM
  - — TCM (ATX)
  - — DSC HU/CM
  - — EPS control module
  - — Start stop unit
  - — Auto leveling control module (With headlight auto leveling system)
  - — Laser sensor (With smart city brake support (SCBS))
  - — Connectivity master unit (CMU) (With center display)
  - — BCM
  - — Climate control unit (With full-auto air conditioner)
  - — Blind spot monitoring (BSM) control module (With blind spot monitoring (BSM) system)
  - — SAS control module
  - — Parking sensor control module (With parking sensor system)

Battery discharge suppression function

Note

- This function is for suppressing battery discharge during vehicle manufacture and shipment. However, if the ROOM fuse is removed from a vehicle which has low total travel distance, the function may operate in the market.

- The battery discharge suppression is a function in which the instrument cluster sends a battery discharge suppression signal to the following units based on the ROOM fuse condition and the total traveled distance, and suppresses battery discharge by restricting the operation of electric load for the following units.

Unit receiving battery discharge suppression signal	Control description
Start stop unit	When **25 min** have elapsed since the ignition was switched ACC or ON (engine off), the ignition is switched off. (On ATX model, only when the selector lever is in P position)


- The battery discharge suppression function operates when the total traveled distance is the threshold or less and the ROOM fuse has been removed.
- When the battery discharge suppression function is operated, the instrument cluster displays [tmSPt] in the odometer/tripmeter screen of the instrument cluster to indicate that the battery discharge suppression function is operating.
- The battery discharge suppression function is stopped under the following conditions.
  - — ROOM fuse is installed
  - — Engine is started
  - — Total traveled distance exceeds the threshold value

Manual air conditioner system control function


- The instrument cluster controls the manual air conditioner system based on each switch signal from the climate control unit. For details on the control, refer to [MANUAL AIR CONDITIONER SYSTEM]. (See MANUAL AIR CONDITIONER SYSTEM [MANUAL AIR CONDITIONER].)

Structural View


DIGITAL SPEEDOMETER TYPE

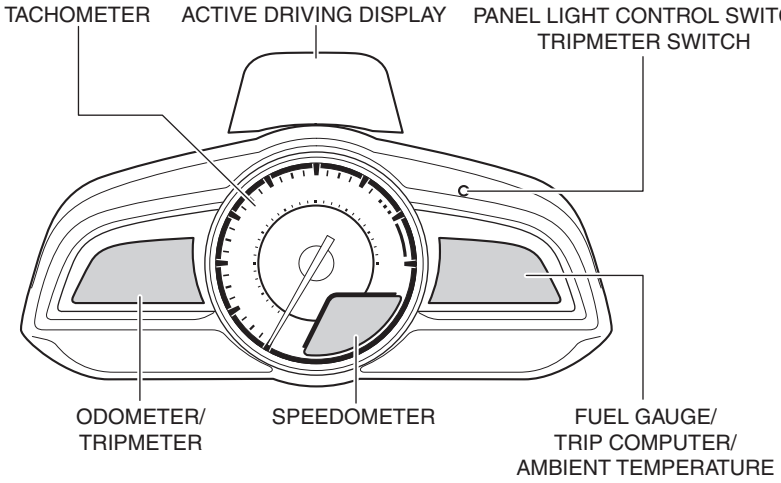


ANALOG SPEEDOMETER TYPE (TYPE A)

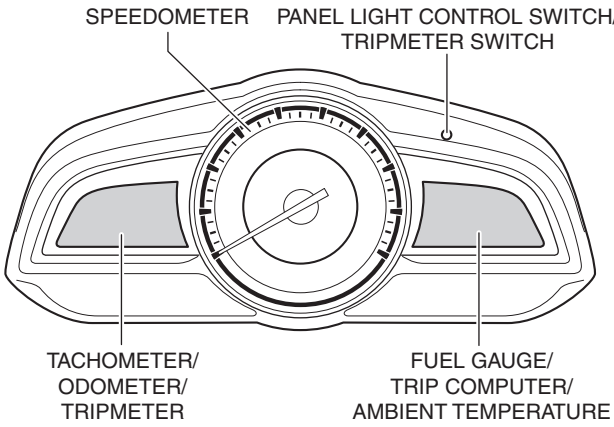

ANALOG SPEEDOMETER TYPE (TYPE B)

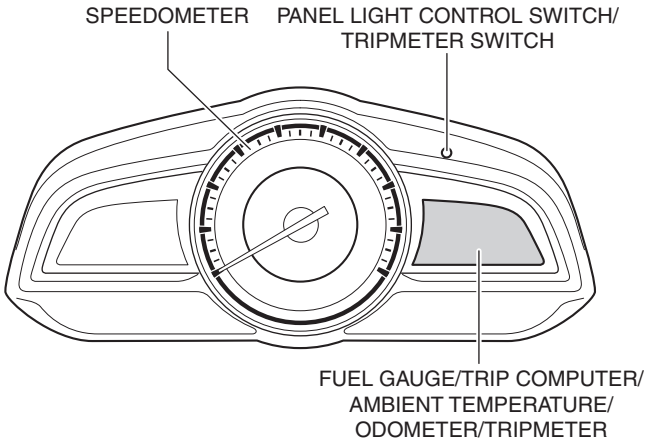


ANALOG SPEEDOMETER TYPE (TYPE C)

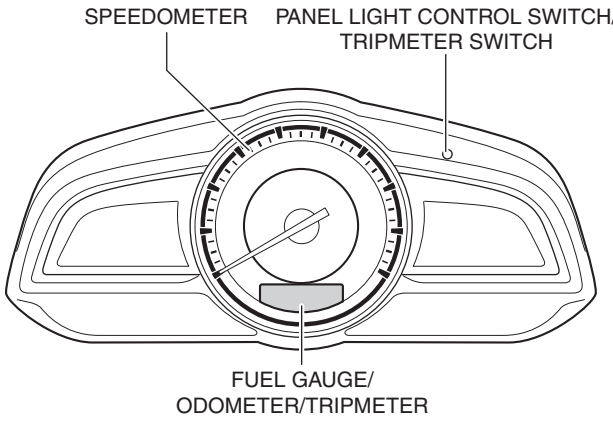


: LCD

am2zzn00002998


System Wiring Diagram

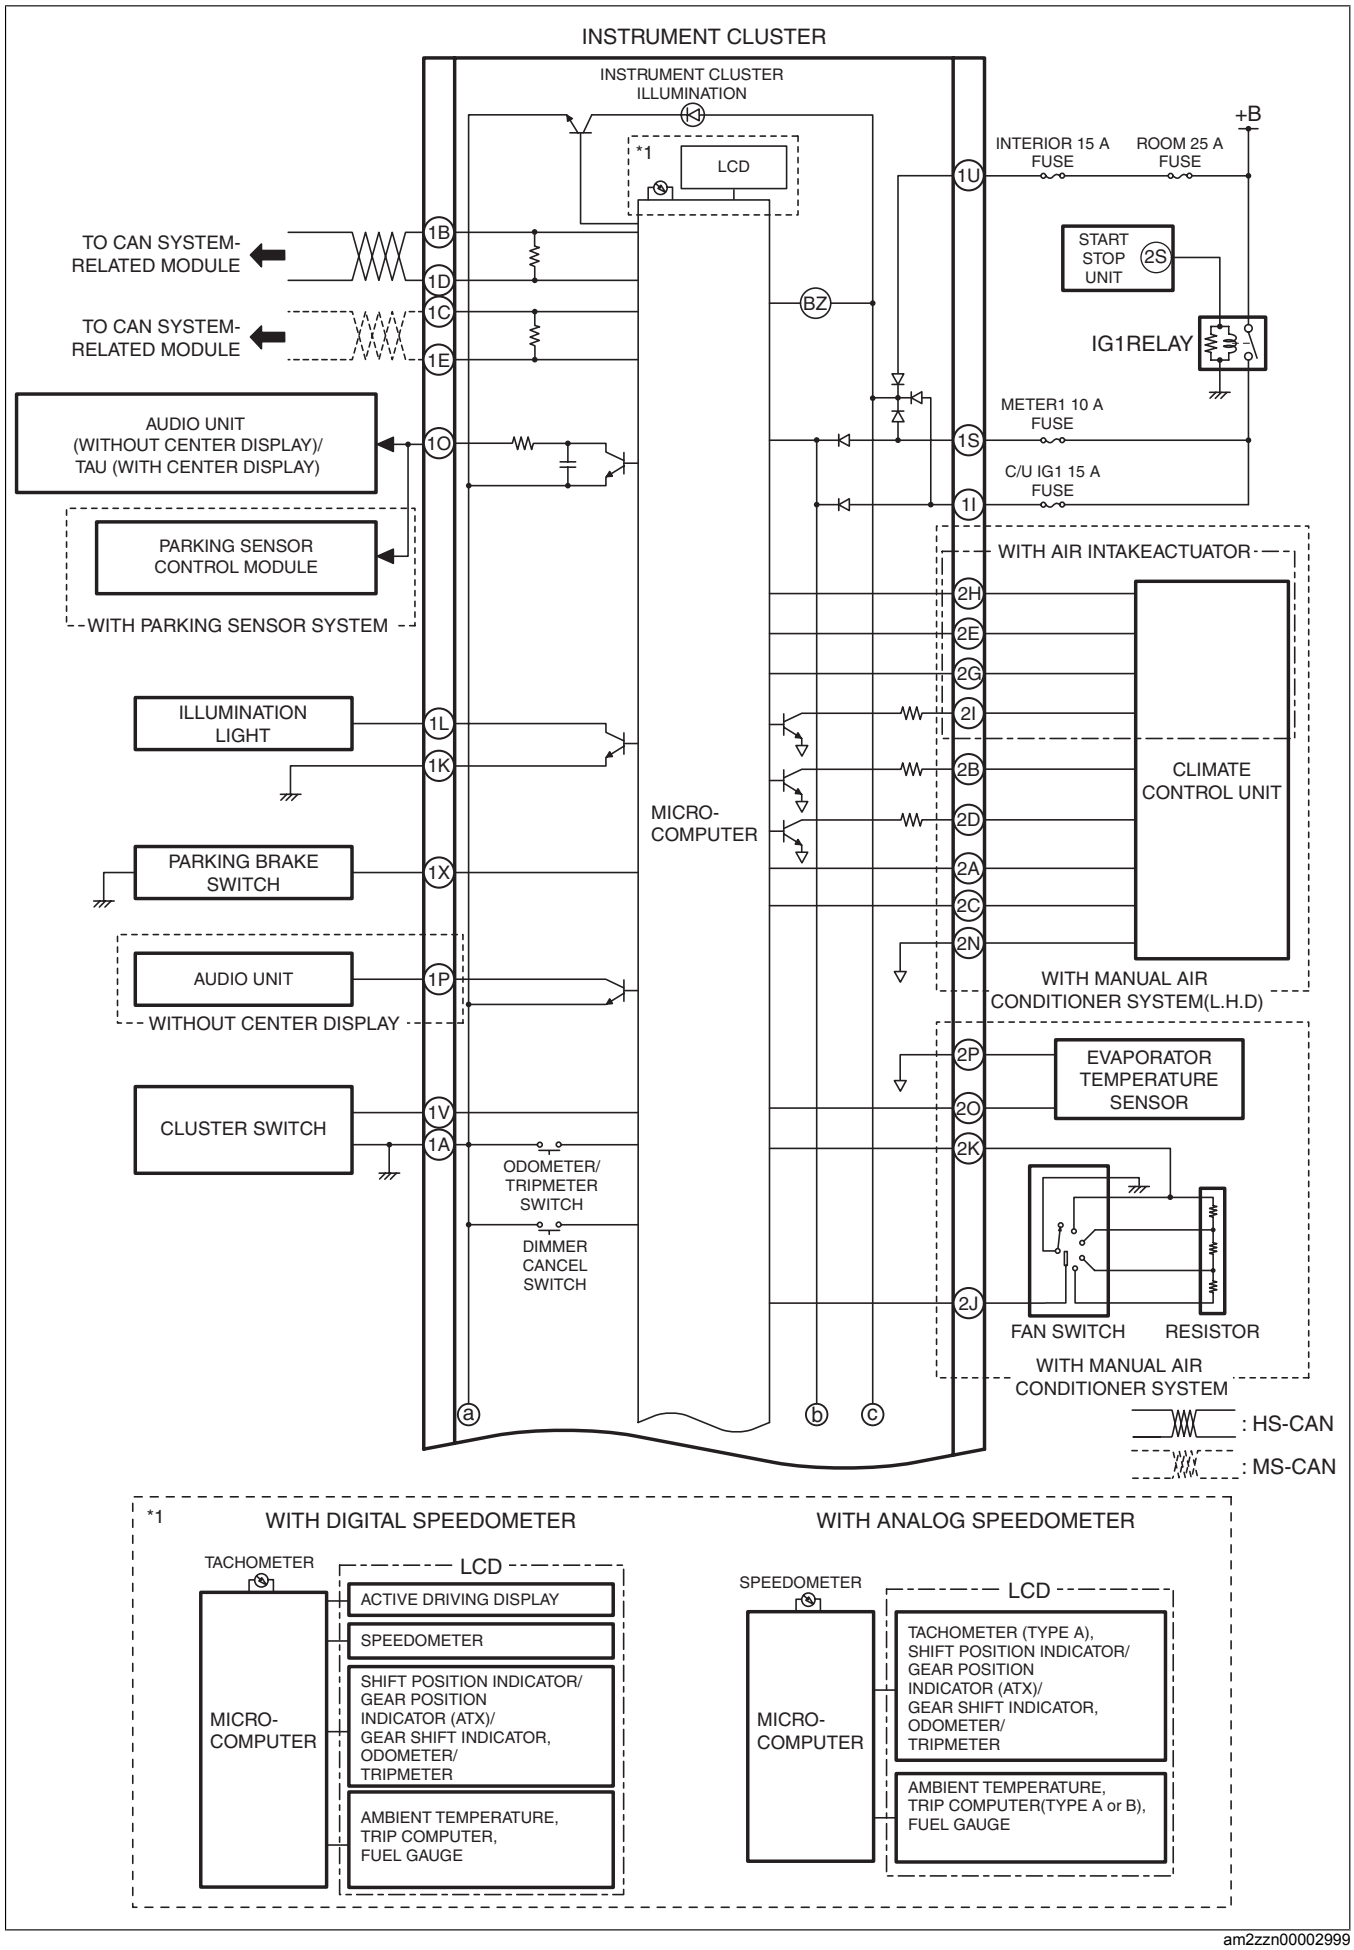


am2zzn00002999

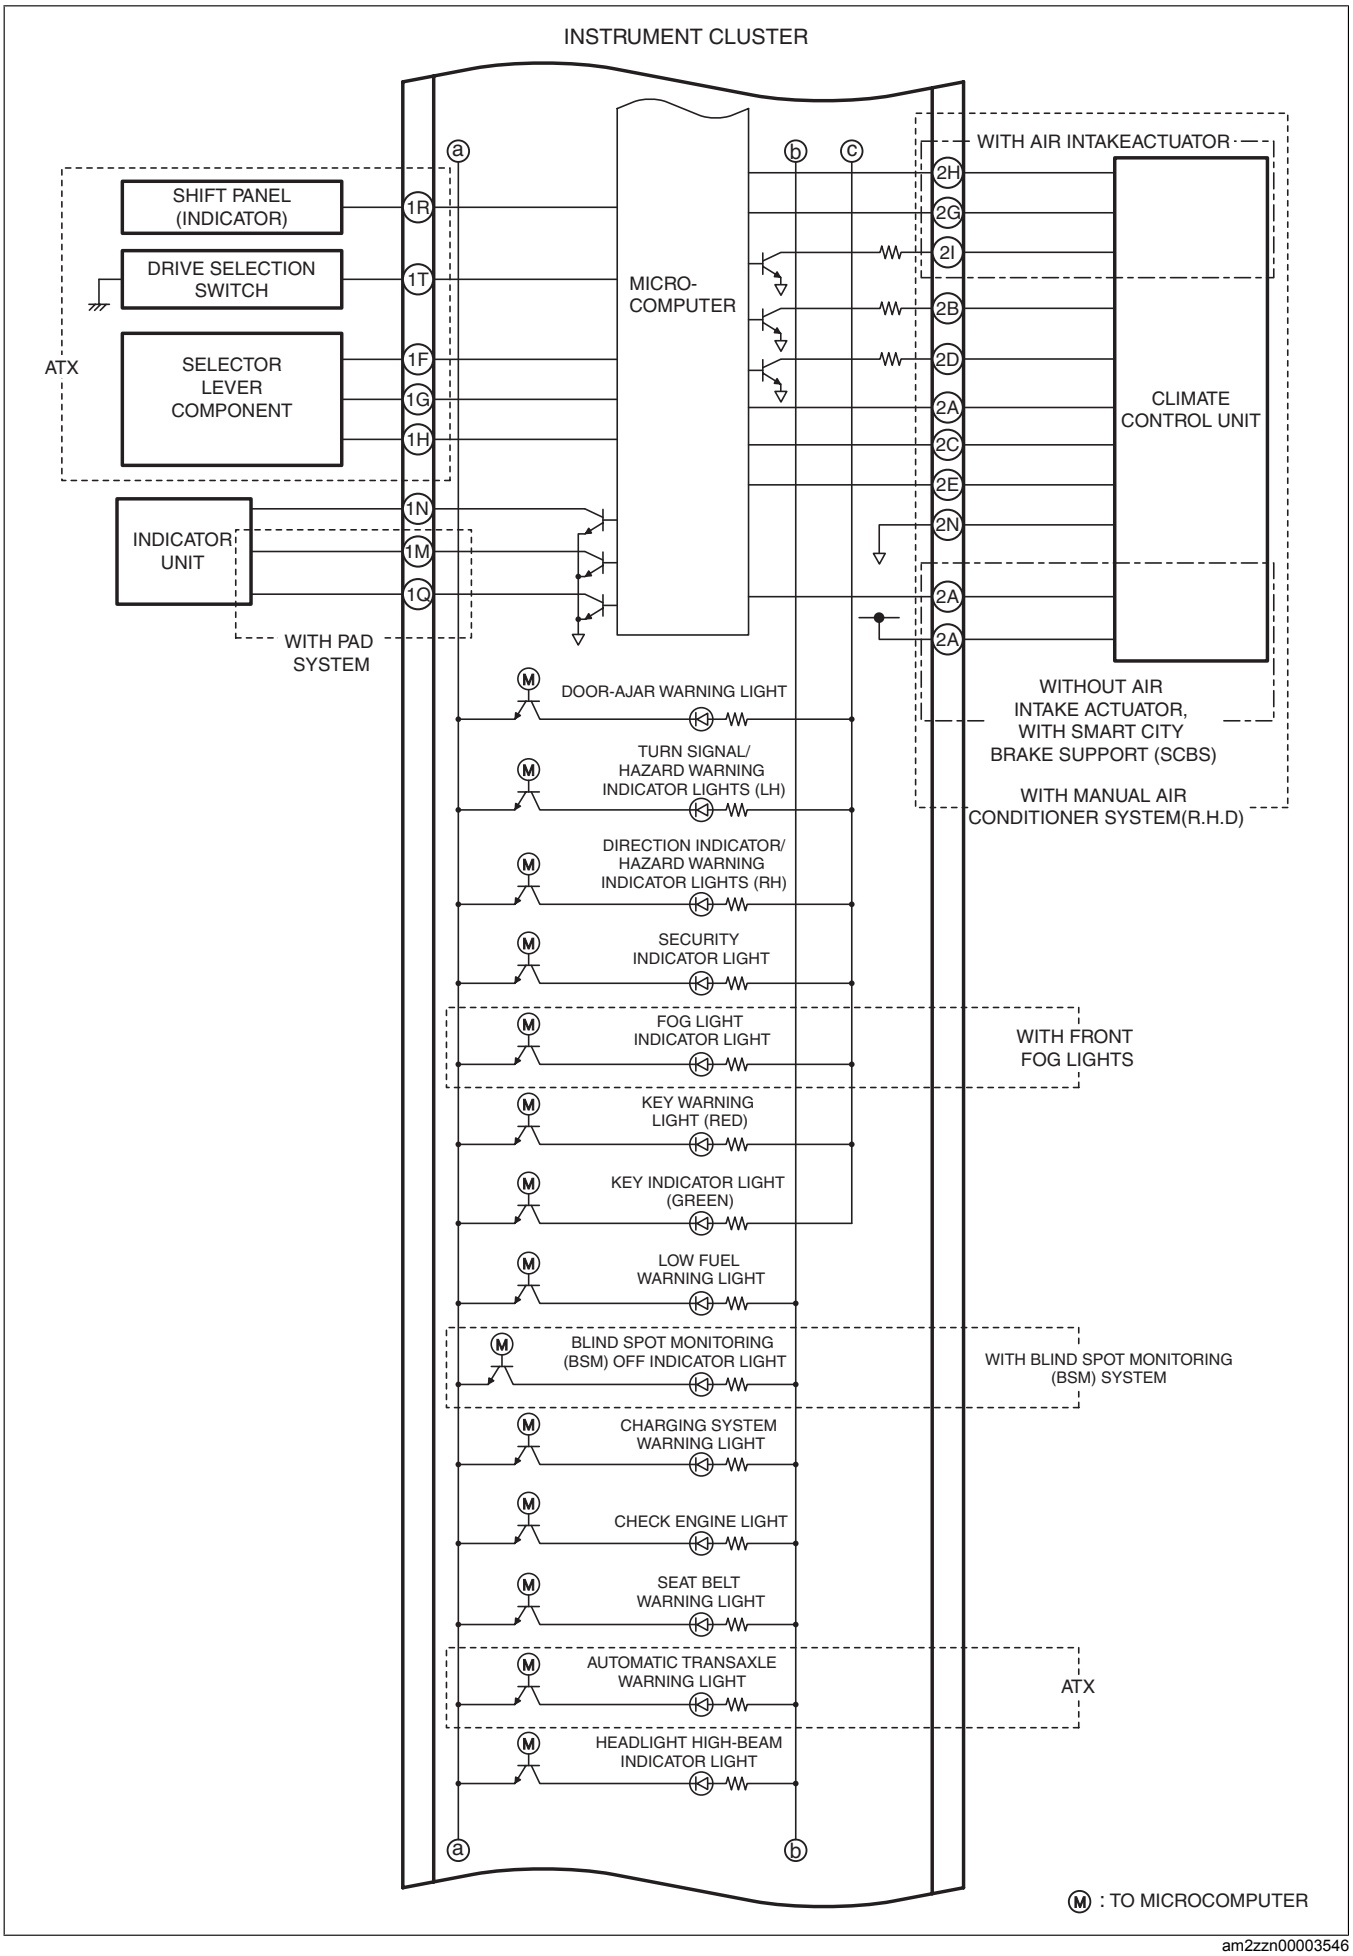

am2zzn00003546

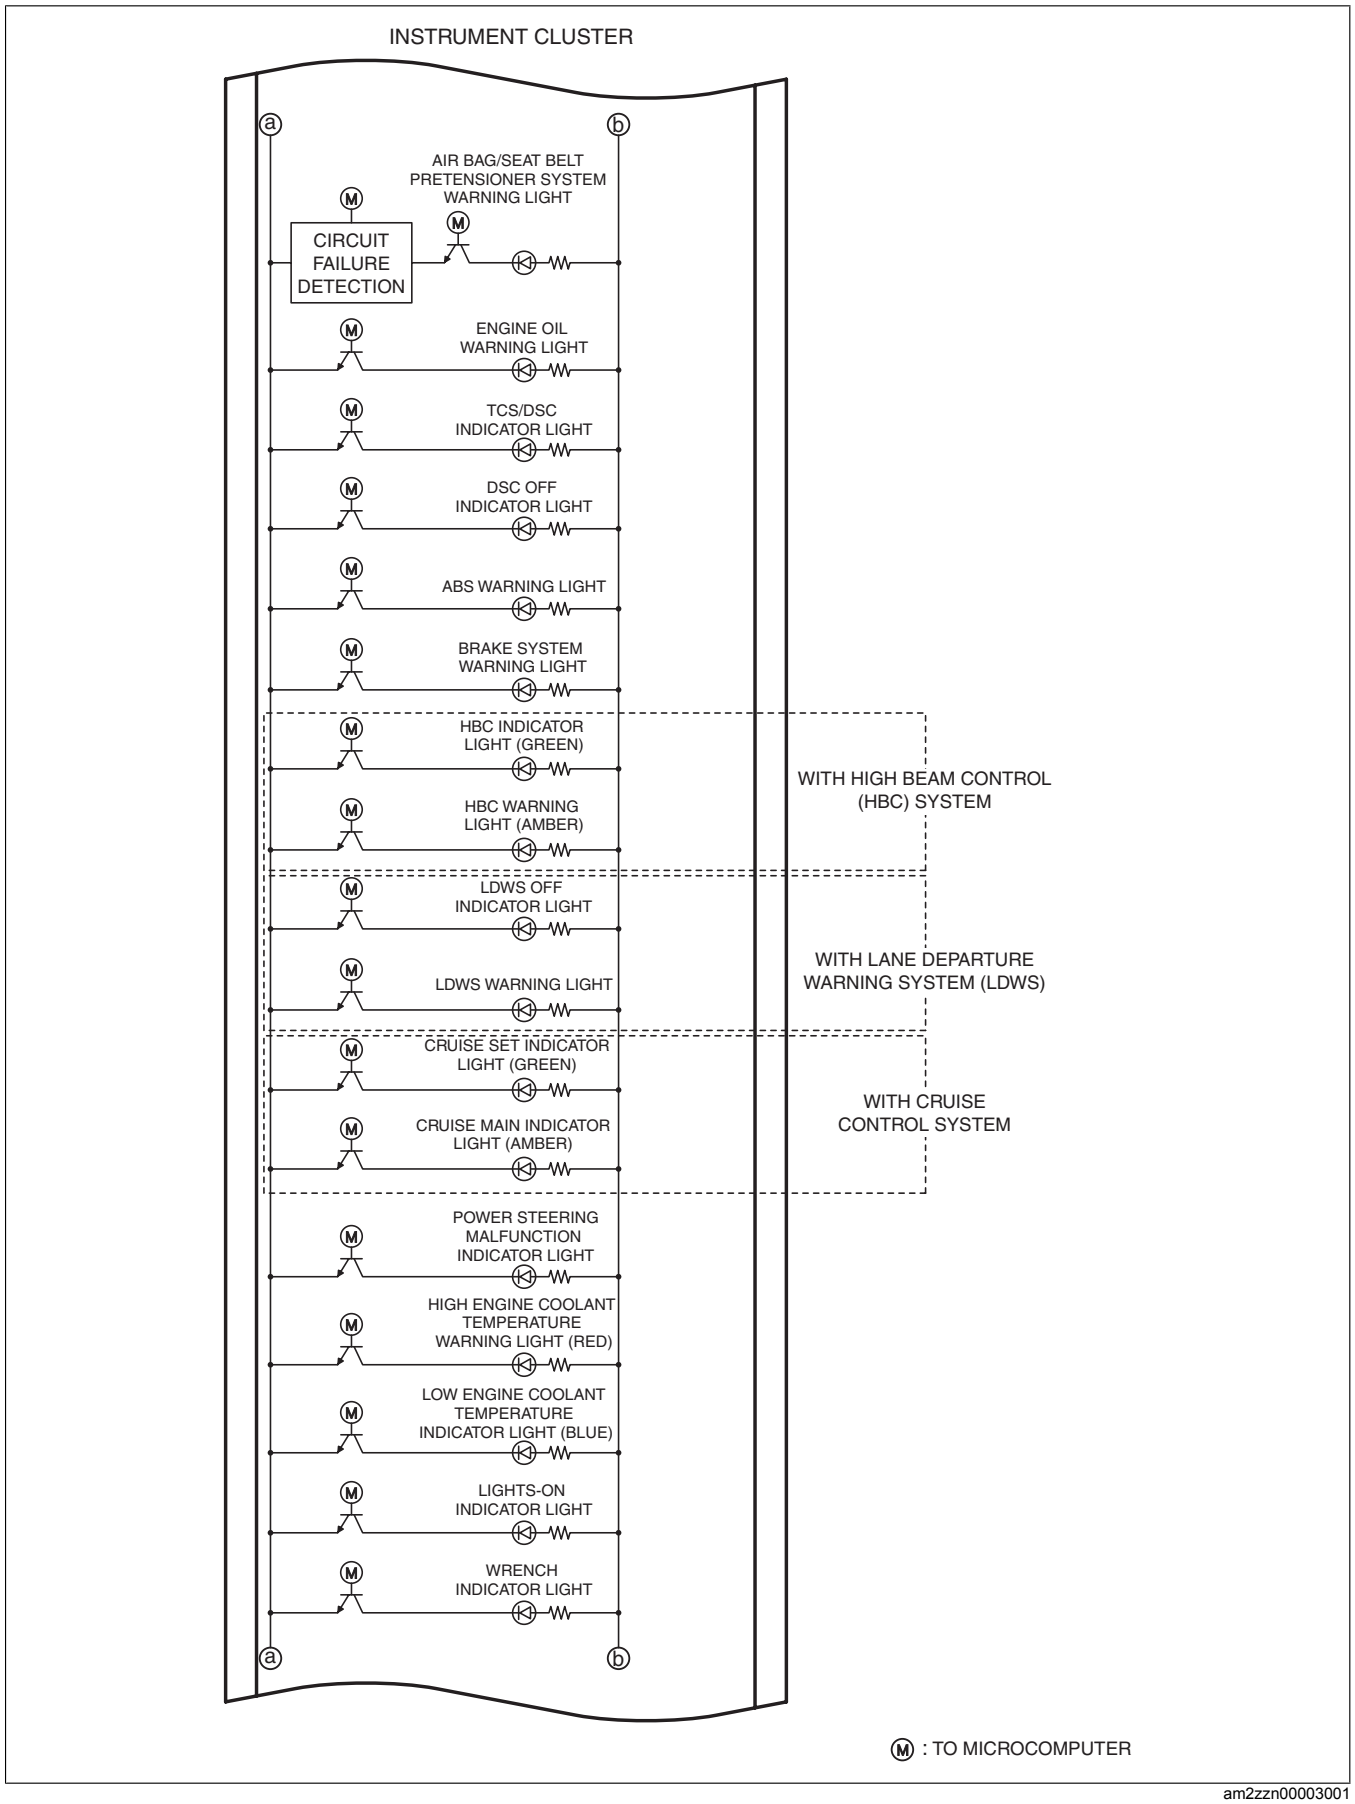

am2zzn00003001

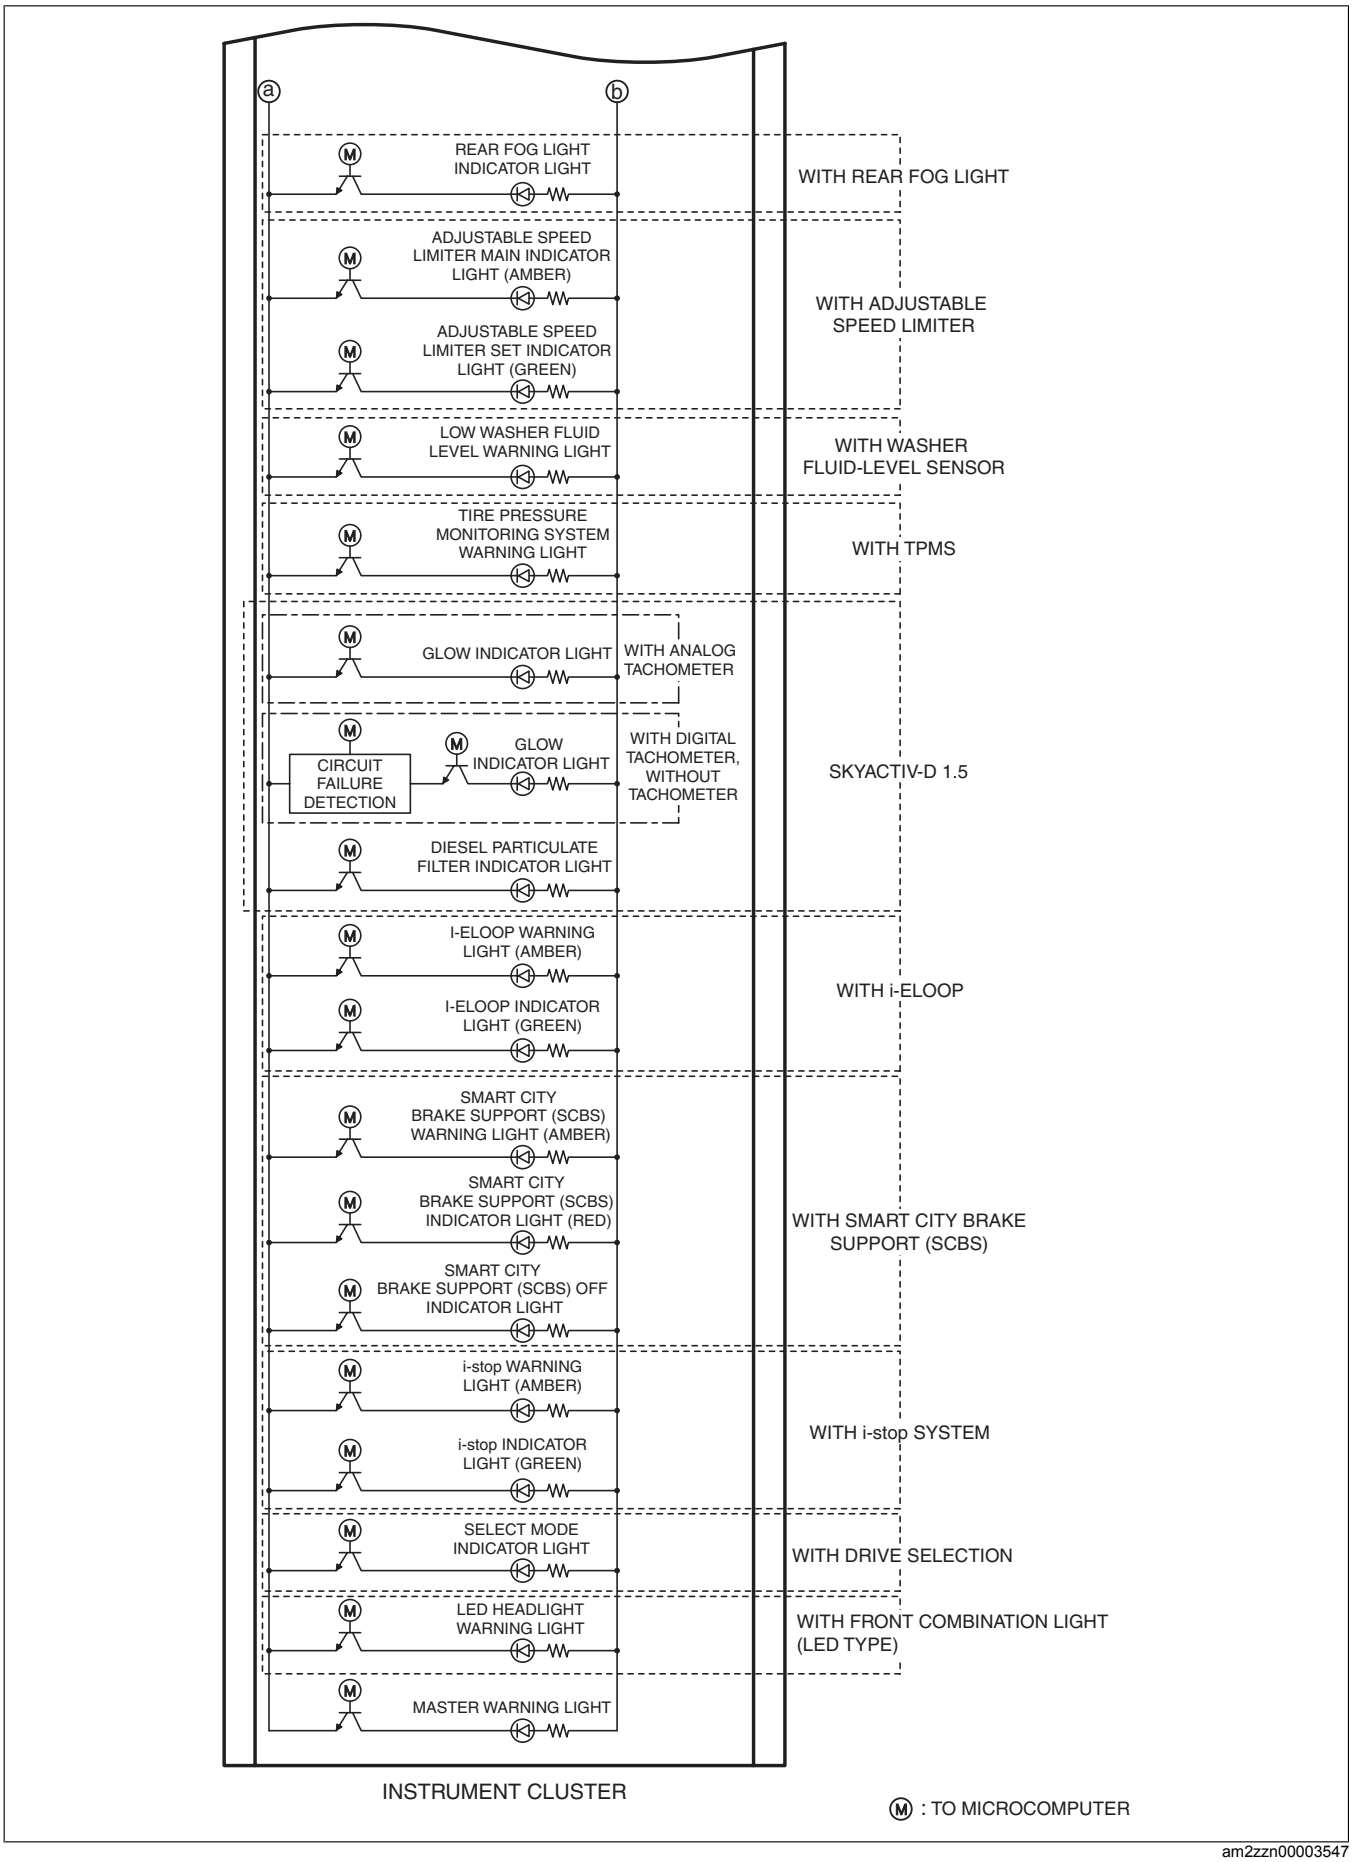

am2zzn00003547

Fail-safe

Speedometer

- If the instrument cluster cannot receive a CAN signal normally or detects a CPU malfunction inside the instrument cluster, 0 is displayed.

Tachometer

- If the instrument cluster cannot receive a CAN signal normally or detects a CPU malfunction inside the instrument cluster, 0 is displayed.

Fuel gauge

- If the instrument cluster cannot receive a CAN signal normally or detects a CPU malfunction inside the instrument cluster, the fuel gauge segments are turned off.

Odometer/tripmeter

- If the instrument cluster detects a CPU malfunction inside the instrument cluster, [— — — — — —] is displayed.

Indicator lights

- If the instrument cluster cannot receive a CAN signal normally, it turns the diesel particulate filter indicator light on.

Warning lights

- If the instrument cluster cannot receive a CAN signal normally, it turns the following warning lights on.
  - i-ELOOP warning light (amber)
  - Smart city brake support (SCBS) warning light (amber)
  - HBC warning light (amber)
  - Master warning light
  - LED headlight warning light
  - Check engine light
  - Brake system warning light
  - Engine oil warning light
  - KEY warning light (red)
  - LDWS warning light
  - Automatic transaxle warning light
  - ABS warning light
  - Power steering malfunction indicator light
  - Charging system warning light
  - Low fuel warning light
  - Tire pressure monitoring system warning light
  - Low washer fluid level warning light

Alarm

- If the instrument cluster cannot receive a CAN signal normally, it stops the alarm.

Panel light

- If the instrument cluster cannot receive a CAN signal normally, it turns the panel light on.

Trip computer

- If the instrument cluster cannot receive a CAN signal normally or detects a CPU malfunction inside the instrument cluster, [— — —] is displayed.

Ambient temperature display

- If the instrument cluster cannot receive a CAN signal normally or detects a CPU malfunction inside the instrument cluster, [— — —] is displayed.