
DOOR-AJAR WARNING LIGHT

id092200018700

Purpose
- The door-ajar warning light warns the driver that any door or the trunk lid (4SD)/liftgate (5HB) is open.

Function
- When the instrument cluster receives any of the following signals sent from the BCM via the CAN communication, it turns the door-ajar warning light on.
  - — Door latch switch on (door open) signal
  - — Trunk lid latch switch on (trunk lid open) signal (4SD)
  - — Liftgate latch switch on (liftgate open) signal (5HB)


Construction
- Turning on/off of the door-ajar warning light is controlled by the instrument cluster microcomputer based on the door latch switch on (door open) signal, trunk lid latch switch on (trunk lid open) signal (4SD), or liftgate latch switch on (liftgate open) signal (5HB) from the BCM.
- The door-ajar warning light is built into the instrument cluster.

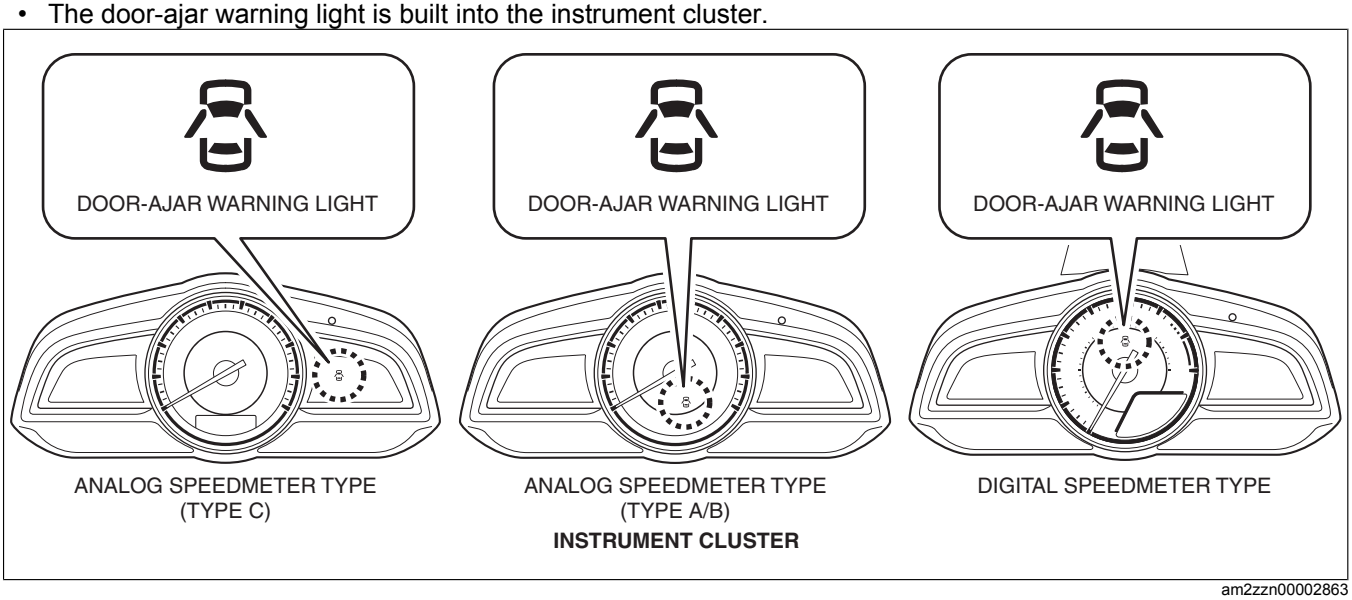

INSTRUMENT CLUSTER

am2zzn00002863

Operation
1. The instrument cluster receives (1) a door latch switch on (door open) signal, trunk lid latch switch on (trunk lid open) signal (4SD), or liftgate latch switch on (liftgate open) signal (5HB) from the BCM via CAN communication.
2. The instrument cluster turns the transistor on (2) based on each signal.
3. When the transistor turns on, a ground circuit with the door-ajar warning light is established and the door-ajar warning light turns on (3).

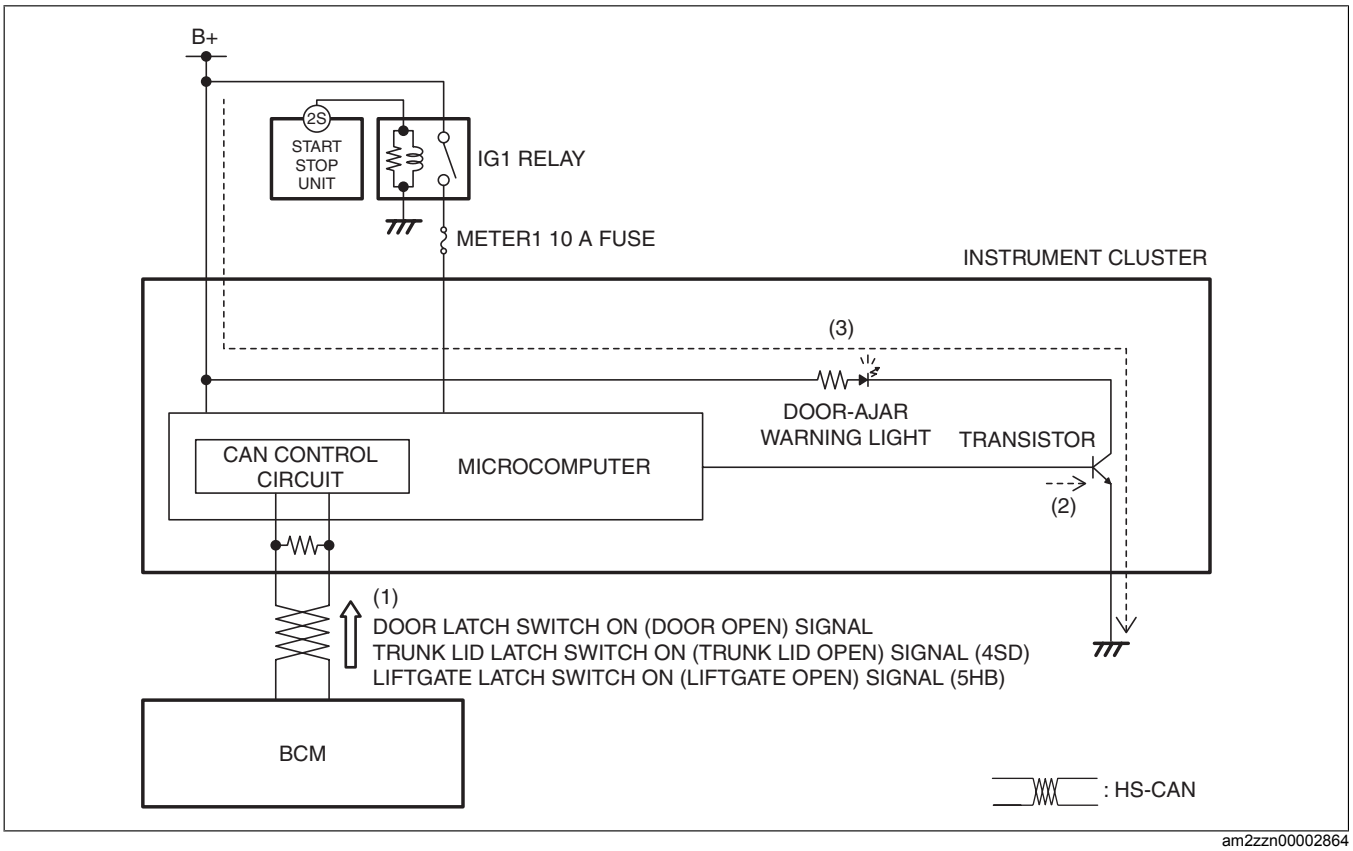

am2zzn00002864

Fail-safe

- Not applicable