AMBIENT TEMPERATURE WARNING ALARM


id092200020600

Purpose

- The ambient temperature warning alarm warns the user when the ambient temperature is **4 °C {39 °F} or less** and the road surface may be frozen.

Function

- When the instrument cluster receives an ambient temperature signal of **−19—4 °C {−2.2—39.0 °F}**, which is sent from the PCM as a CAN signal, it operates the ambient temperature warning alarm.
- After the instrument cluster operates the ambient temperature warning alarm, it does not operate the alarm until it receives an ambient temperature signal of **6 °C {43 °F} or more**.
- The ambient temperature warning alarm operates in the pattern shown in the figure.

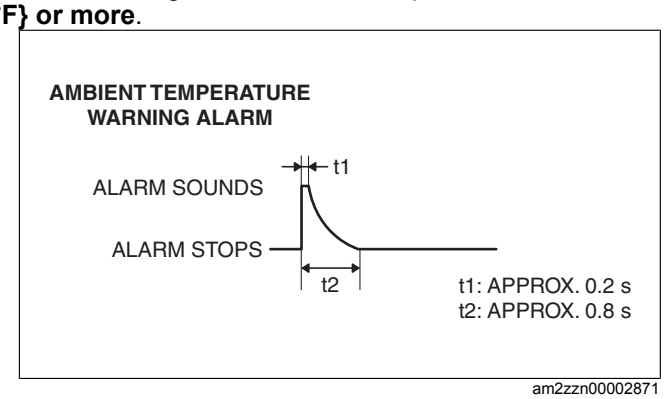


am2zzn00002871

Construction

- The ambient temperature warning alarm sounds using the buzzer built into the instrument cluster.

Operation

1. When the ignition is switched ON (engine off or on), the instrument cluster receives an ambient temperature signal from the PCM (1).
2. When the instrument cluster receives an ambient temperature signal of −19—4 °C {−2.2—39.0 °F}, it turns on (2) the transistor.
3. When the transistor is turned on, the ground circuit with the ambient temperature warning alarm is established and the ambient temperature warning alarm operates (3).

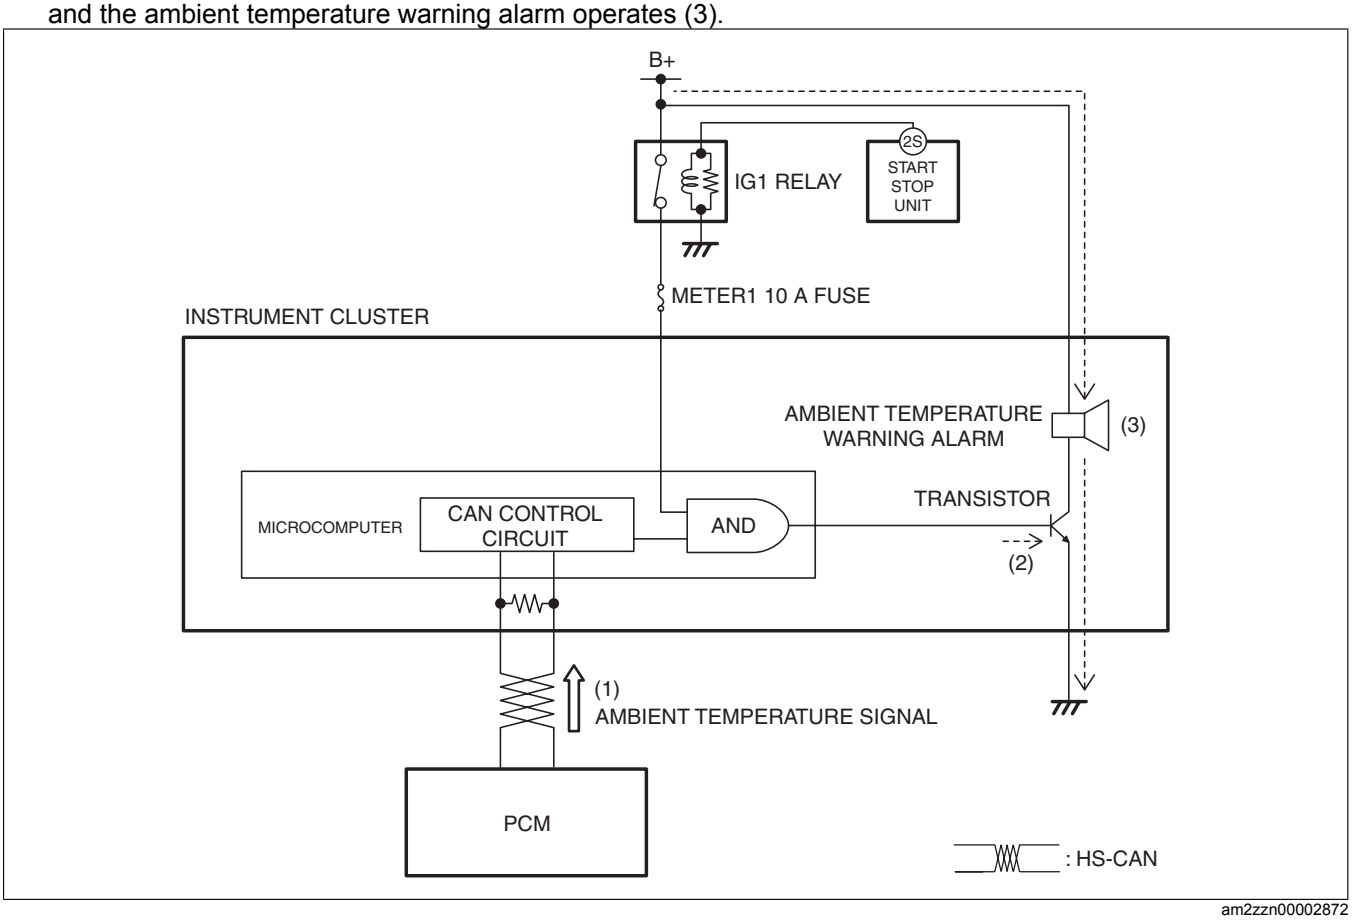

am2zzn00002872

Fail-safe

- Not applicable