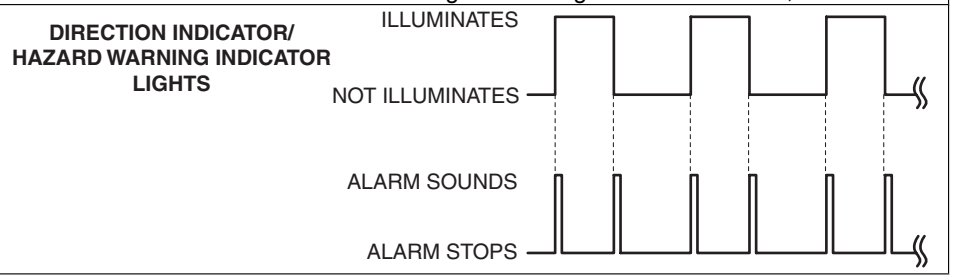
TURN AND HAZARD INDICATOR ALARM

id092200020800


Purpose
- The turn and hazard indicator alarm notifies the driver that a turn light or the hazard warning lights are flashing.

Function
- When the instrument cluster receives a direction indicator/hazard warning indicator signal sent from the BCM via the CAN signal, the turn and hazard indicator alarm sounds simultaneously with the turning on/off of the direction indicator/hazard warning indicator lights.
- The turn and hazard indicator alarm sounds in the pattern shown in the figure.

Sound frequency (Hz)	Direction indicator/hazard warning indicator lights turn off to on: 1,400 Direction indicator/hazard warning indicator lights turn on to off: 1,300
Wave pattern	

Construction
- The turn and hazard indicator alarm sounds using the buzzer built into the instrument cluster.

Operation
1. The instrument cluster receives (1) a direction indicator/hazard warning indicator signal via CAN communication from the BCM.
2. The instrument cluster turns the transistor on (2) based on the direction indicator/hazard warning indicator signal.
3. When the transistor turns on, a ground circuit with the turn and hazard indicator alarm is established and the turn and hazard indicator alarm sounds (3).

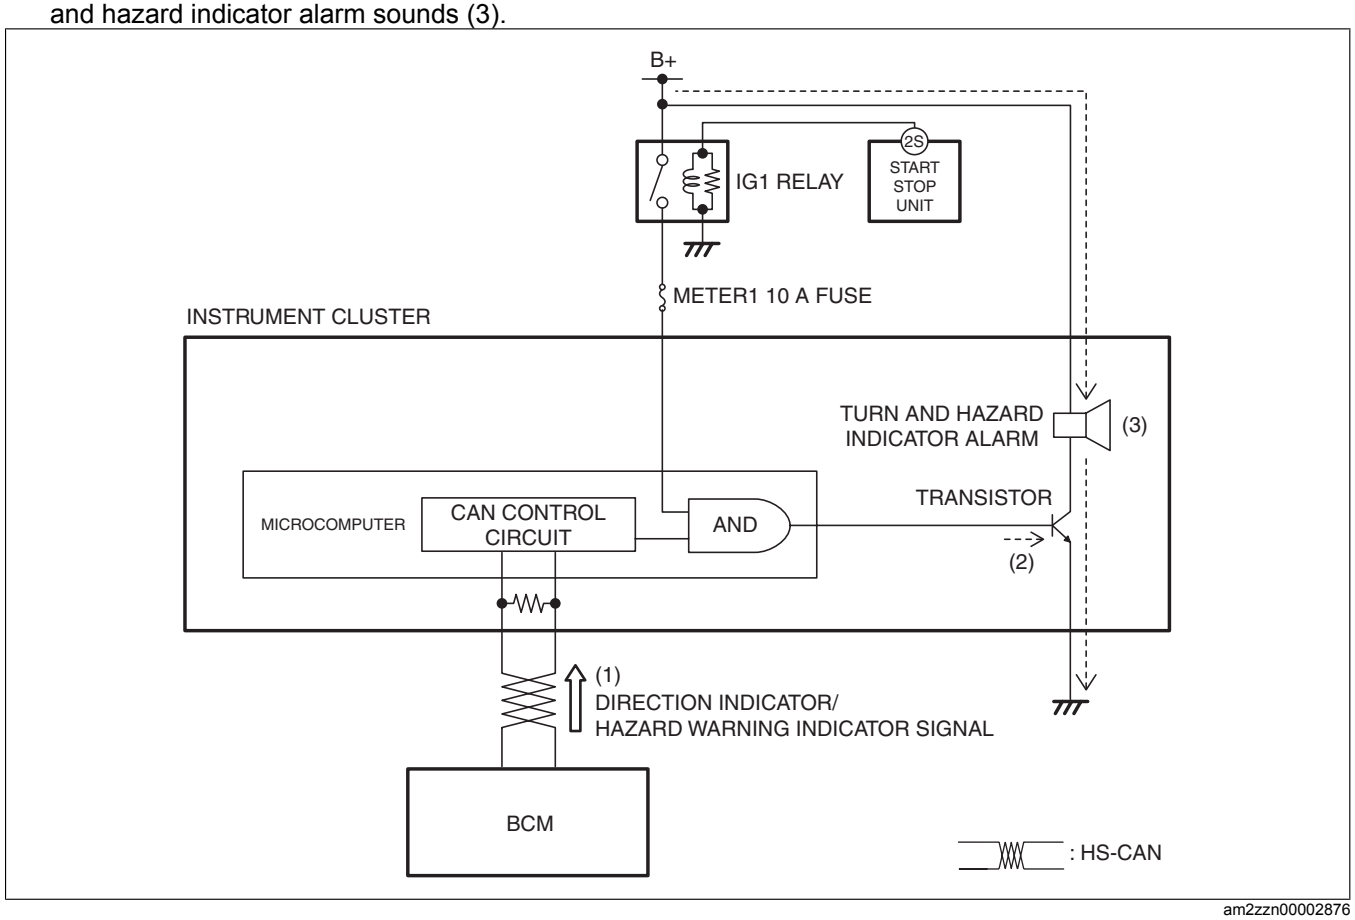

am2zzn00002876

Fail-safe
- Not applicable