
ULTRASONIC SENSOR REMOVAL/INSTALLATION


id092200023200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (2) Rear splash shield (See SPLASH SHIELD REMOVAL/INSTALLATION.)
   (3) Rear bumper (See REAR BUMPER REMOVAL.)(See REAR BUMPER INSTALLATION.)
3. Disconnect the connector.

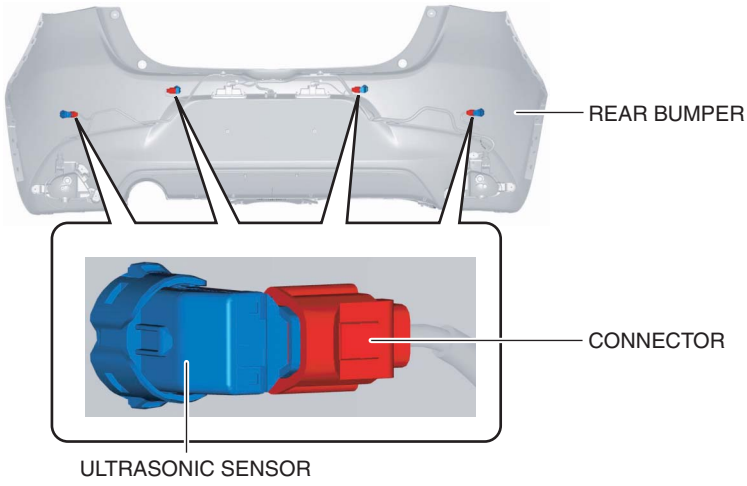

am2zzw00008237

4. While pressing the ultrasonic sensor tabs in the direction of arrows (1) shown in the figure, move the ultrasonic sensor in the direction of arrow (2) and detach the ultrasonic sensor from the rear bumper.

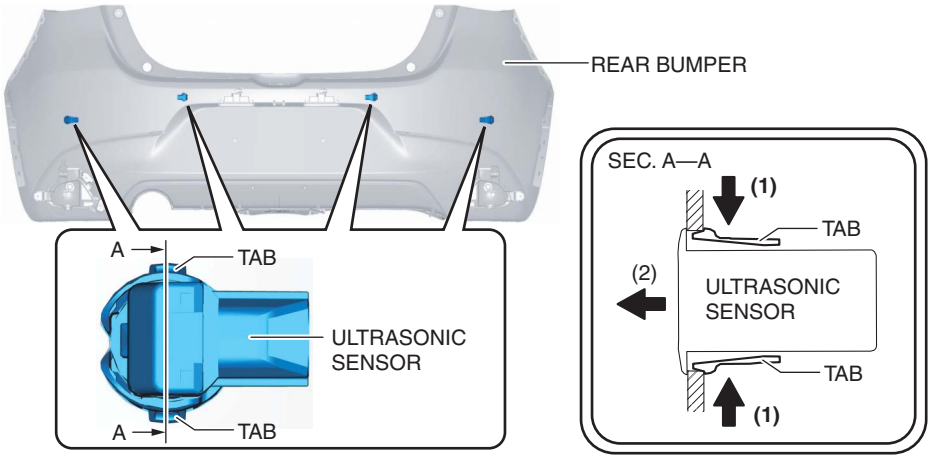

am2zzw00008238

5. Install in the reverse order of removal.