
PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION

id092200023500

L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (4) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (5) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (6) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the connector.

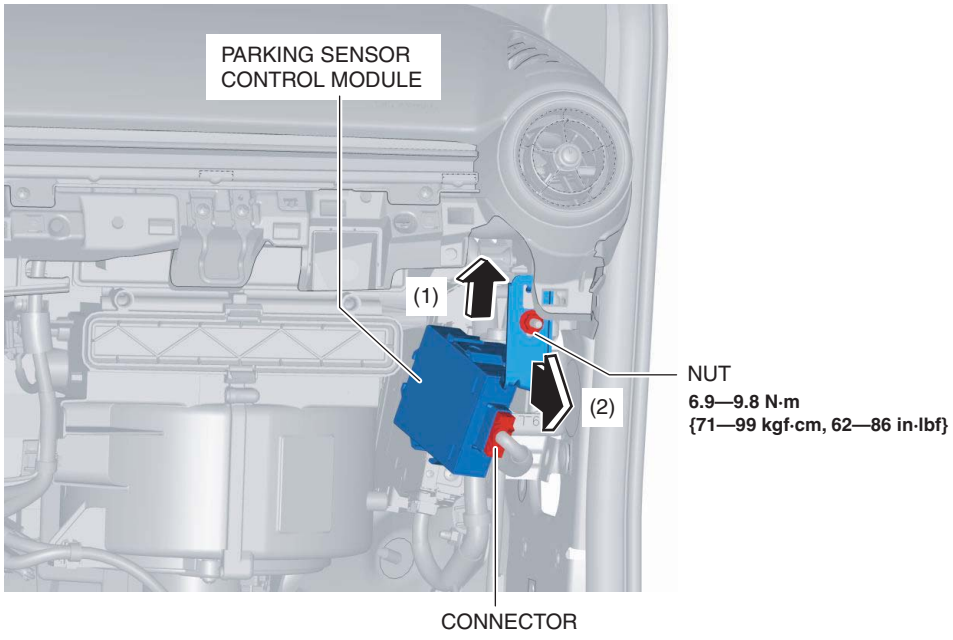


am2zzw00008790

4. Remove the nut.
5. Lift the parking sensor control module up in the direction of arrow (1) shown in the figure and remove it in the direction of arrow (2).
6. Install in the reverse order of removal.

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the connector.

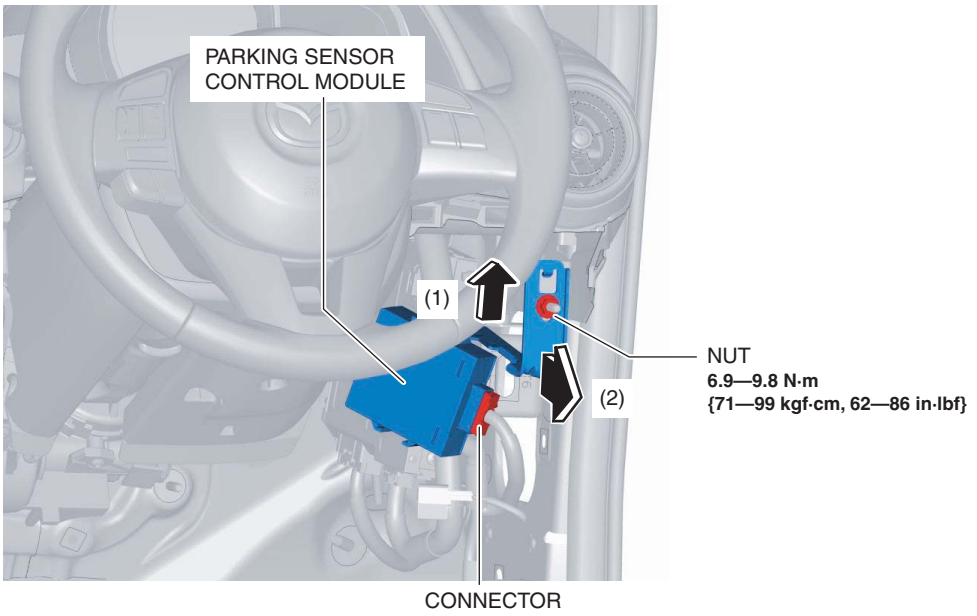

am2zzw00008791

4. Remove the nut.
5. Lift the parking sensor control module up in the direction of arrow (1) shown in the figure and remove it in the direction of arrow (2).
6. Install in the reverse order of removal.