
PARKING SENSOR CONTROL MODULE INSPECTION

id092200023600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   L.H.D.
   1. Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   2. Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   3. Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   4. Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   5. Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   6. Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)

   R.H.D.
   1. Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   2. Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   3. Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   4. Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   5. Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Verify that the voltages of each of the terminals are as indicated in the terminal voltage table (reference).
   - If the voltage is not as specified in the terminal voltage table (reference), inspect the parts under Inspection item(s) and related wiring harnesses.
     — If the system does not operate normally even though the inspection items are normal, replace the parking sensor control module.

Terminal Voltage Table (Reference)

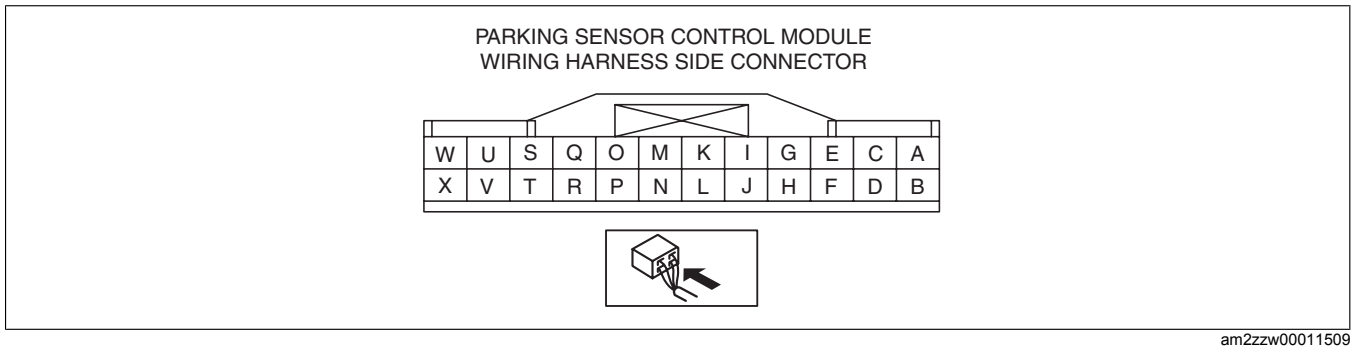

am2zzw00011509

Terminal	Signal name	Connected to	Test condition	Voltage (V)	Inspection item
A	GND	Body ground	Under any condition	1.0 or less	Body ground
B	—	—	—	—	—
C	—	—	—	—	—
D	—	—	—	—	—
E	Ultrasonic sensor	Corner ultrasonic sensor (LH)	Wave pattern (See Inspection Using an Oscilloscope (reference).)		Corner ultrasonic sensor (LH)
F	—	—	—	—	—
G	Ultrasonic sensor	Corner ultrasonic sensor (RH)	Wave pattern (See Inspection Using an Oscilloscope (reference).)		Corner ultrasonic sensor (RH)
H	Ultrasonic sensor GND	• Ultrasonic sensor • Corner ultrasonic sensor	Under any condition	1.0 or less	• Ultrasonic sensor • Corner ultrasonic sensor
I	Ultrasonic sensor	Ultrasonic sensor (LH)	Wave pattern (See Inspection Using an Oscilloscope (reference).)		Ultrasonic sensor (LH)
J	—	—	—	—	—
K	Ultrasonic sensor	Ultrasonic sensor (RH)	Wave pattern (See Inspection Using an Oscilloscope (reference).)		Ultrasonic sensor (RH)
L	Speed	Instrument cluster	Determination using terminal voltage inspection is not possible.		
M	—	—	—	—	—

Terminal	Signal name	Connected to	Test condition		Voltage (V)	Inspection item
N	Reverse	Electrical supply unit (ESU)	Ignition switched ON (engine off or on)		B+	Electrical supply unit (ESU)
			Ignition switched off or ACC		1.0 or less	
O	—	—	—		—	—
P	—	—	—		—	—
Q	—	—	—		—	—
R	Parking sensor buzzer GND	Parking sensor buzzer	Ignition switched ON (engine off or on)	Buzzer sounding	1.0 or less	Parking sensor buzzer
				Buzzer stopped	B+	
S	—	—	—		—	—
T	Parking sensor buzzer	Parking sensor buzzer	Ignition switched ON (engine off or on)		B+	Parking sensor buzzer
			Ignition switched off or ACC		1.0 or less	
U	—	—	—		—	—
V	—	—	—		—	—
W	IG1*1	Ignition relay (IG1_STAB)	Ignition switched ON (engine off or on)		B+	• Ignition relay (IG1_STAB) • METER2 7.5A fuse
			Ignition switched off or ACC		1.0 or less	
	IG1*2	IG1 relay	Ignition switched ON (engine off or on)		B+	• C/U IG1 15A fuse • IG1 relay
			Ignition switched off or ACC		1.0 or less	
X	—	—	—		—	—


*1 : With i-stop system and without i-ELOOP

*2 : Without i-stop system or with i-ELOOP

Inspection Using an Oscilloscope (reference)

Oscilloscope setting:			Terminal			
Ignition	Shift lever position	Vehicle speed	Corner ultrasonic sensor (LH)	Ultrasonic sensor (LH)	Ultrasonic sensor (RH)	Corner ultrasonic sensor (RH)
ON (engine off or on)	R position	0—15 km/h {0—9.3 mph} or less	E—B	I—B	K—B	G—B

- Oscilloscope setting:
  — 2 V/DIV (Y), 20 ms/DIV (X), DC range

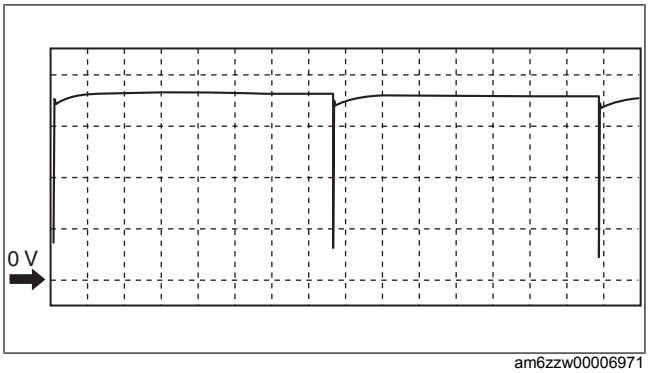

am6zzw00006971