
PARKING SENSOR BUZZER REMOVAL/INSTALLATION

id092200023900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (driver-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (driver-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the connector.

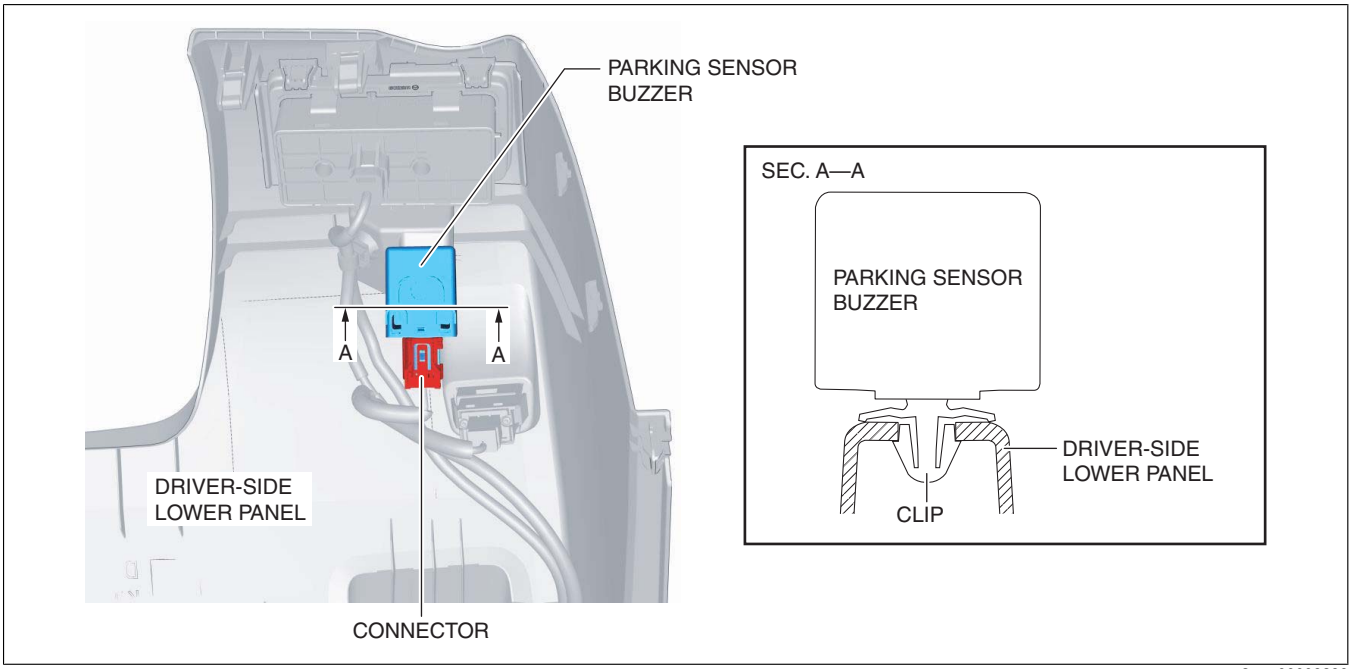

am2zzw00008283

4. Detach the parking sensor buzzer clip from the driver's side lower panel and remove the parking sensor buzzer.
5. Install in the reverse order of removal.