PARKING SENSOR BUZZER INSPECTION

id092200024000


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (driver-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (driver-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Verify the continuity between parking sensor buzzer terminals A and B.

○—○ : Continuity

Test condition	Terminal	
	A	B
Under any condition	○	○

ac5wzw00005599

- If not as indicated in the table, replace the parking sensor buzzer. (See PARKING SENSOR BUZZER REMOVAL/ INSTALLATION.)

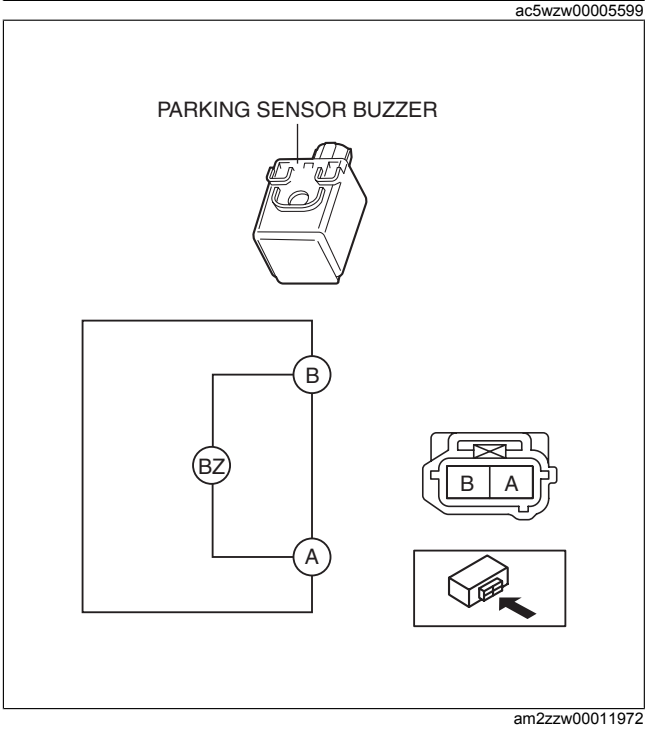

am2zzw00011972