
BEEP SOUND ADJUSTMENT

id092200024100


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (4) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (5) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (6) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Perform the following procedure to determine the correct adjustment procedure.

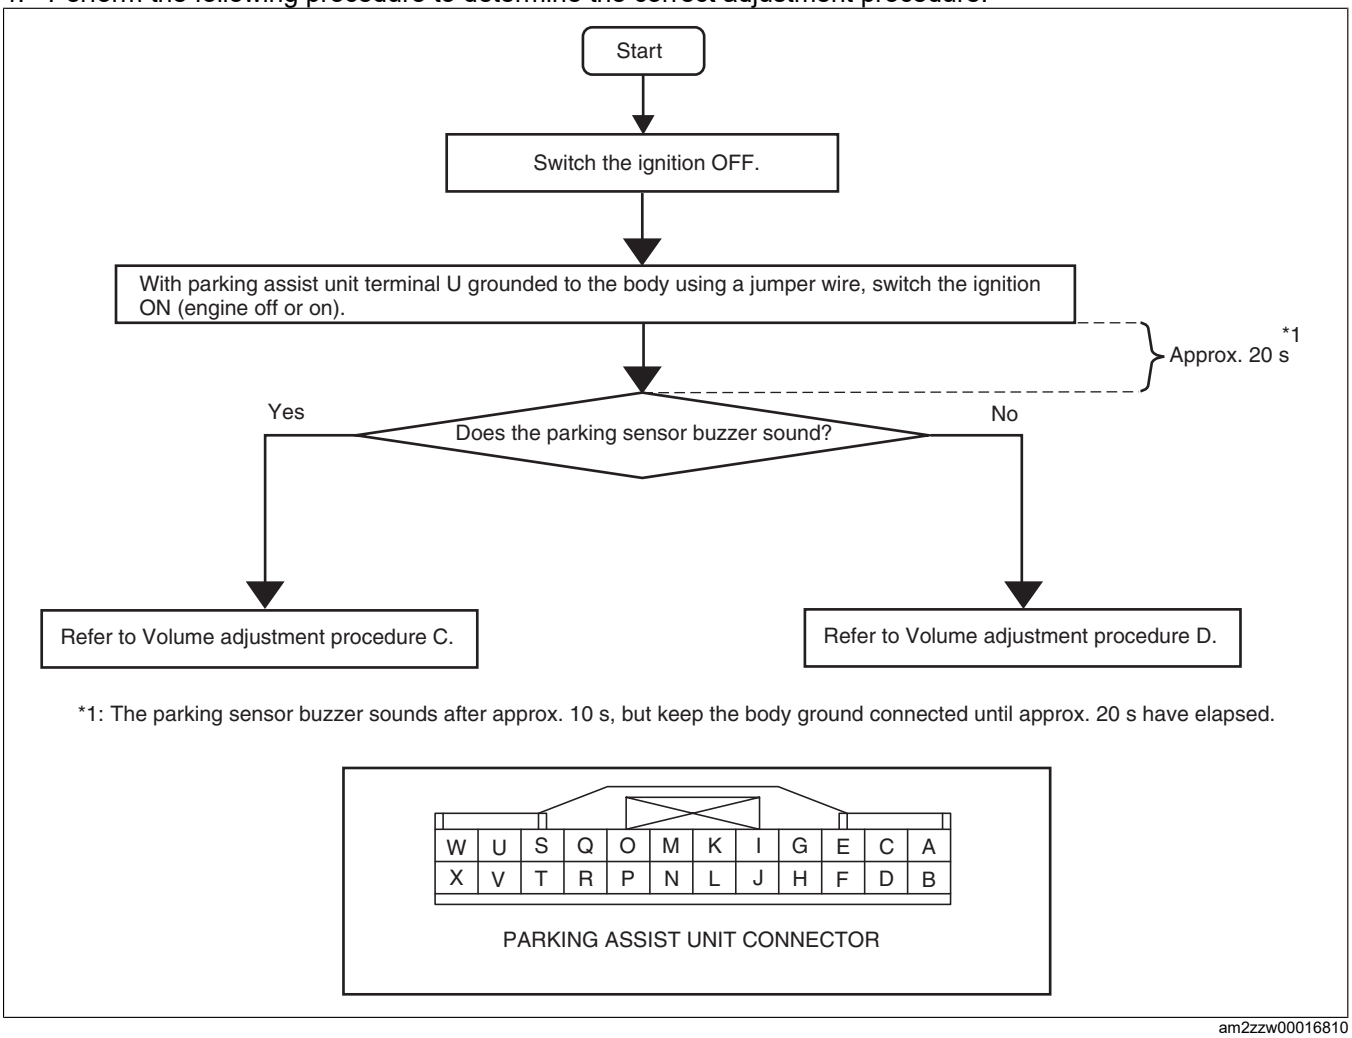

am2zzw00016810

Volume adjustment procedure C

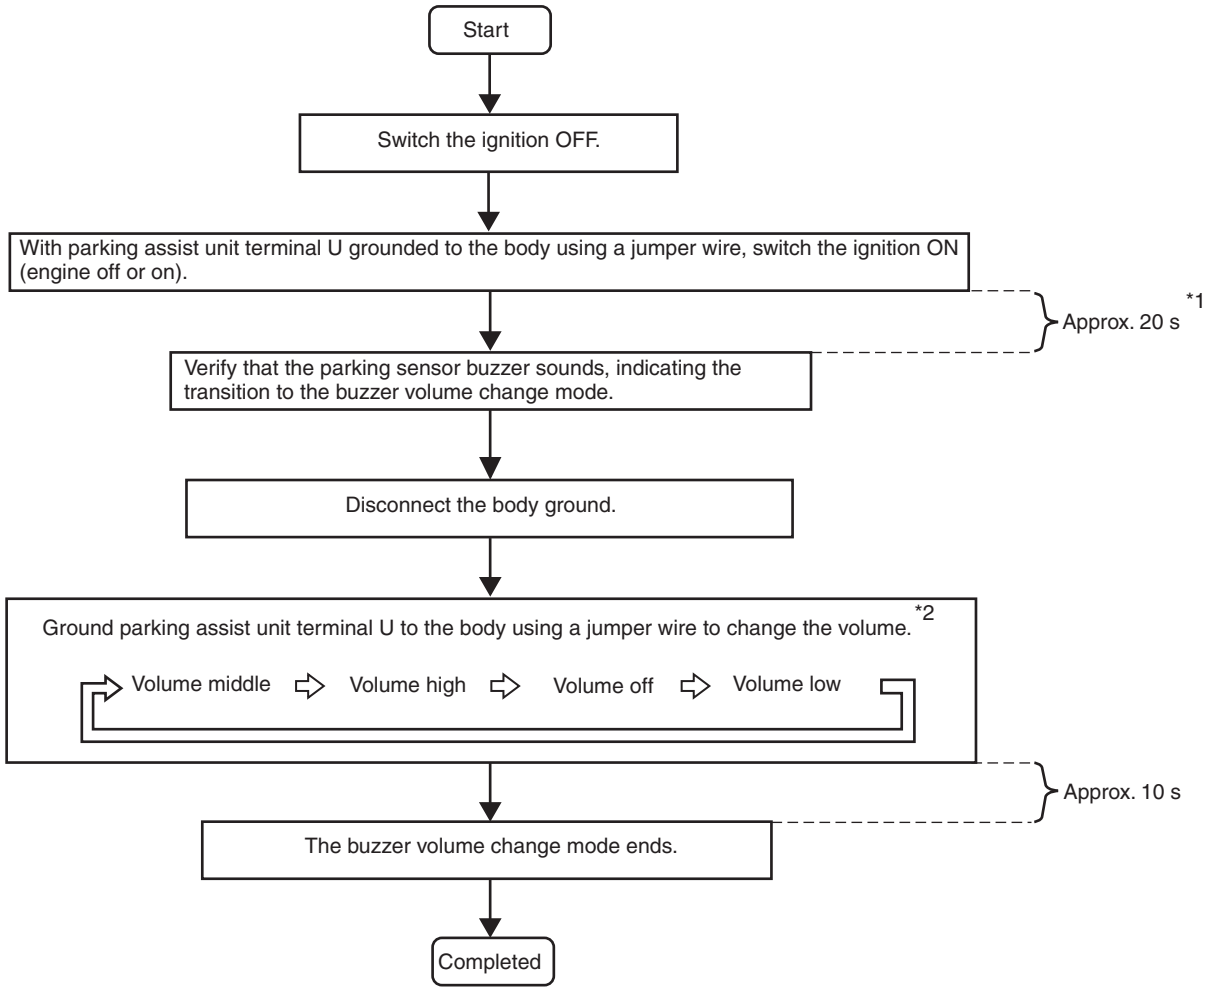


*1 : The parking sensor buzzer sounds after approx. 10 s, but keep the body ground connected until approx. 20 s have elapsed.

*2 : When grounding the terminal to the body, the buzzer sounds with the same volume as the set volume.

am2zzw00016811


Volume adjustment procedure D

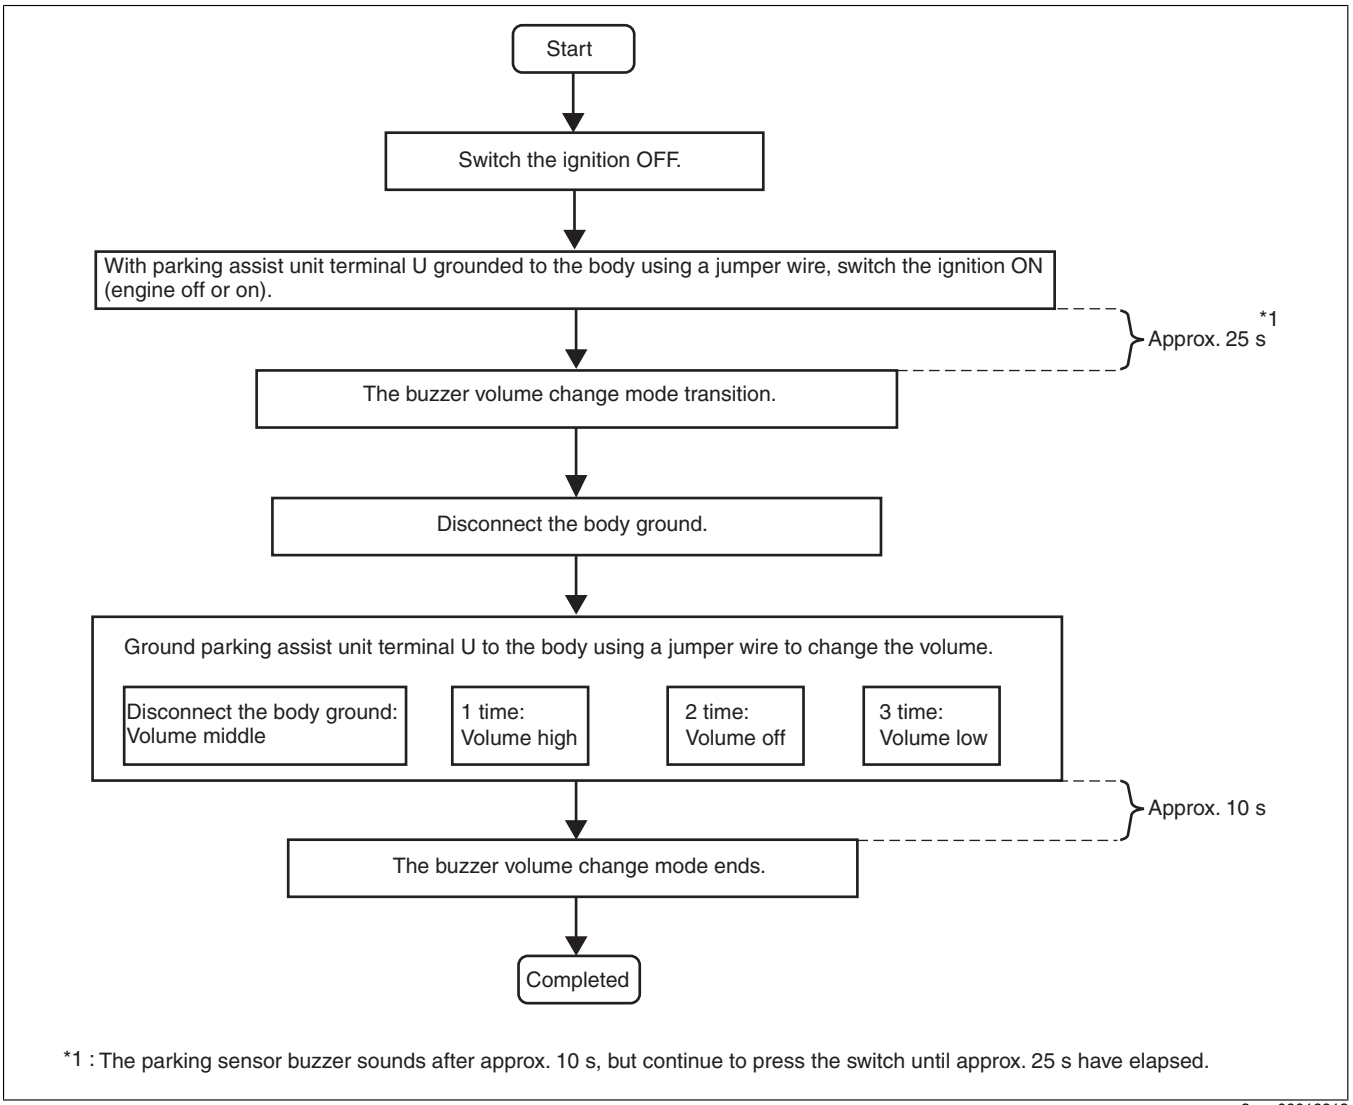

am2zzw00016812

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Perform the following procedure to determine the correct adjustment procedure.

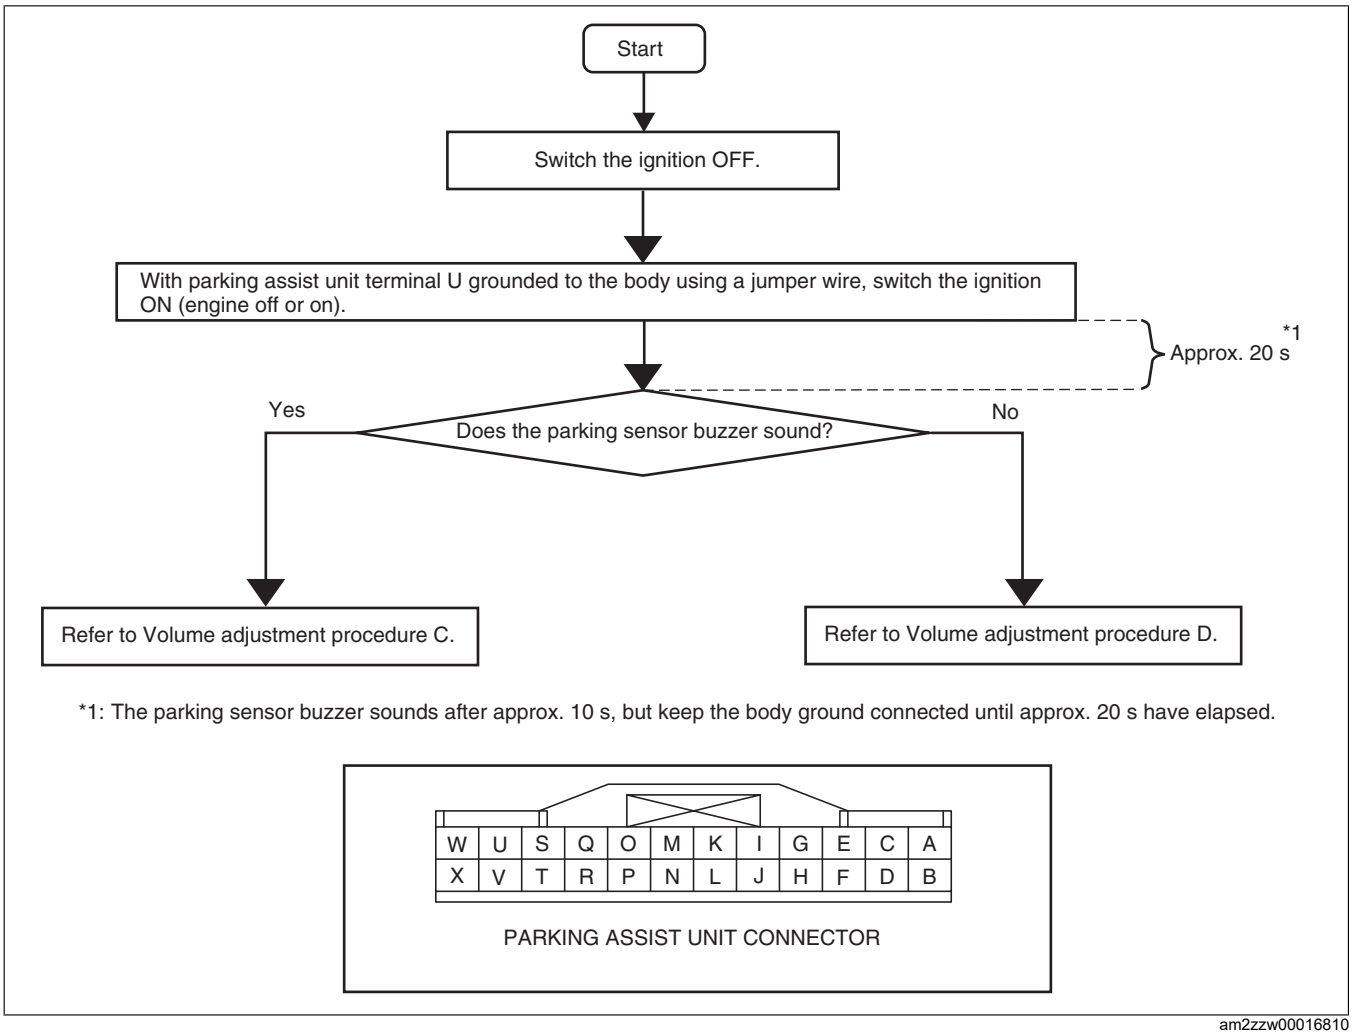

*1: The parking sensor buzzer sounds after approx. 10 s, but keep the body ground connected until approx. 20 s have elapsed.

am2zzw00016810

Volume adjustment procedure C

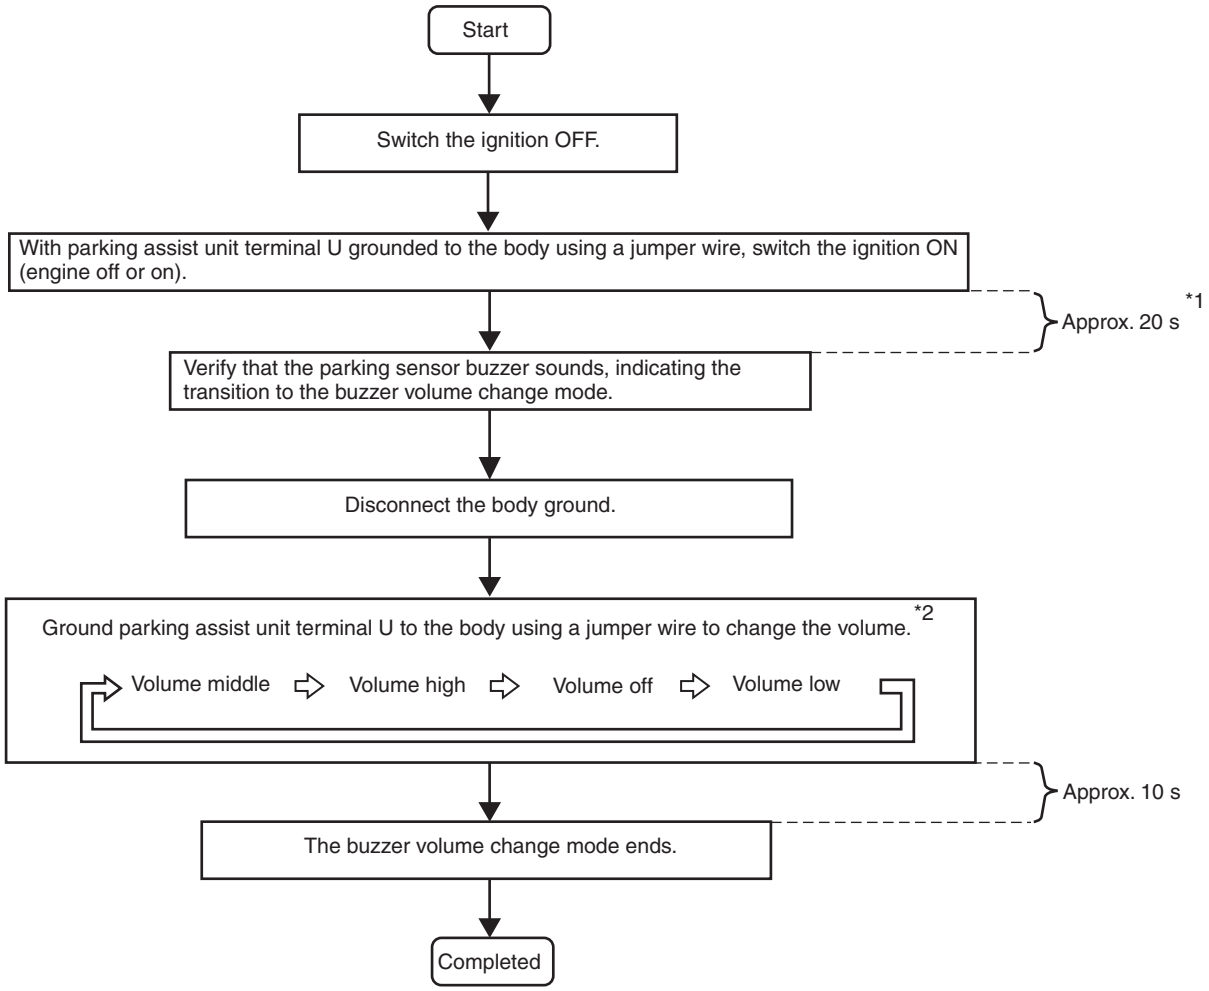


*1 : The parking sensor buzzer sounds after approx. 10 s, but keep the body ground connected until approx. 20 s have elapsed.

*2 : When grounding the terminal to the body, the buzzer sounds with the same volume as the set volume.

am2zzw00016811

Volume adjustment procedure D

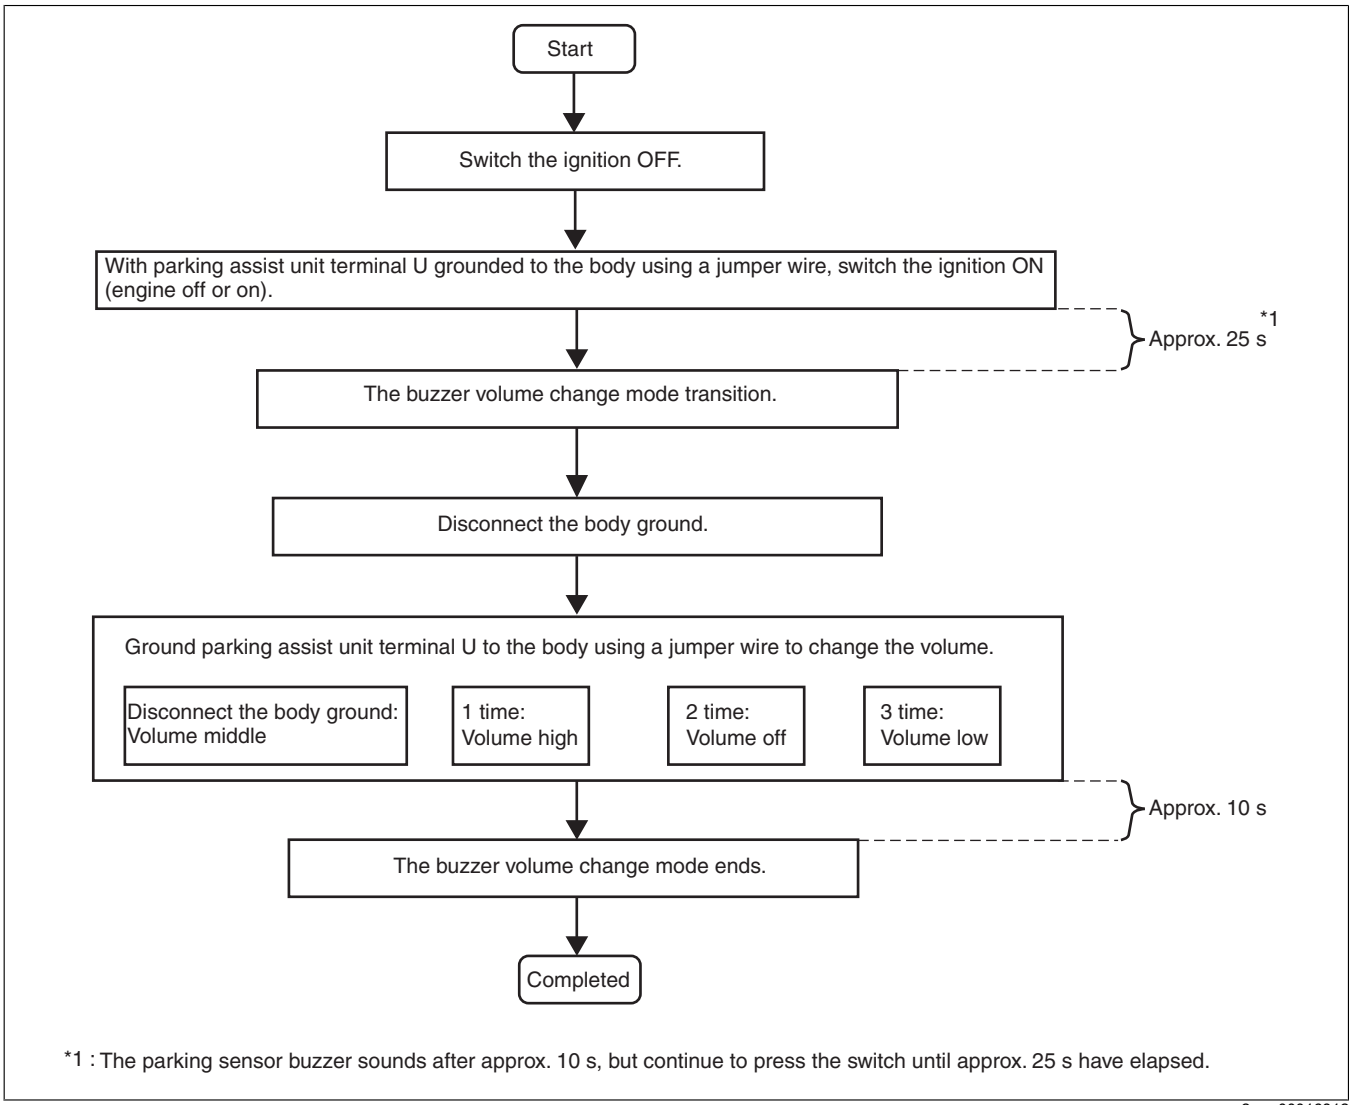

*1 : The parking sensor buzzer sounds after approx. 10 s, but continue to press the switch until approx. 25 s have elapsed.

am2zzw00016812