
ULTRASONIC SENSOR

id092200024300

Purpose
- The ultrasonic sensor detects obstructions at the rear of the vehicle.

Function
- The ultrasonic sensor emits ultrasonic waves and receives the waves reflected off an obstruction.

Construction
- Four ultrasonic sensors are located on the rear bumper.

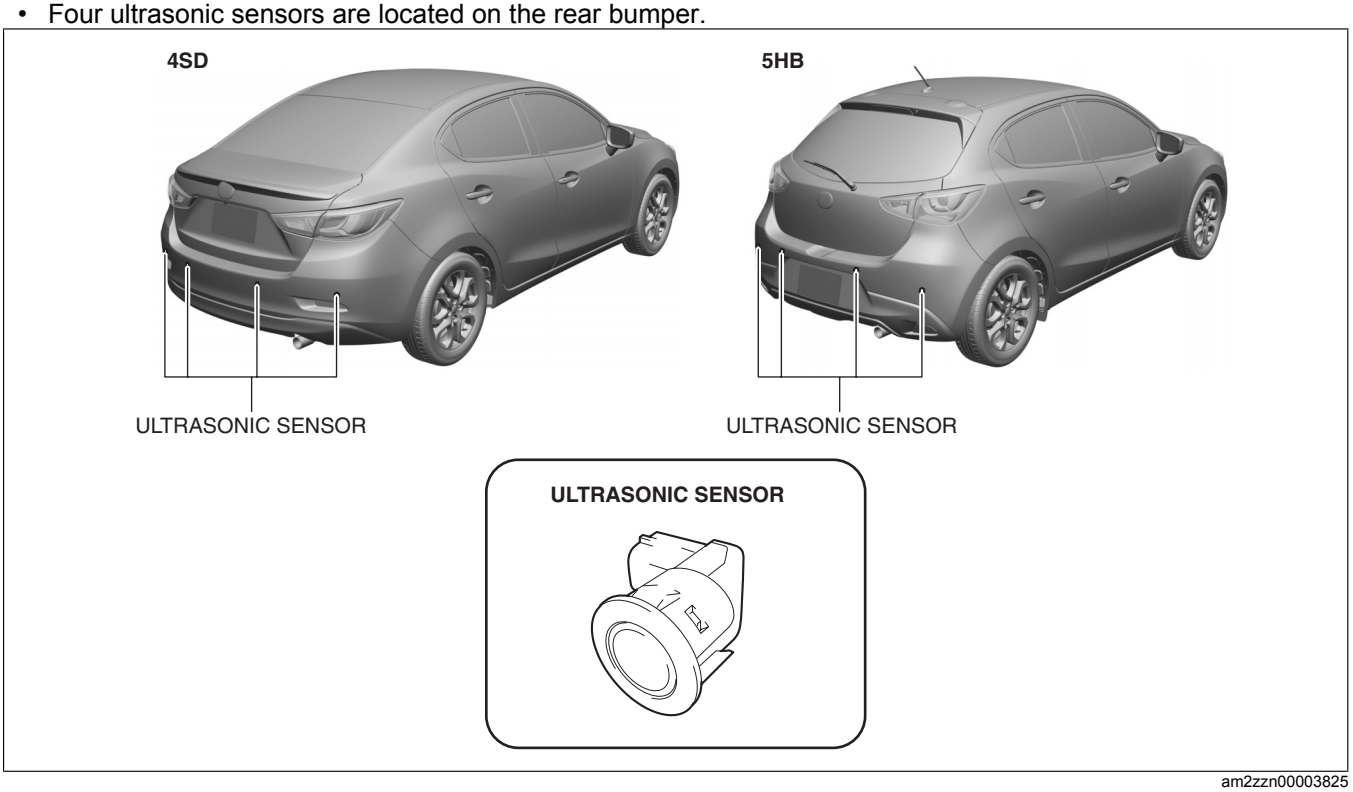

am2zzn00003825

Operation
- For the ultrasonic sensor operation, refer to the [PARKING SENSOR SYSTEM]. (See PARKING SENSOR SYSTEM.)

Fail-safe
- Not applicable