PARKING SENSOR BUZZER


id092200024700

Purpose, Function

- The parking sensor buzzer is activated by the signal from the parking sensor control module.

Construction

- The parking sensor buzzer is located inside the lower panel.

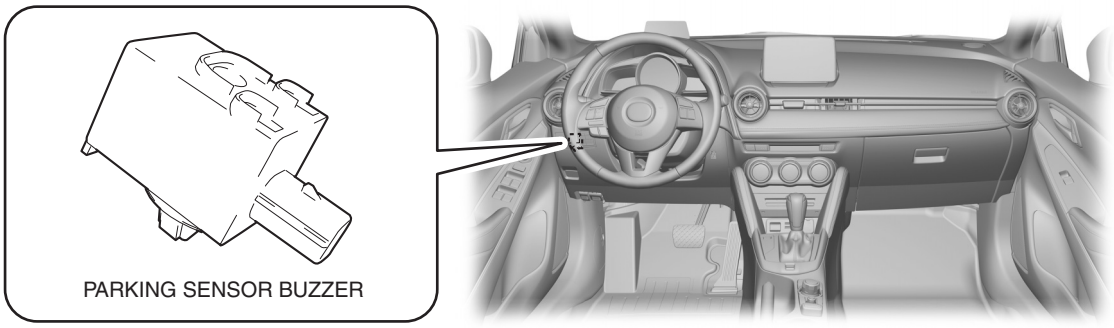

am2zzn00002897

Operation

- For the parking sensor buzzer operation, refer to the [PARKING SENSOR SYSTEM]. (See PARKING SENSOR SYSTEM.)

Fail-safe

- Not applicable