
LDWS WARNING ALARM

id092200029600

Purpose
- The LDWS warning alarm warns the driver that the vehicle may depart from its lane.


Function
- If the instrument cluster receives a warning sound request signal from the forward sensing camera (FSC), it sounds the LDWS warning alarm using the buzzer in the instrument cluster.
- The LDWS warning alarm sounds in the pattern shown in the figure.

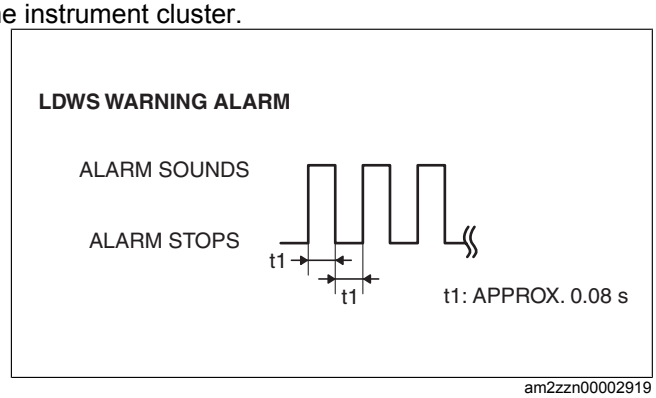

am2zzn00002919

Construction
- The LDWS warning alarm sounds using the buzzer built into the instrument cluster.

Operation
1. The instrument cluster receives (1) a warning sound request signal from the forward sensing camera (FSC) via CAN communication.
2. The instrument cluster turns the transistor on (2) based on the warning sound request signal.
3. When the transistor turns on, a ground circuit with the LDWS warning alarm is established and the LDWS warning alarm sounds (3).

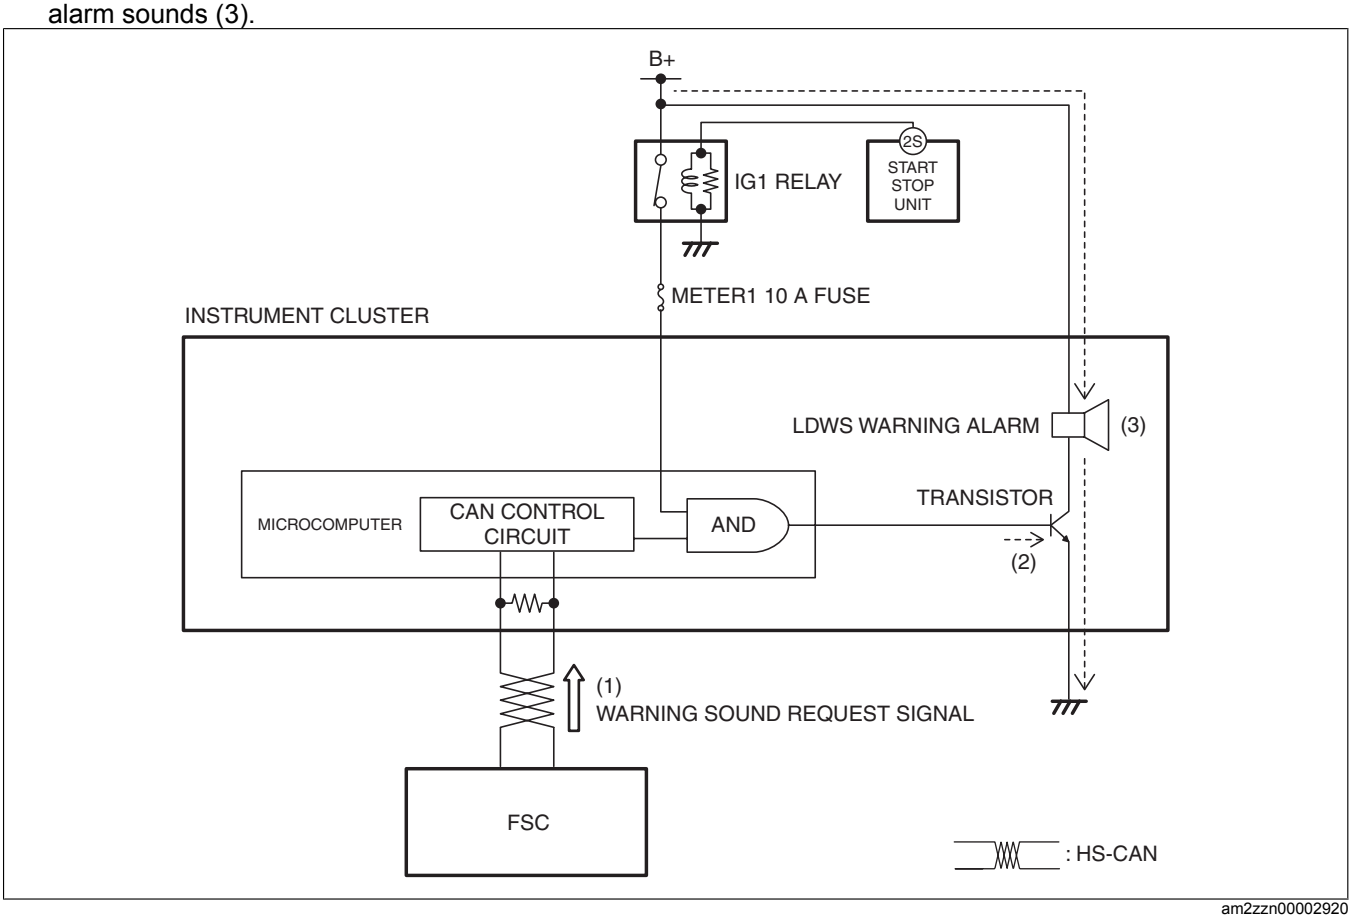

am2zzn00002920

Fail-safe
- Not applicable