
LDWS SWITCH INSPECTION

id092200031600

Note
- The LDWS switch is integrated with the cluster switch.
- To replace the LDWS switch, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

Resistance Inspection
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (6) Cluster switch (See CLUSTER SWITCH REMOVAL/INSTALLATION.)
3. Verify that the resistance between cluster switch terminals B and C is as indicated in the table.

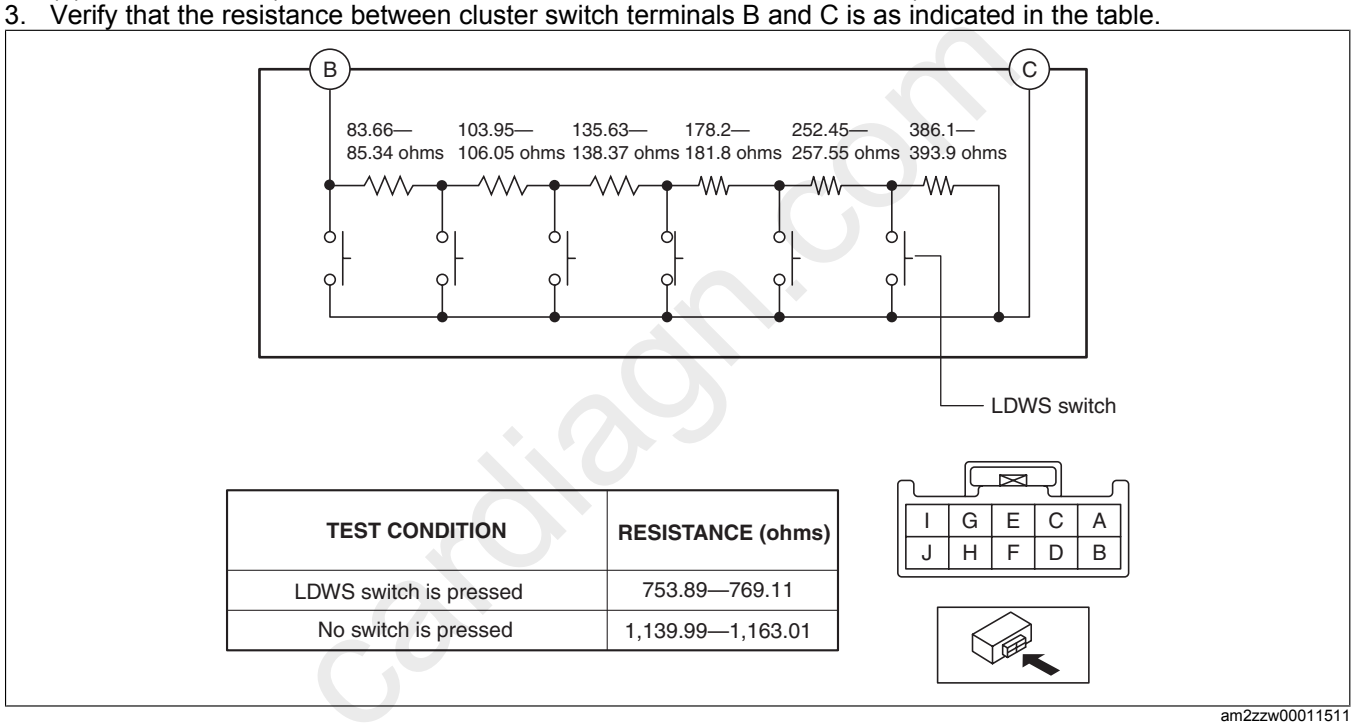

TEST CONDITION	RESISTANCE (ohms)
LDWS switch is pressed	753.89—769.11
No switch is pressed	1,139.99—1,163.01


am2zzw00011511

- If not within the specification, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

LED Illumination Inspection
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (6) Cluster switch (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

cardiagn.com

3. Apply battery positive voltage to cluster switch terminal J, and connect terminal I to ground.
4. Verify that the LED is turned on.
   - If the LED does not turn on, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/ INSTALLATION.)

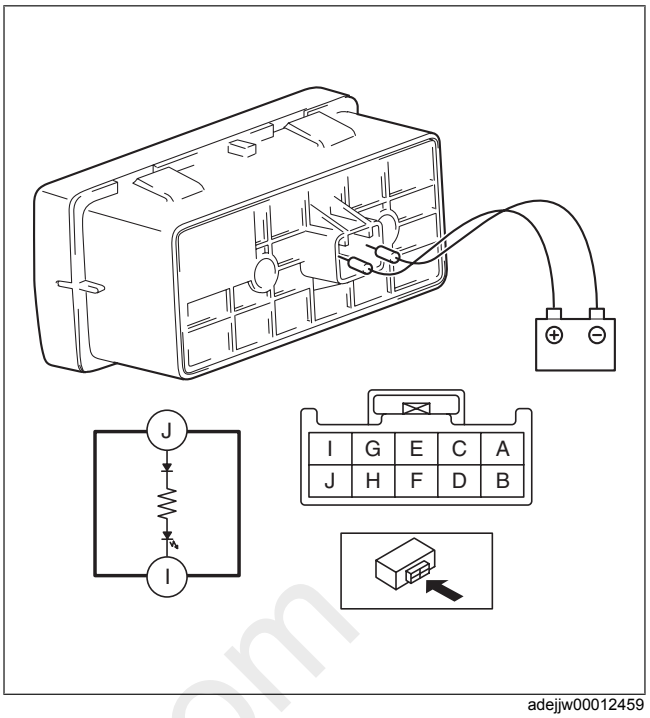

adejjw00012459

cardiagn.com