FORWARD SENSING CAMERA (FSC) SHORT-CORD INSPECTION


id092200032000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Sensor cover (See SENSOR COVER REMOVAL/INSTALLATION.)
   (2) Rearview mirror (See REARVIEW MIRROR REMOVAL/INSTALLATION.)
   (3) Forward sensing camera (FSC) short-cord (See FORWARD SENSING CAMERA (FSC) SHORT-CORD REMOVAL/INSTALLATION.)
3. Verify that the continuity between the forward sensing camera (FSC) short-cord terminals is as indicated in the table.

○—○: Continuity

Test condition	Terminal													
	Vehicle wiring harness (C-23) side connector							Auto light sensor / rain sensor side connector			Forward sensing camera (FSC) side connector			
	A	B	C	D	E	G	H	A	B	D	A	C	E	I
Under any condition	○													○
		○								○				
			○									○		
				○				○						
					○								○	
						○					○			
							○		○					

am2zzw00011527

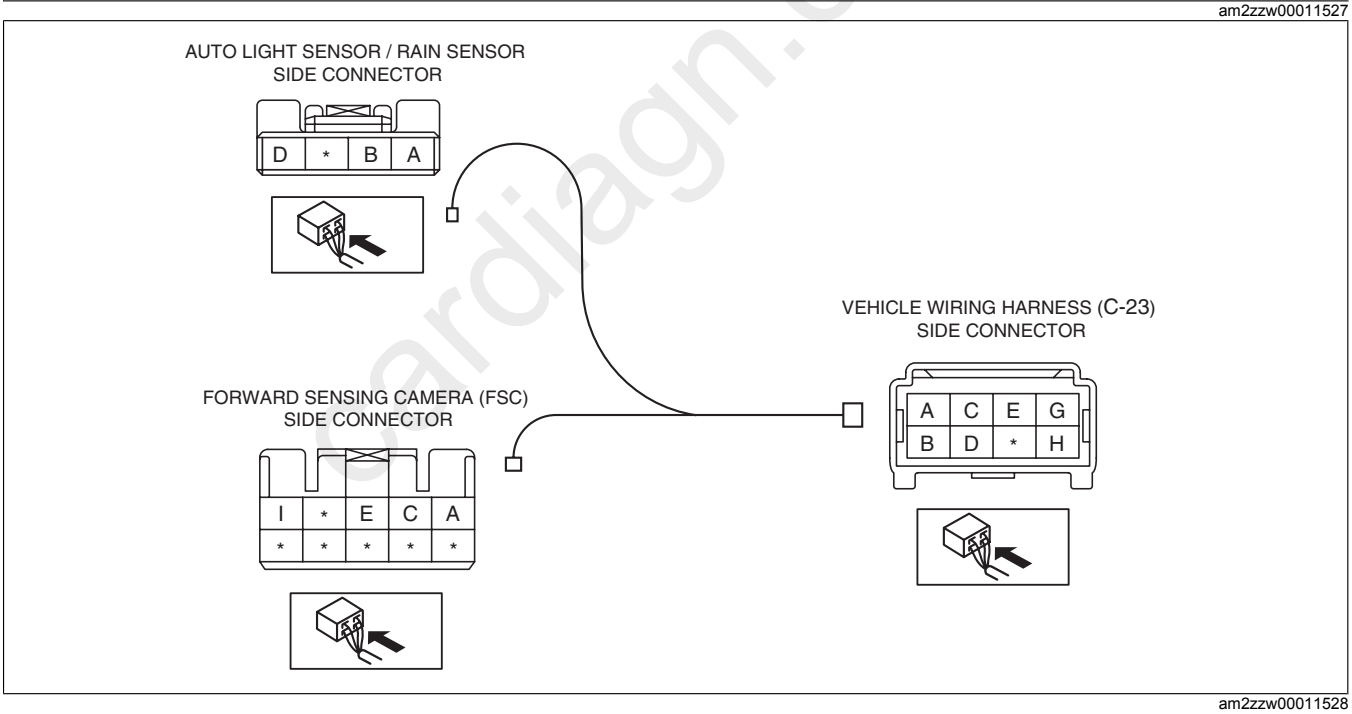

am2zzw00011528

- If not as indicated in the table, replace the forward sensing camera (FSC) short-cord. (See FORWARD SENSING CAMERA (FSC) SHORT-CORD REMOVAL/INSTALLATION.)

cardiagn.com