
## SPEEDOMETER

id092200032500

### Purpose
- The speedometer notifies the driver of the speed at which the vehicle is traveling.


### Function
- The instrument cluster displays the current vehicle speed based on the vehicle speed signal from the PCM.

### Construction
### Digital speedometer type
- A digital display speedometer has been adopted.
- The current vehicle speed is displayed in the speedometer display and the active driving display.

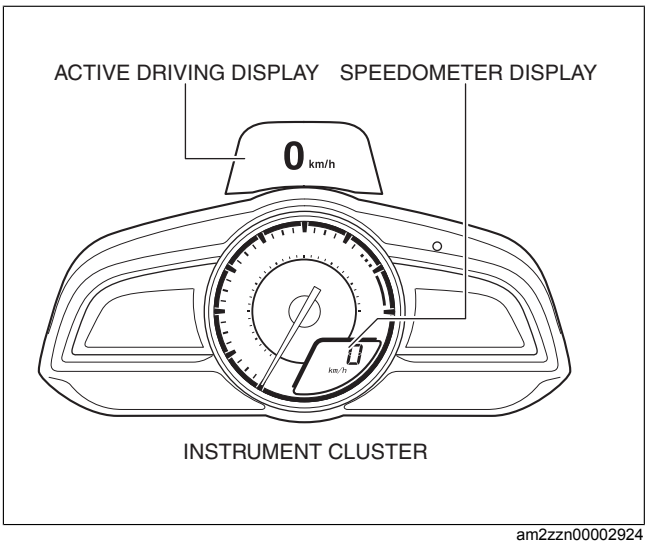



am2zzn00002924

### Analog speedometer type
- An analog needle display speedometer with a stepping motor mechanism has been adopted.

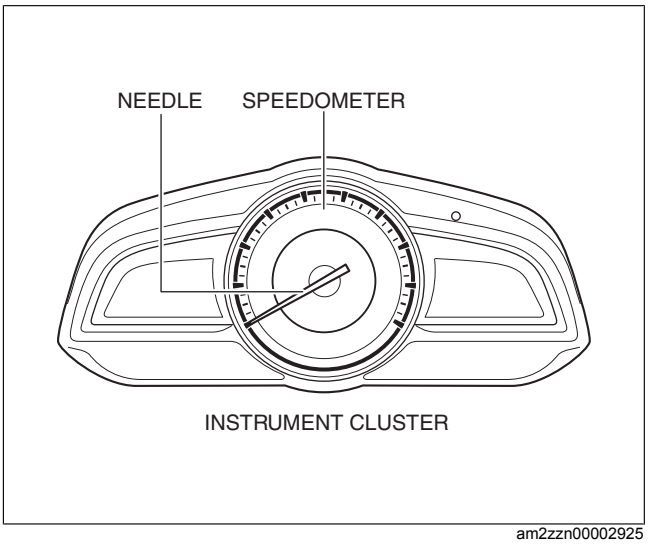


am2zzn00002925

### Operation
1. When the ignition is switched ON (engine on), the instrument cluster receives (1) a vehicle speed signal from the PCM via the CAN communication.
2. The instrument cluster displays (2) the current vehicle speed based on the vehicle speed signal.

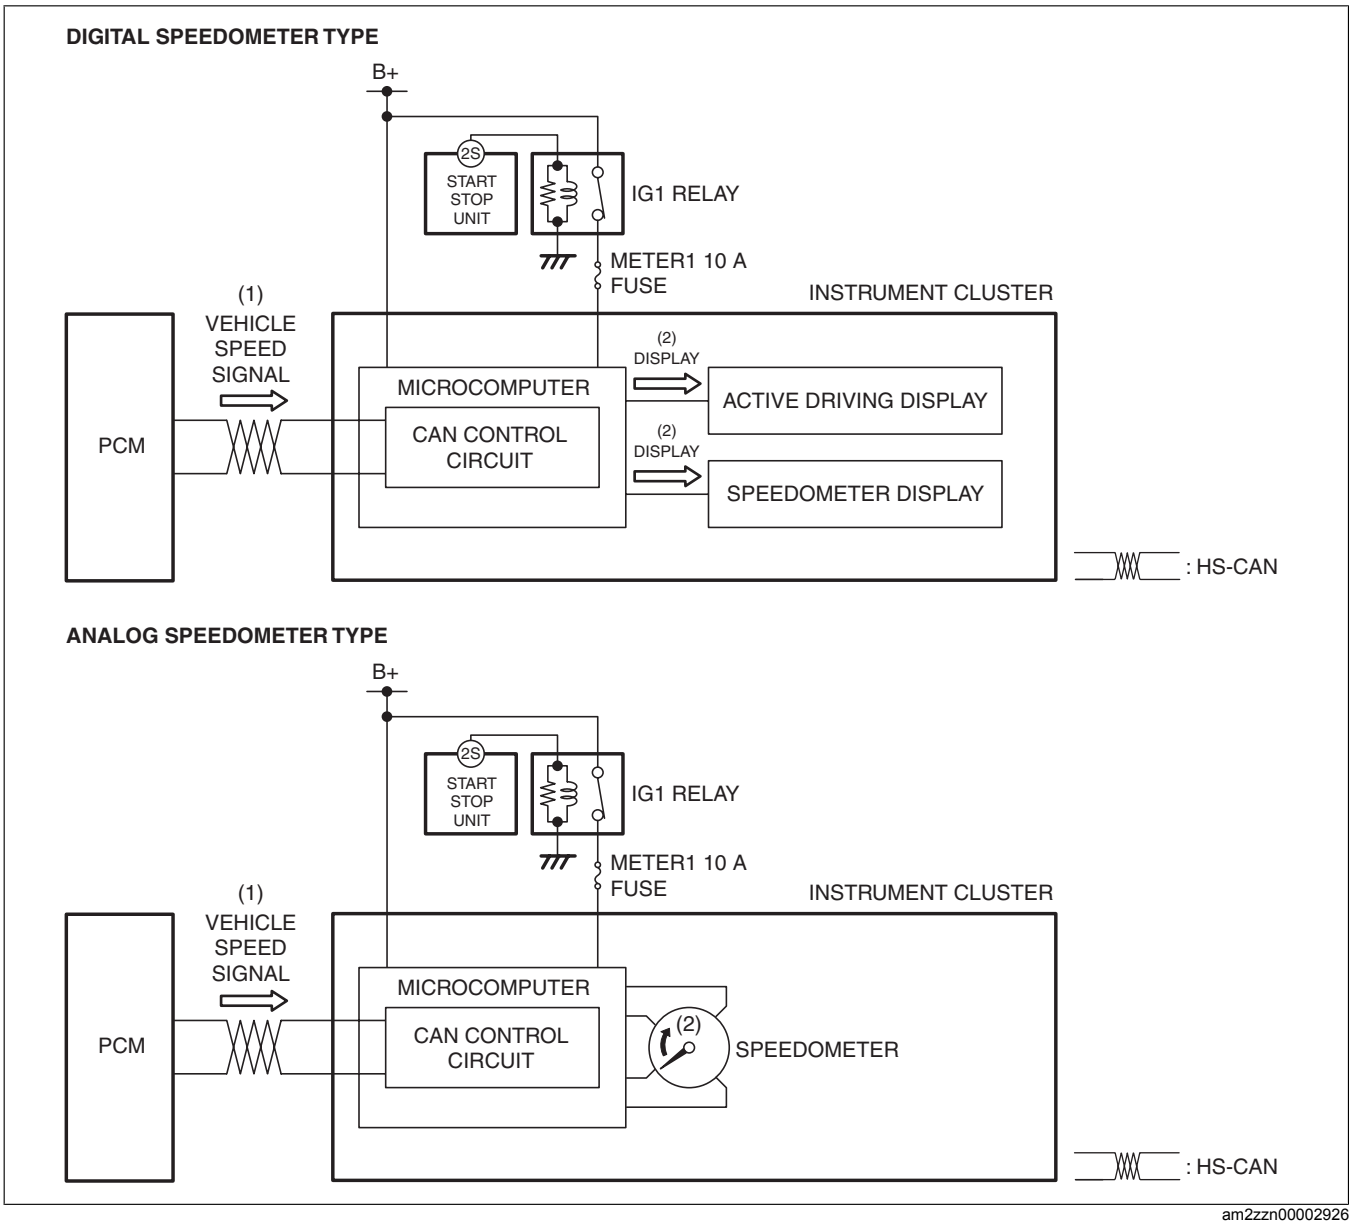


am2zzn00002926

**Fail-safe**

- Not applicable