INSTRUMENT CLUSTER PERSONALIZATION FEATURES SETTING PROCEDURE

id092200033600

Caution
- **The personalization feature may not be set correctly if [Not equipped] is selected in the setting displayed on the M-MDS. Do not select [Not equipped] in the setting displayed on the M-MDS.**

Note
- Settings of some personalization features displayed on the M-MDS cannot be switched depending on the vehicle specification.

Turn And Hazard Indicator Alarm
Using M-MDS
1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
   (1) “Module programming”
   (2) “Programmable Parameters”
3. Select menu in the “IC”.
4. Select an item name, and than select option.

Mazda Modular Diagnostic System (M-MDS) display	Function	Initial setting	Setting contents	Control unit
Turn Signal Volume.	The volume of the turn and hazard indicator alarm can be changed.	High	Low / High	Instrument cluster

*1 : Without center display

Using center display
- For the setting procedure of the personalization features using the center display, refer to "CENTER DISPLAY PERSONALIZATION FEATURES". (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Lights-on Reminder Warning Alarm
Using M-MDS
1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
   (1) “Module programming”
   (2) “Programmable Parameters”
3. Select menu in the “IC”.
4. Select an item name, and than select option.

Mazda Modular Diagnostic System (M-MDS) display	Function	Initial setting	Setting contents	Control unit
Lights-on Reminder Volume.	The volume for the lights-on reminder warning alarm can be changed.	High or Off*1	OFF / Low / High	Instrument cluster

*1 : The setting of the lights-on reminder can be changed with the time setting of auto light off system set to Off.

Using center display
- For the setting procedure of the personalization features using the center display, refer to "CENTER DISPLAY PERSONALIZATION FEATURES". (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Blind Spot Monitoring (BSM) System
Using M-MDS
1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
   (1) “Module programming”
   (2) “Programmable Parameters”
3. Select menu in the “IC”.
4. Select an item name, and than select option.

Mazda Modular Diagnostic System (M-MDS) display	Function	Initial setting	Setting contents	Control unit
BSM Volume.	The volume of the blind spot monitoring (BSM) warning alarm can be changed.	High	OFF / Low / High	Instrument cluster

Using center display

- For the setting procedure of the personalization features using the center display, refer to "CENTER DISPLAY PERSONALIZATION FEATURES". (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Lane Departure Warning System (LDWS)

Note

- For personalization of the warning timing and sensitivity, refer to the FORWARD SENSING CAMERA (FSC) PERSONALIZATION FEATURES SETTING PROCEDURE. (See FORWARD SENSING CAMERA (FSC) PERSONALIZATION FEATURES SETTING PROCEDURE.)

Using M-MDS

1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
   (1) “Module programming”
   (2) “Programmable Parameters”
3. Select menu in the “IC”.
4. Select an item name, and than select option.

Mazda Modular Diagnostic System (M-MDS) display	Function	Initial setting	Setting contents	Control unit
LDWS Sound.	The type of the LDWS warning alarm can be changed.	Rumble Strip	Beep / Rumble Strip	Instrument cluster
LDWS Volume.	The volume of the LDWS warning alarm can be changed.	Volume 1	Volume 1 / Volume 2 / Volume 3	Instrument cluster

Using center display


- For the setting procedure of the personalization features using the center display, refer to "CENTER DISPLAY PERSONALIZATION FEATURES". (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Temperature

Note

- When the ambient temperature display is switched, the set A/C cabin temperature display is also changed.

Using instrument cluster (without center display)

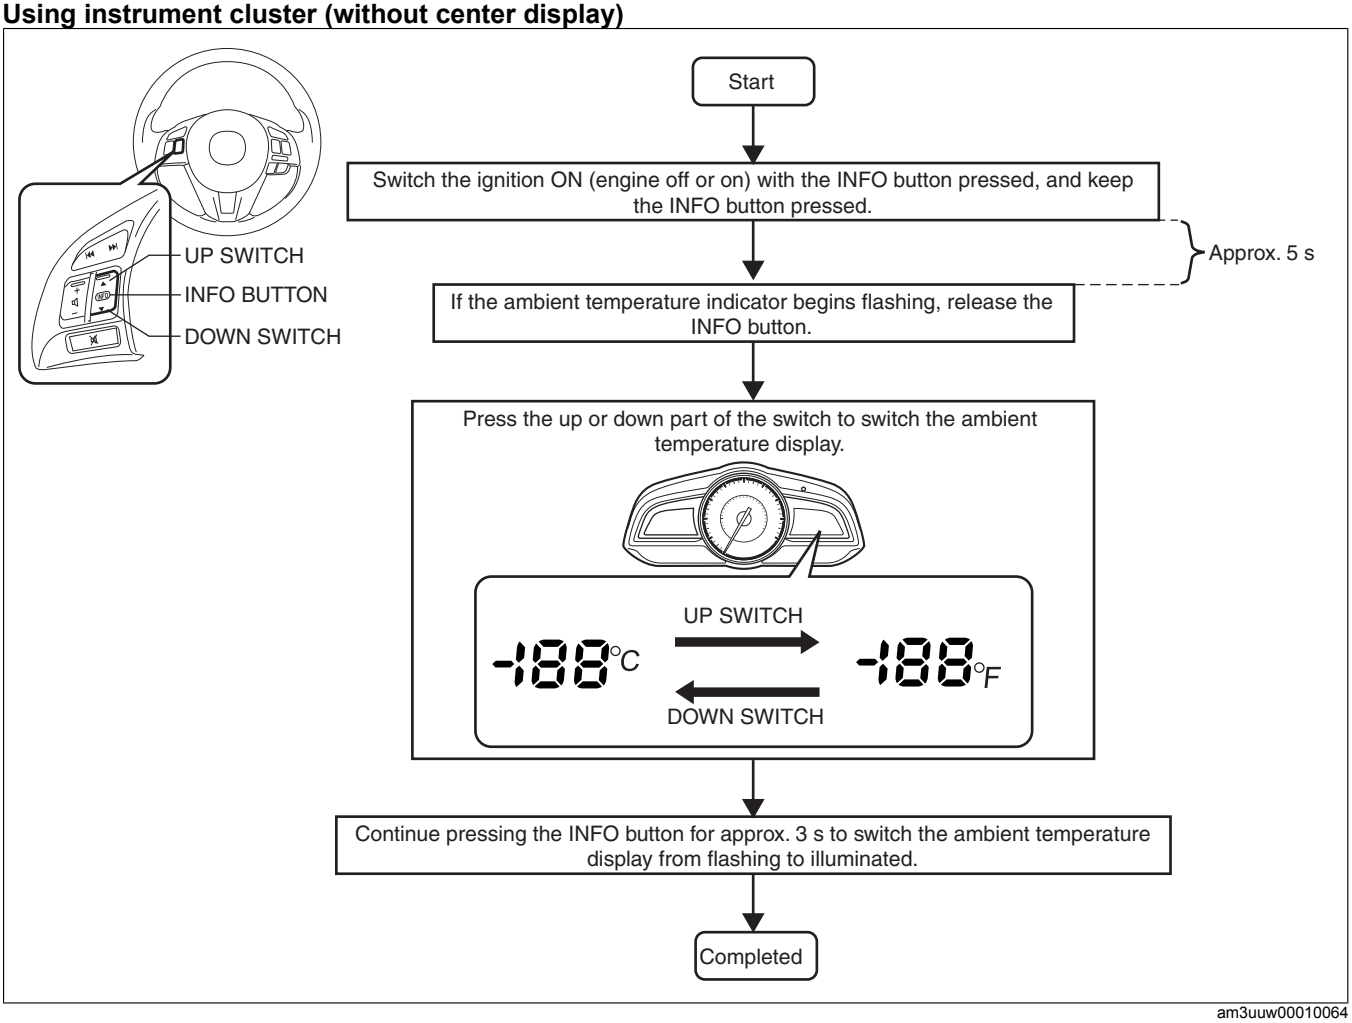

am3uuw00010064

Using center display

- For the setting procedure of the personalization features using the center display, refer to "CENTER DISPLAY PERSONALIZATION FEATURES". (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)