ULTRASONIC SENSOR SHORT-CORD INSPECTION

id092200037000

5HB

Note
- The ultrasonic sensor short-cord is integrated with the license plate light short cord.
- For the ultrasonic sensor short-cord inspection, refer to LICENSE PLATE LIGHT SHORT-CORD INSPECTION. (See LICENSE PLATE LIGHT SHORT-CORD INSPECTION.)


4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
   (2) Rear splash shield (See SPLASH SHIELD REMOVAL/INSTALLATION.)
   (3) Rear bumper (See REAR BUMPER REMOVAL.) (See REAR BUMPER INSTALLATION.)
   (4) Ultrasonic sensor short-cord (See ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.)
3. Verify that the continuity between the ultrasonic sensor short-cord terminals is as indicated in the table.

○—○ : Continuity

Test condition	Terminal												
	Vehicle wiring harness (C-19) side connector					Corner ultrasonic sensor (LH) side connector		Ultrasonic sensor (LH) side connector		Ultrasonic sensor (RH) side connector		Corner ultrasonic sensor (RH) side connector	
	A	B	C	D	E	A	B	A	B	A	B	A	B
Under any condition	○					○		○		○		○	
		○											○
			○				○						
				○							○		
					○				○				

am2zzw00011529

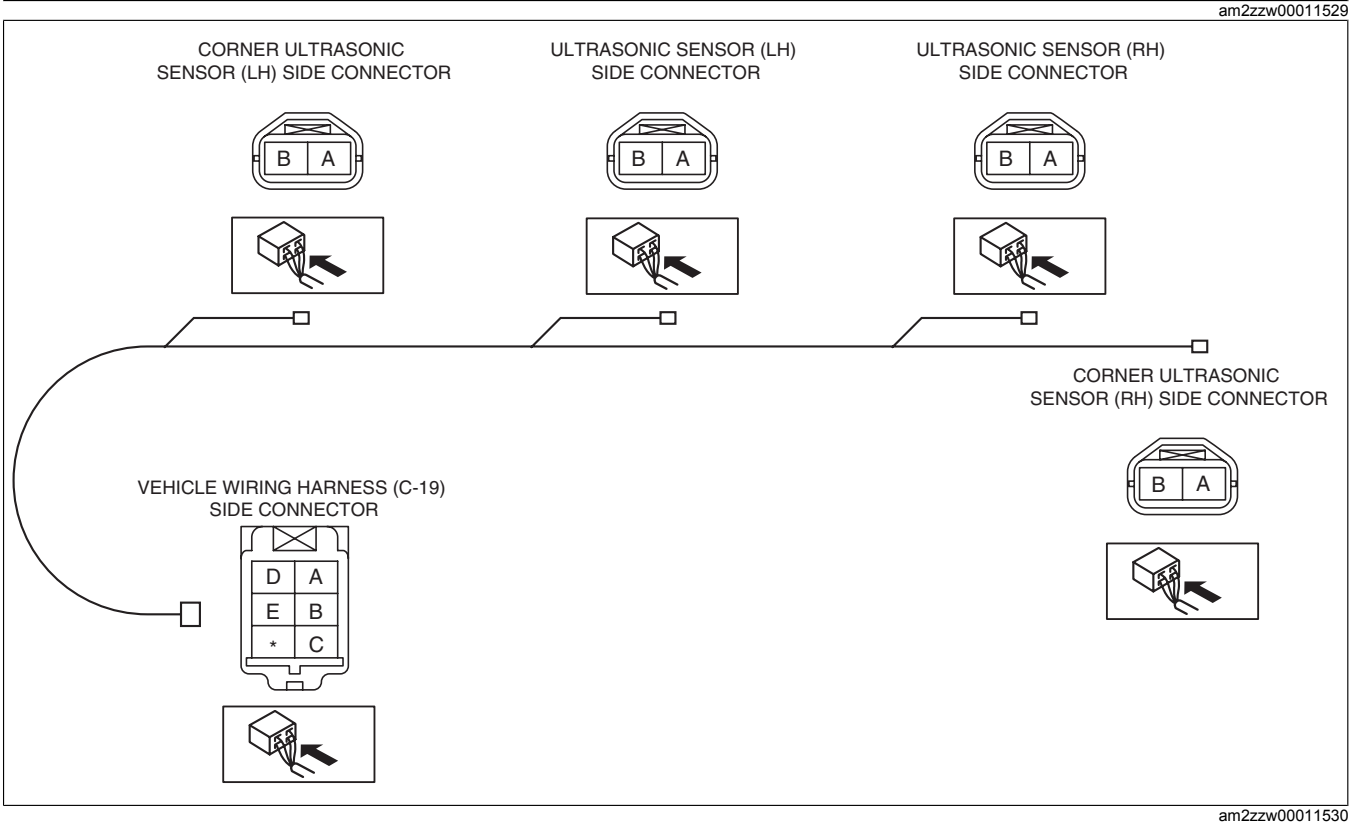

am2zzw00011530

- If not as indicated in the table, replace the ultrasonic sensor short-cord. (See ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.)