
INDICATOR UNIT REMOVAL/INSTALLATION

id092200037500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (12) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (13) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (14) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (15) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (16) Front scuff plate (RH)(See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (17) Front side trim (RH)(See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (18) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (19) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (20) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (21) Center lower panel (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the screw.
4. Remove the indicator unit.
5. Install in the reverse order of removal.

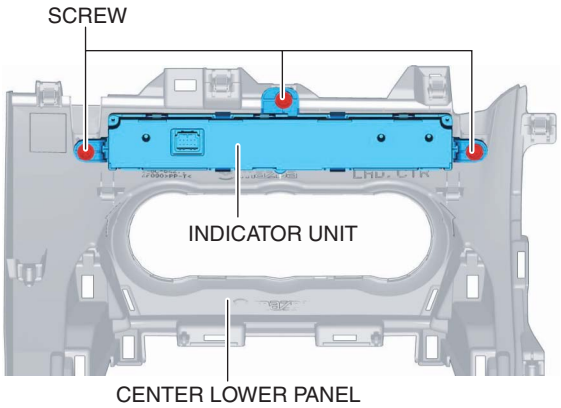

am2zzw00009103