INDICATOR UNIT INSPECTION


id092200037600

Terminal Voltage Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (12) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (13) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (14) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (15) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (16) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (17) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (18) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (19) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (20) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
3. Pull the center lower panel from the body. (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
4. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Verify that the voltages of each of the terminals are as indicated in the terminal voltage table (reference).
   - If the voltage is not as specified in the terminal voltage table (reference), inspect the parts under Inspection item(s) and related wiring harnesses.
     — If the system does not work normally even though the inspection items or related wiring harnesses do not have any malfunction, replace the indicator unit. (See INDICATOR UNIT REMOVAL/INSTALLATION.)

Terminal Voltage Table (Reference)

INDICATOR UNIT WIRING HARNESS SIDE CONNECTOR

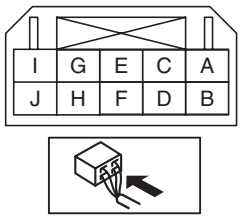

am2zzw00011535


Terminal	Signal name	Connected to	Measurement conditions	Voltage (V)	Inspection item(s)
A	Power supply (IG1)	IG1 relay	Ignition switch ON (engine off or on)	B+	• METER1 10A fuse • IG1 relay
			Ignition switch off or ACC	1.0 or less	
B	Power supply	• INTERIOR 15 A fuse • ROOM 25 A fuse	Under any condition	B+	• INTERIOR 15 A fuse • ROOM 25 A fuse • Battery

Terminal	Signal name	Connected to	Measurement conditions		Voltage (V)	Inspection item(s)
C	Power supply (IG1)*1	Ignition relay (IG1_STAB)	Ignition switch ON (engine off or on)		B+	Ignition relay (IG1_STAB)
			Ignition switch off or ACC		1.0 or less	
	Power supply (IG1)*2	IG1 relay	Ignition switch ON (engine off or on)		B+	• C/U IG1 15A fuse • IG1 relay
			Ignition switch off or ACC		1.0 or less	
D*3	Seat warmer switch signal	Seat warmer control unit	Because this terminal is for communication, determination using terminal voltage inspection is not possible.			
E*4	Passenger air bag deactivation (PAD) ON indicator	Instrument cluster	Ignition switched ON (engine off)	Turn PAD switch on (PAD ON indicator light turns off) and light switch at OFF position	1.0 or less	Instrument cluster
				Turn PAD switch on (PAD ON indicator light turns off) and light switch at TNS position	approx. 11	
				Turn PAD switch off (PAD ON indicator light turns on)	approx. 4	
F	Ground	Body ground	Under any condition		1.0 or less	Body ground
G	Instrument cluster signal	Instrument cluster	Because this terminal is for communication, determination using terminal voltage inspection is not possible.			
H	—	—	—		—	—
I	—	—	—		—	—
J*4	Passenger air bag deactivation (PAD) OFF indicator	Instrument cluster	Ignition switched ON (engine off)	Turn PAD switch on, approx. 60 s (during PAD OFF indicator illumination)	approx. 11	Instrument cluster
				Turn PAD switch off (PAD OFF indicator light turns off) and light switch at OFF position	approx. 4	
				Turn PAD switch off (PAD OFF indicator light turns off) and light switch at TNS position	1.0 or less	

*1 : With i-stop system and without i-ELOOP i-stop
*2 : Without i-stop system or with i-ELOOP
*3 : With seat warmer
*4 : With passenger air bag deactivation (PAD) switch

LED Illumination Inspection
When using M-MDS
1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
    1. "Data logger"
    2. "Module"
    3. "IC"
3. Using the simulation function LCD_SEG, verify that the following warning/indicator lights are turned on.

- If any one of the warning/indicator lights is not displayed, replace the indicator unit. (See INDICATOR UNIT REMOVAL/INSTALLATION.)

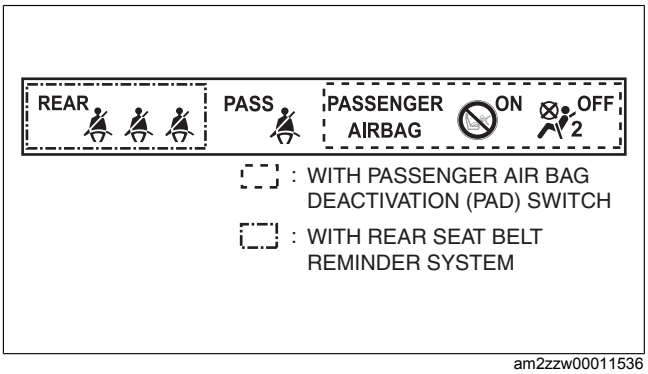

am2zzw00011536


When not using M-MDS

1. Switch the ignition ON (engine off or on).
2. Using a jumper wire, connect indicator unit terminal G and body ground for 5 s or more.

Caution

- **If the terminals are mistakenly connected, vehicle damage or fire could occur. When connecting with the jumper wire, thoroughly verify what terminals are being connected to prevent a miss-connection.**

3. Verify that the following warning/indicator lights are turned on.
   - If any one of the warning/indicator lights is not displayed, replace the indicator unit. (See INDICATOR UNIT REMOVAL/INSTALLATION.)

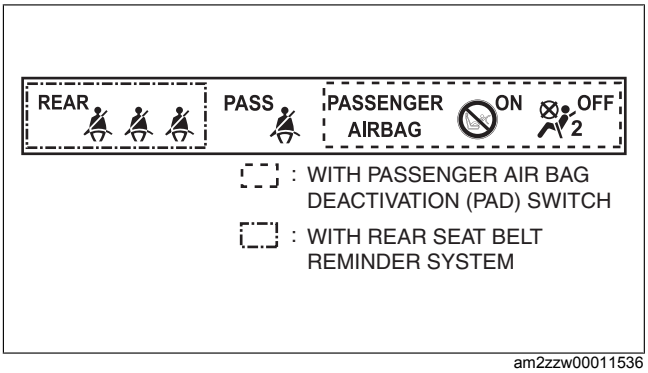

am2zzw00011536