BLIND SPOT MONITORING (BSM) WARNING LIGHT


id092200041000

Purpose

- The blind spot monitoring (BSM) warning lights alert the driver to the presence of a vehicle approaching from behind.

Function


- If an approaching vehicle enters the blind spot monitoring (BSM) system alert area or a vehicle will reach the front end of the alert area within **5.5 s**, the blind spot monitoring (BSM) warning light turns on, and if a turn switch signal is received on the side where the approaching vehicle exists, the warning light flashes.
- The blind spot monitoring (BSM) warning lights flash in the pattern shown in the figure.

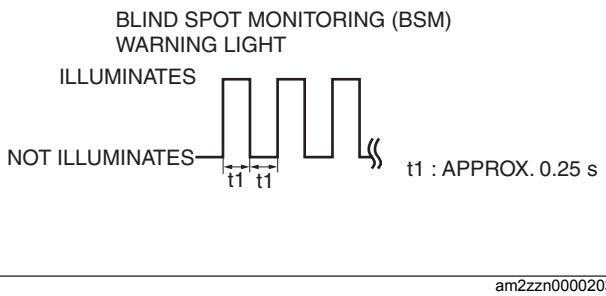

am2zzn00002032

Construction

- The blind spot monitoring (BSM) warning lights are located in the left/right outer mirror glass.
- A highly durable, low power consumption LED has been adopted for the blind spot monitoring (BSM) warning lights.

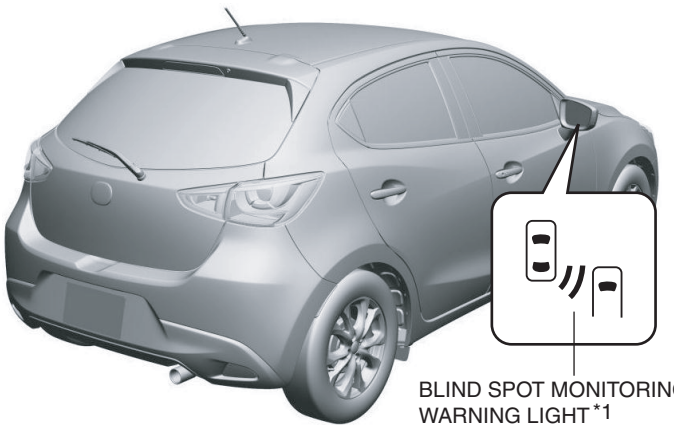

*1: ILLUSTRATION INDICATES RH (SAME AS LH)

am2zzn00002033

Operation

- For the blind spot monitoring (BSM) warning light operation, refer to the BLIND SPOT MONITORING (BSM) SYSTEM. (See BLIND SPOT MONITORING (BSM) SYSTEM.)

Fail-safe

- Not applicable