LIQUID CRYSTAL DISPLAY (LCD)


id092200103500

Outline
- The LCD displays vehicle information in the instrument cluster.

Function/Construction
- The instrument cluster configures the indication of the LCD based on the signals sent via CAN communication from the related modules, and displays it.

Information displayed in LCD
- Information displayed in the LCD is listed in the following table. Refer to the referenced section for details of the displayed information.


Digital speedometer type

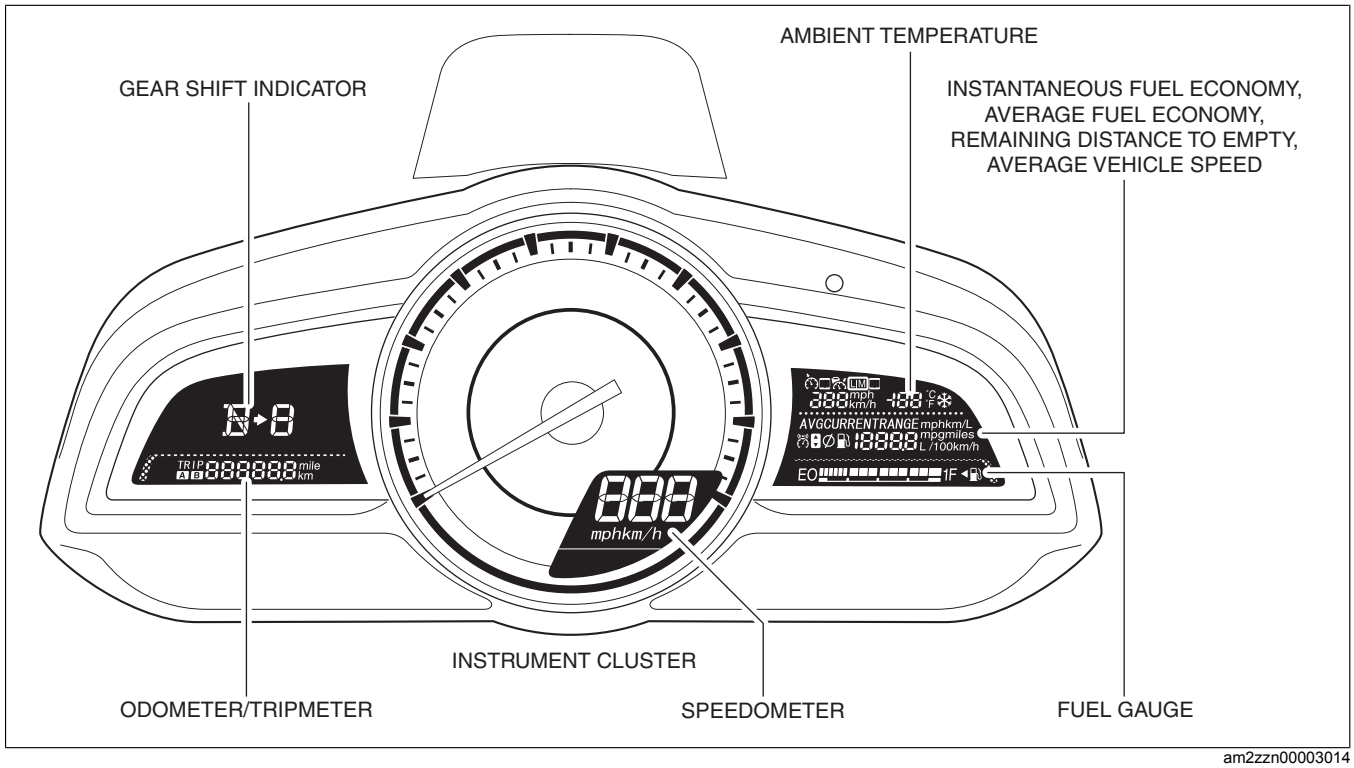

am2zzn00003014

Display information	Reference
Speedometer	(See SPEEDOMETER.)
Fuel gauge	(See FUEL GAUGE.)
Odometer/tripmeter	(See ODOMETER/TRIPMETER.)
Instantaneous fuel economy, average fuel economy, remaining distance to empty, average vehicle speed	(See TRIP COMPUTER INFORMATION SYSTEM.)
Ambient temperature	(See AMBIENT TEMPERATURE DISPLAY.)
Gear shift indicator	(See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)


Analog speedometer type (Type A)

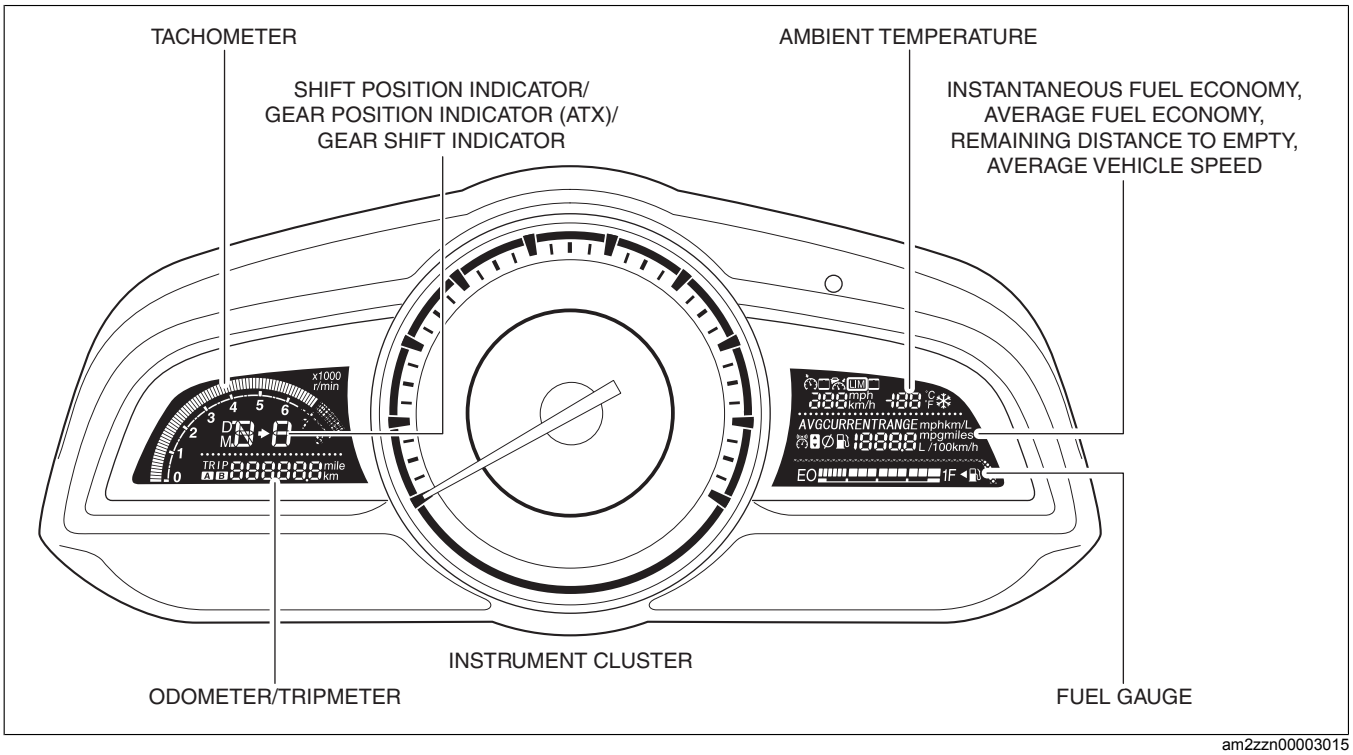

am2zzn00003015

Display information	Reference
Tachometer	(See TACHOMETER.)
Fuel gauge	(See FUEL GAUGE.)
Odometer/tripmeter	(See ODOMETER/TRIPMETER.)
Instantaneous fuel economy, average fuel economy, remaining distance to empty, average vehicle speed	(See TRIP COMPUTER INFORMATION SYSTEM.)
Ambient temperature	(See AMBIENT TEMPERATURE DISPLAY.)
Shift position indicator/gear position indicator (ATX)/gear shift indicator	(See SHIFT POSITION INDICATION [CW6A-EL].) (See SHIFT POSITION INDICATION [EW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [EW6A-EL].) (See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)


Analog speedometer type (Type B)

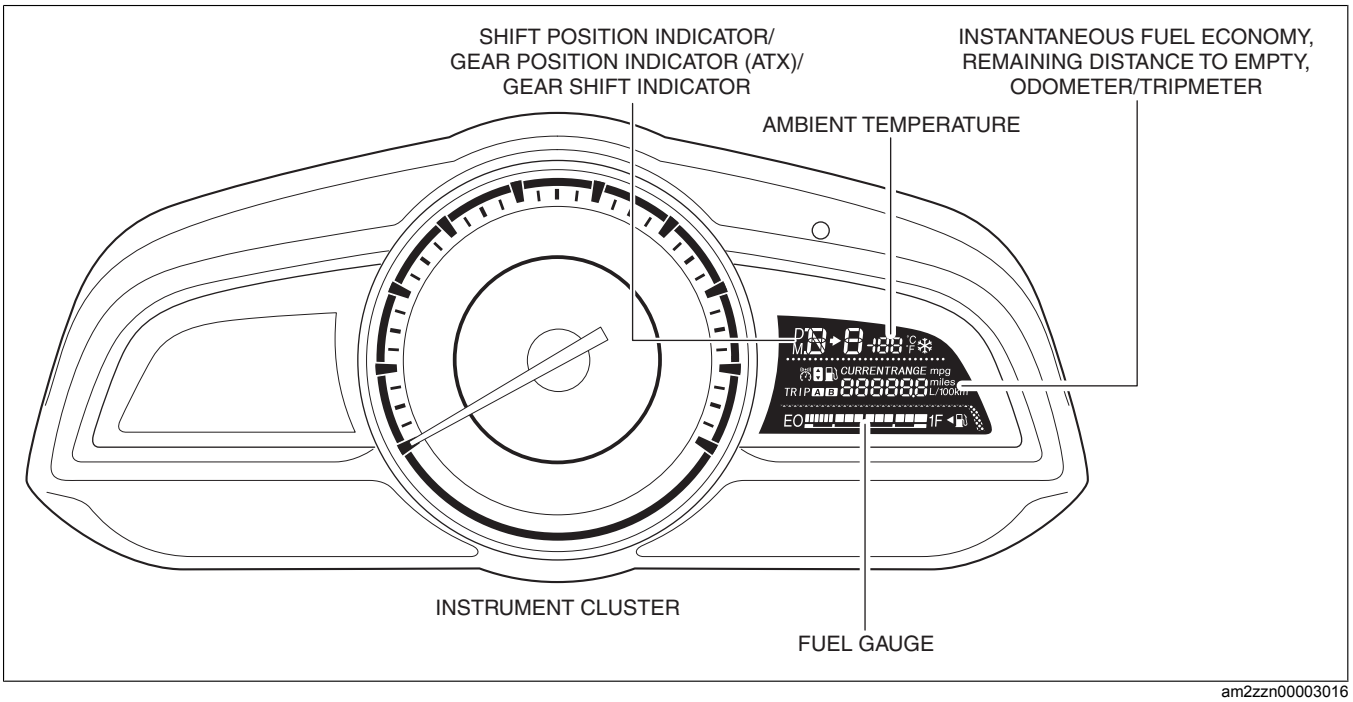

am2zzn00003016

Display information	Reference
Fuel gauge	(See FUEL GAUGE.)
Odometer/tripmeter	(See ODOMETER/TRIPMETER.)
Instantaneous fuel economy, remaining distance to empty	(See TRIP COMPUTER INFORMATION SYSTEM.)
Ambient temperature	(See AMBIENT TEMPERATURE DISPLAY.)
Shift position indicator/gear position indicator (ATX)/gear shift indicator	(See SHIFT POSITION INDICATION [CW6A-EL].) (See SHIFT POSITION INDICATION [EW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [EW6A-EL].) (See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)

Analog speedometer type (Type C)

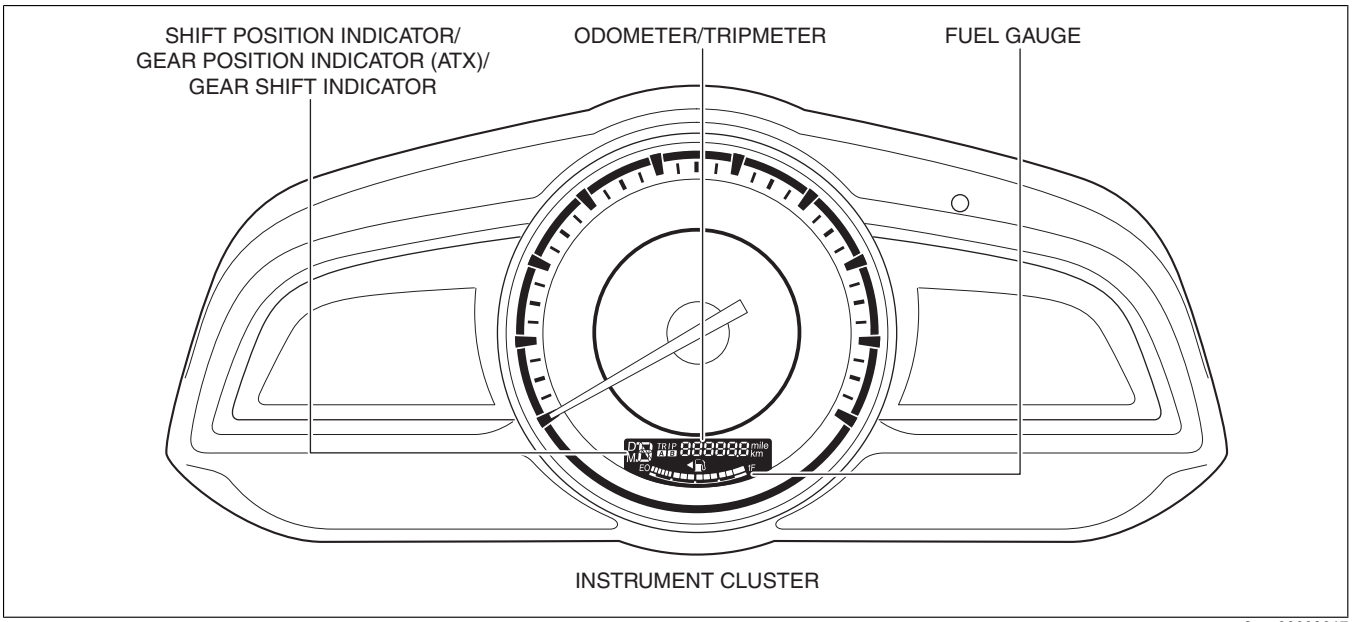

am2zzn00003017

Display information	Reference
Fuel gauge	(See FUEL GAUGE.)
Odometer/tripmeter	(See ODOMETER/TRIPMETER.)

Display information	Reference
Shift position indicator/gear position indicator (ATX)/gear shift indicator	(See SHIFT POSITION INDICATION [CW6A-EL].) (See SHIFT POSITION INDICATION [EW6A-EL].) (See GEAR POSITION INDICATION [CW6A-EL].) (See GEAR POSITION INDICATION [EW6A-EL].) (See GEAR SHIFT INDICATOR [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See GEAR SHIFT INDICATOR [SKYACTIV-D 1.5].)

LCD display content data reset

Caution

- **Previously stored data cannot be recovered after it is reset. When resetting data, explain the reset items to the customer and reset the data after obtaining their consensus.**

- The following information displayed on the LCD can be reset all at once. Refer to the Workshop Manual [INSTRUMENT CLUSTER DATA RESET PROCEDURE] for the resetting procedure.
  Trip computer-related information
  — Average fuel economy
  — Average vehicle speed
  — TRIP value