## ACTIVE DRIVING DISPLAY REMOVAL/INSTALLATION


id092200103700

**Caution**

- **Do not open/close the combiner manually. Otherwise, the combiner could be damaged or it may cause a malfunction.**


**Replacing Active Driving Display as Single Component**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (2) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
   (3) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3. Remove the screws.

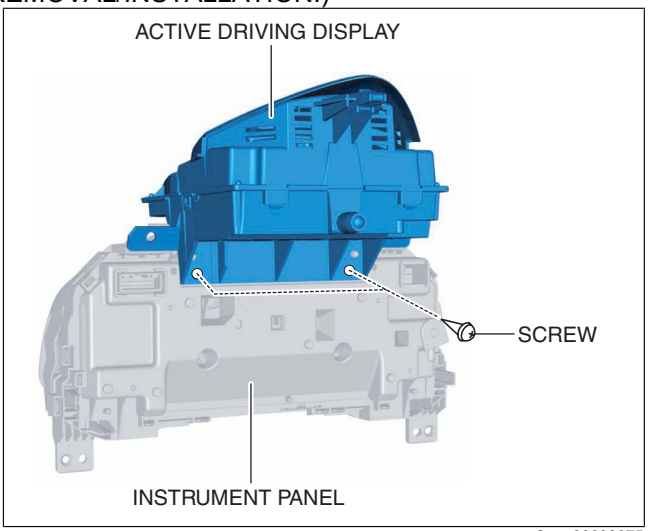


am2zzw00009075

4. While pressing the instrument cluster tabs in the direction of arrows (1) shown in the figure, pull the wiring harness in the direction of arrow (2) and disconnect the wiring harness from the instrument cluster.

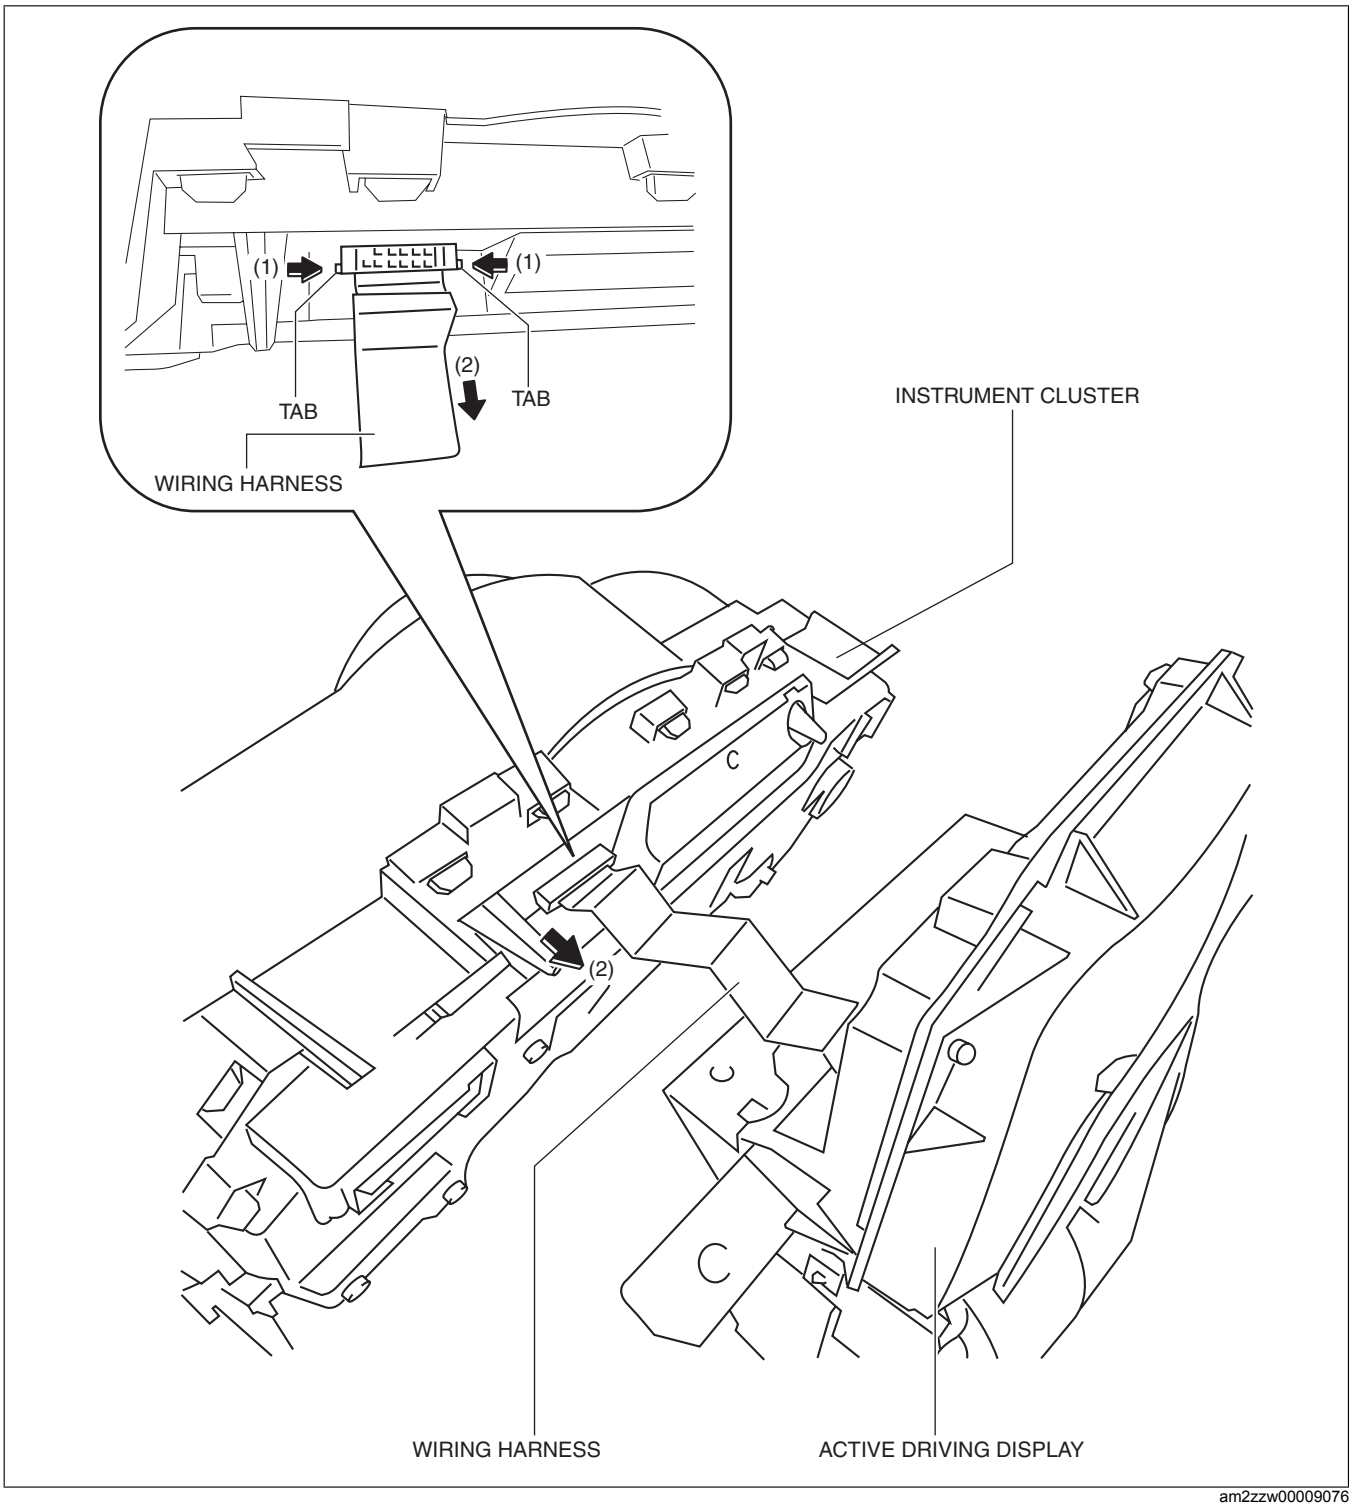



am2zzw00009076

5. Remove the active driving display.
6. Install in the reverse order of removal.(See Active Driving Display Installation Note.)

**Active Driving Display Installation Note**

**Caution**


- **Do not force to pull out/insert the wiring harness end without pushing the tabs, or the wiring harness end hook(s) will be damaged. If the hooks are damaged, it will cause loose and/or oblique fit of the wiring harness end leading to the ADD being inoperative.**

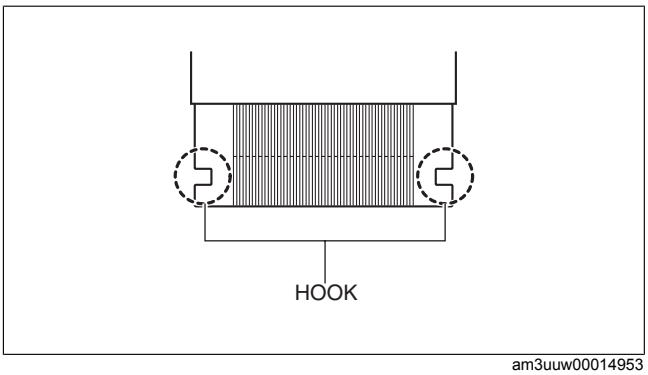


am3uuw00014953

**Note**


- Verify that the wiring harness end is inserted straight and securely locked in the position as shown in figure.

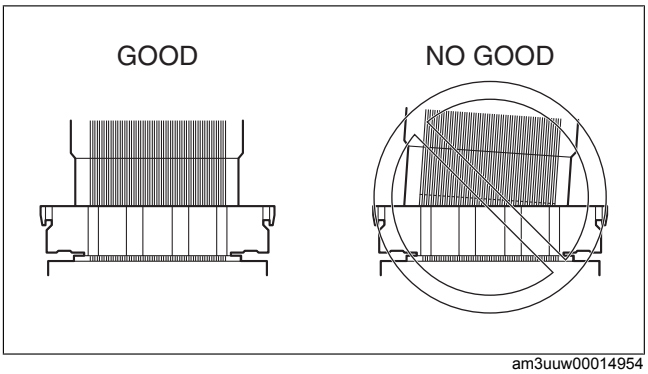


am3uuw00014954


**Replacing Combiner**

1. Refer to ACTIVE DRIVING DISPLAY INSPECTION and stop the combiner at an angle of 10 degrees. (See ACTIVE DRIVING DISPLAY INSPECTION.)
2. Switch the ignition off.
3. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
4. Remove the following parts:
   (1) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (2) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
   (3) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
5. Lift up the cover hook in the direction of arrow (1) shown in the figure, move it in the direction of arrow (2), and detach the cover hooks from the active driving display.

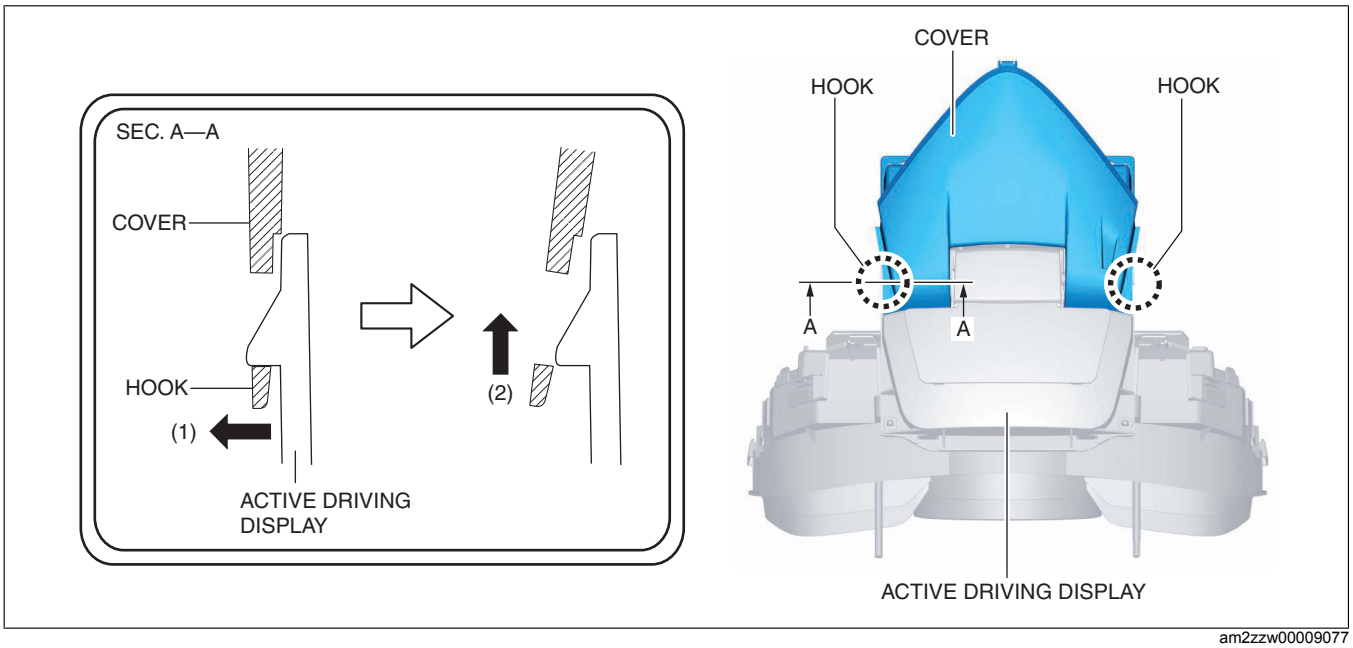



am2zzw00009077

6. Press the cover tab in the direction of arrow (1) shown in the figure, move it in the direction of arrow (2), and detach the cover tabs from the active driving display.

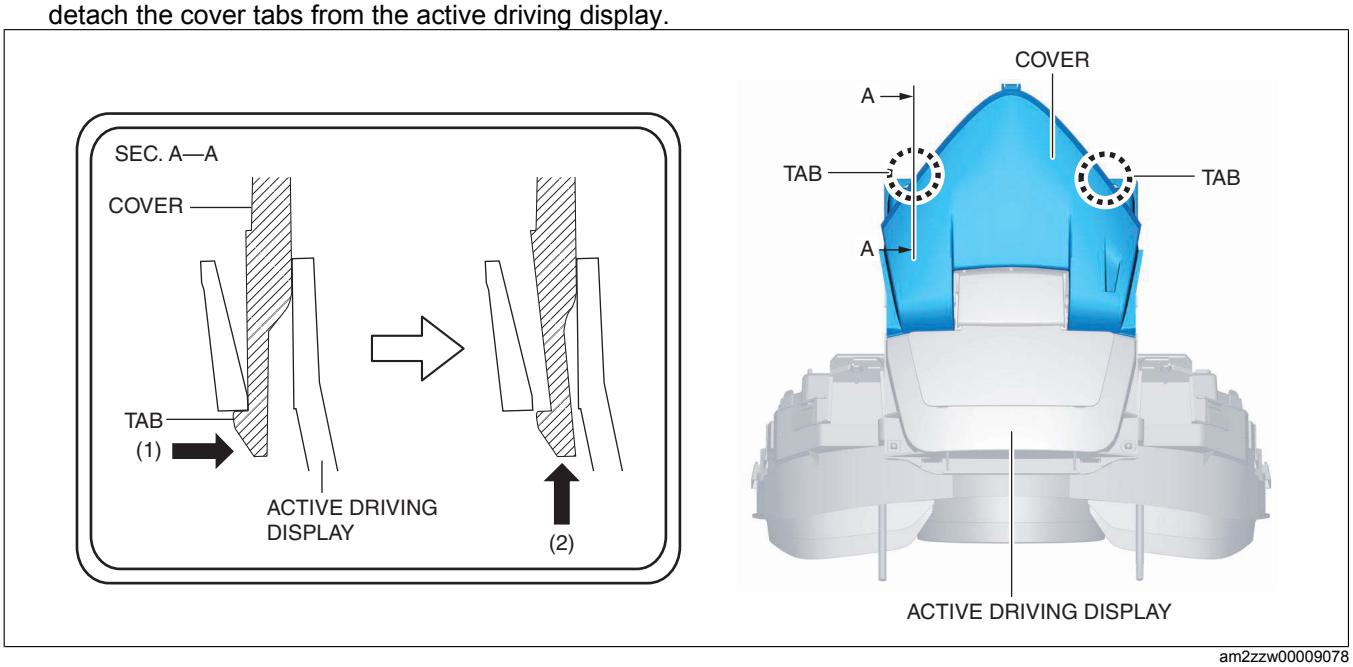


am2zzw00009078

7. Remove the cover.

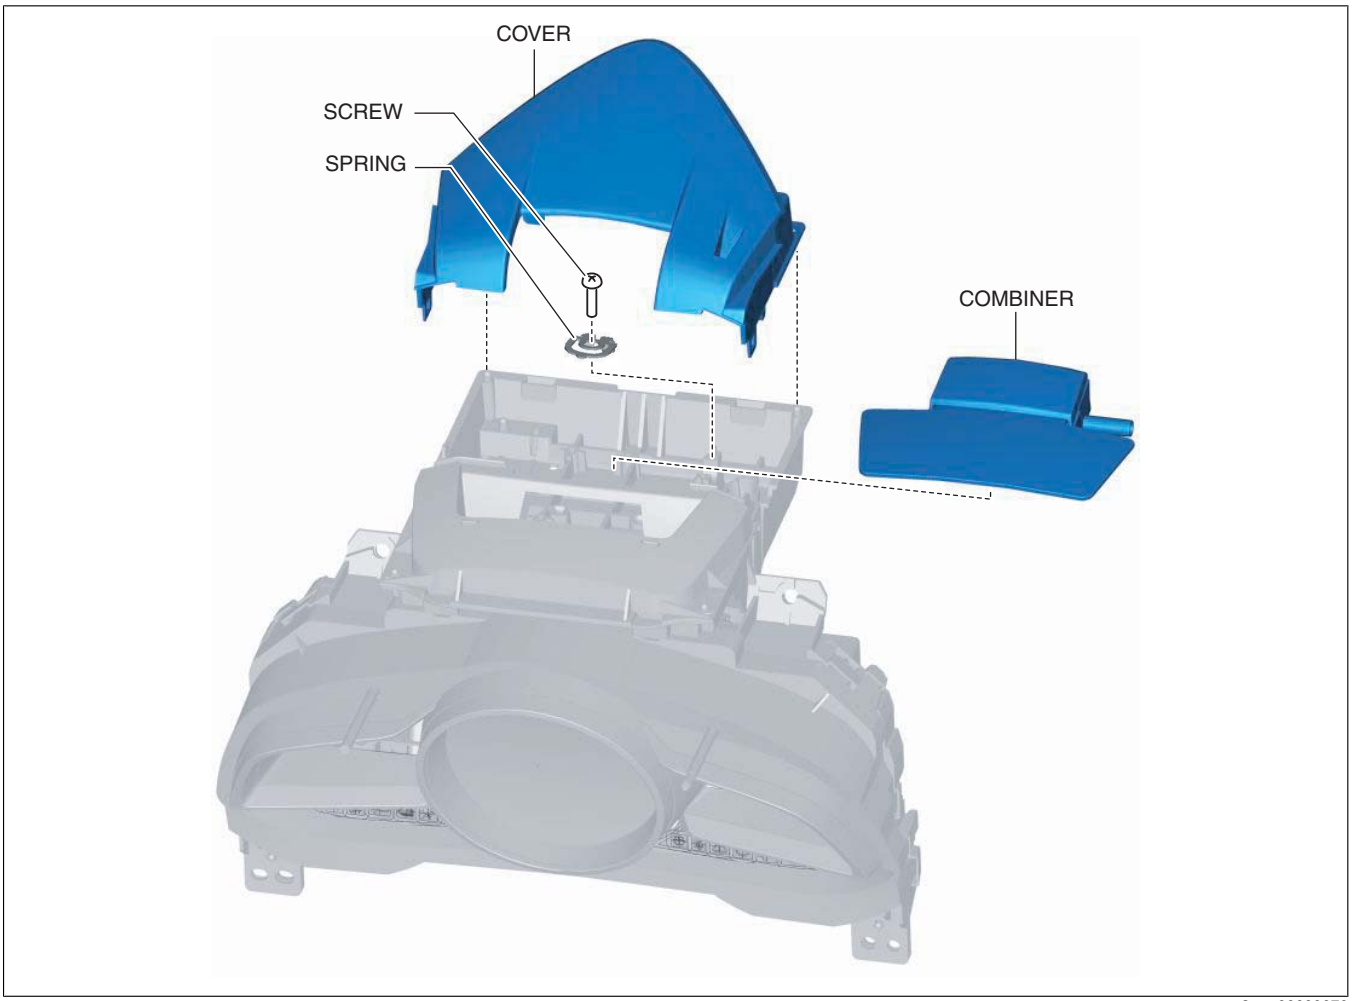



am2zzw00009079

8. Remove the screw.
9. Remove the spring.
10. Remove the combiner. (See Combiner assembly note.)
11. Install in the reverse order of removal.

**Combiner assembly note**

- For the combiner assembly, verify that the combiner shaft is within 0.5 mm {0.02 in} or more from the end surface of the bracket.

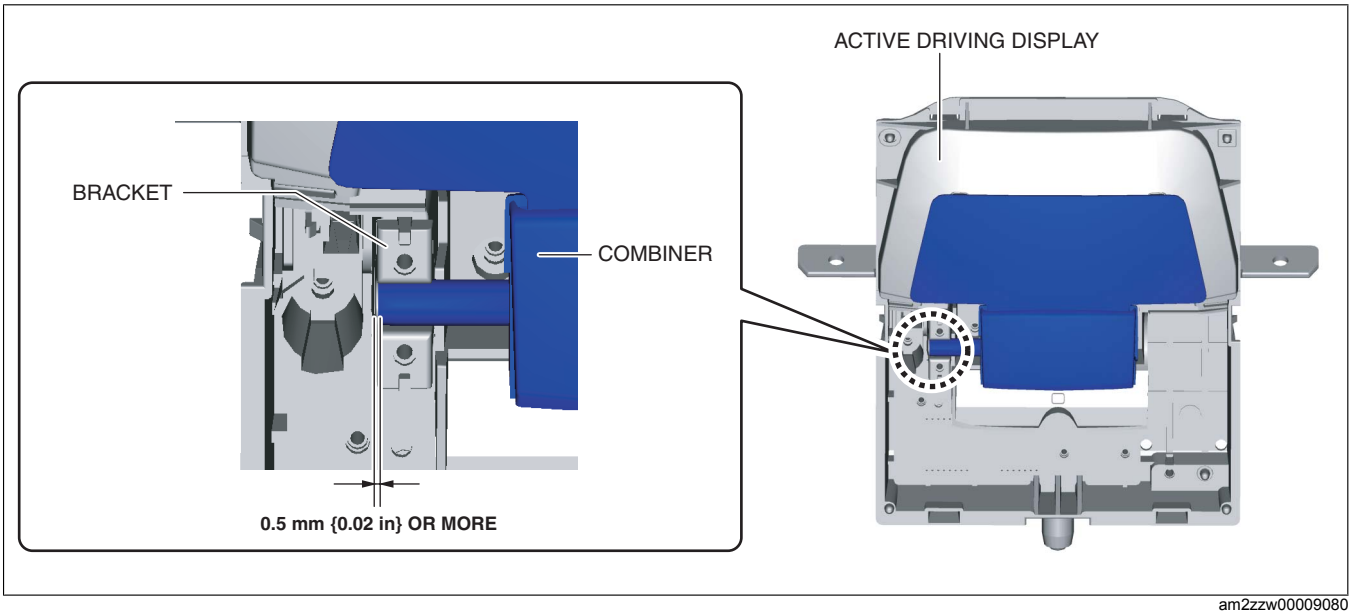


am2zzw00009080