CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE

id094000002900

Caution
- **The personalization feature may not be set correctly if [Not equipped] is selected in the setting displayed on the M-MDS. Do not select [Not equipped] in the setting displayed on the M-MDS.**

Note
- Settings of some personalization features displayed on the M-MDS cannot be switched depending on the vehicle specification.

Lighting Systems

Turn light system (Australian, European (L.H.D. U.K.) specs.) (Using M-MDS)

1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Three-Flash Turn Signal	The turn light system can be switched between operable and inoperable.	On	Off/On	BCM

Turn light system Turn light system (Except Australian, European (L.H.D. U.K.) specs.) (Using M-MDS)

1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Three-Flash Turn Signal	The turn light system can be switched between operable and inoperable.	Off	Off/On	BCM

Turn light system (Using center display)

- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Auto light system (Using M-MDS)

1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Auto Headlight On	Auto light sensitivity can be changed.	Standard (All Others)	Extra Low (Except Japan)/Low (All Others)/Standard (All Others)/High (Except Japan)/Extra High (Except Japan)	BCM

Auto light system (Using center display)

- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Note
- When the system is set to [Extra High] or [High], each light turns on when the ambient light is brighter than when the system is set to [Standard] because the illumination level required to turn on the headlights LO, TNS and panel light increases. When the system is set to "Extra Low" or "Low", because the illumination level required to turn on the headlights LO, TNS and panel light decreases, each light turns on when the ambient light is darker than when the system is set to "Standard".

- The personalization feature may not be set correctly if [Jpan Only] such as [Extra High (Jpan Only)] is selected. Do not select [Jpan Only].

Headlight system (European (L.H.D. U.K.) specs.) (Using M-MDS)
1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Coming Home Light operation time	The coming home light system operation time can be switched.	30 seconds.	0 seconds./30 seconds./60 seconds./ 90 seconds./120 seconds.	BCM
Leaving Home Light system	The leaving home light system can be switched between operable and inoperable.	On	Off/On	BCM

Headlight system (Except European (L.H.D. U.K.) specs.) (Using M-MDS)
1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Coming Home Light operation time	The coming home light system operation time can be switched.	30 seconds.	0 seconds./30 seconds./60 seconds./ 90 seconds./120 seconds.	BCM
Leaving Home Light system	The leaving home light system can be switched between operable and inoperable.	Off	Off/On	BCM

Headlight system (Using center display)
- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Room light control system (Using M-MDS)
1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Interior Light Timeout-Door Open.	• The map light illumination time after a door is opened can be changed. • The cargo compartment light illumination time after the liftgate is opened can be changed.	30 minutes.	30 minutes./ 60 minutes./10 minutes.	BCM
Interior Lighting Timeout-Door Closed	The map light illumination time after all doors are closed can be changed.	15 seconds.	15 seconds./7.5 seconds./30 seconds./ 60 seconds.	BCM

Room light control system (Using center display)
- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Wiper/washer System
Auto wiper system (Using M-MDS)
1. Connect the M-MDS to DLC-2.

2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Auto Wiper	The auto wiper function can be disabled.	On (Rain Sensing)	On (Rain Sensing)/Off (Intermittent)*1	BCM

*1 : When the system is set to [Off (Intermittent)] and the windshield wiper switch is in the AUTO position, the windshield wipers operate intermittently.

Auto wiper system (Using center display)
- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Door Lock System
Power door lock system (Using M-MDS) (Except Australian, European (L.H.D. U.K.) specs.)
1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
   - Select the "Module Programming".
   - Select "Programmable Parameters".
   - Select menu in the BCM.
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Auto Door Lock Mode	Auto door lock function can be changed.	Lock: Driving, Unlock: IGN Off.	Off/Lock: When Driving, Unlock: In Park./Lock When Driving./Lock: Driving, Unlock: IGN Off./Lock When Shifting Out Of P./Lock: Shift From P, Unlock: In P.	BCM


Power door lock system (Using center display) (Except Australian, European (L.H.D. U.K.) specs.)
- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Power door lock system (Setting method by operation of door lock switch) (Except Australian, European (L.H.D. U.K.) specs.)
- The following setting can be changed by operation of the door lock switch.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Auto Door Lock Mode	Auto door lock function can be changed.	Lock: Driving, Unlock: IGN Off.	Off/Lock: When Driving, Unlock: In Park./Lock When Driving./Lock: Driving, Unlock: IGN Off./Lock When Shifting Out Of P./Lock: Shift From P, Unlock: In P.	BCM

- Change the setting for the auto door lock referring to the following procedure:

  Note
  - If any of the following conditions is met during procedure, the setting change for the auto door lock is stopped.
    — Lock side of the door lock switch is pressed while in the personalization mode.
    — Unlock side of the door lock switch is pressed 7 times while in the personalization mode. (ATX)
    — Unlock side of the door lock switch is pressed 4 times while in the personalization mode. (MTX)

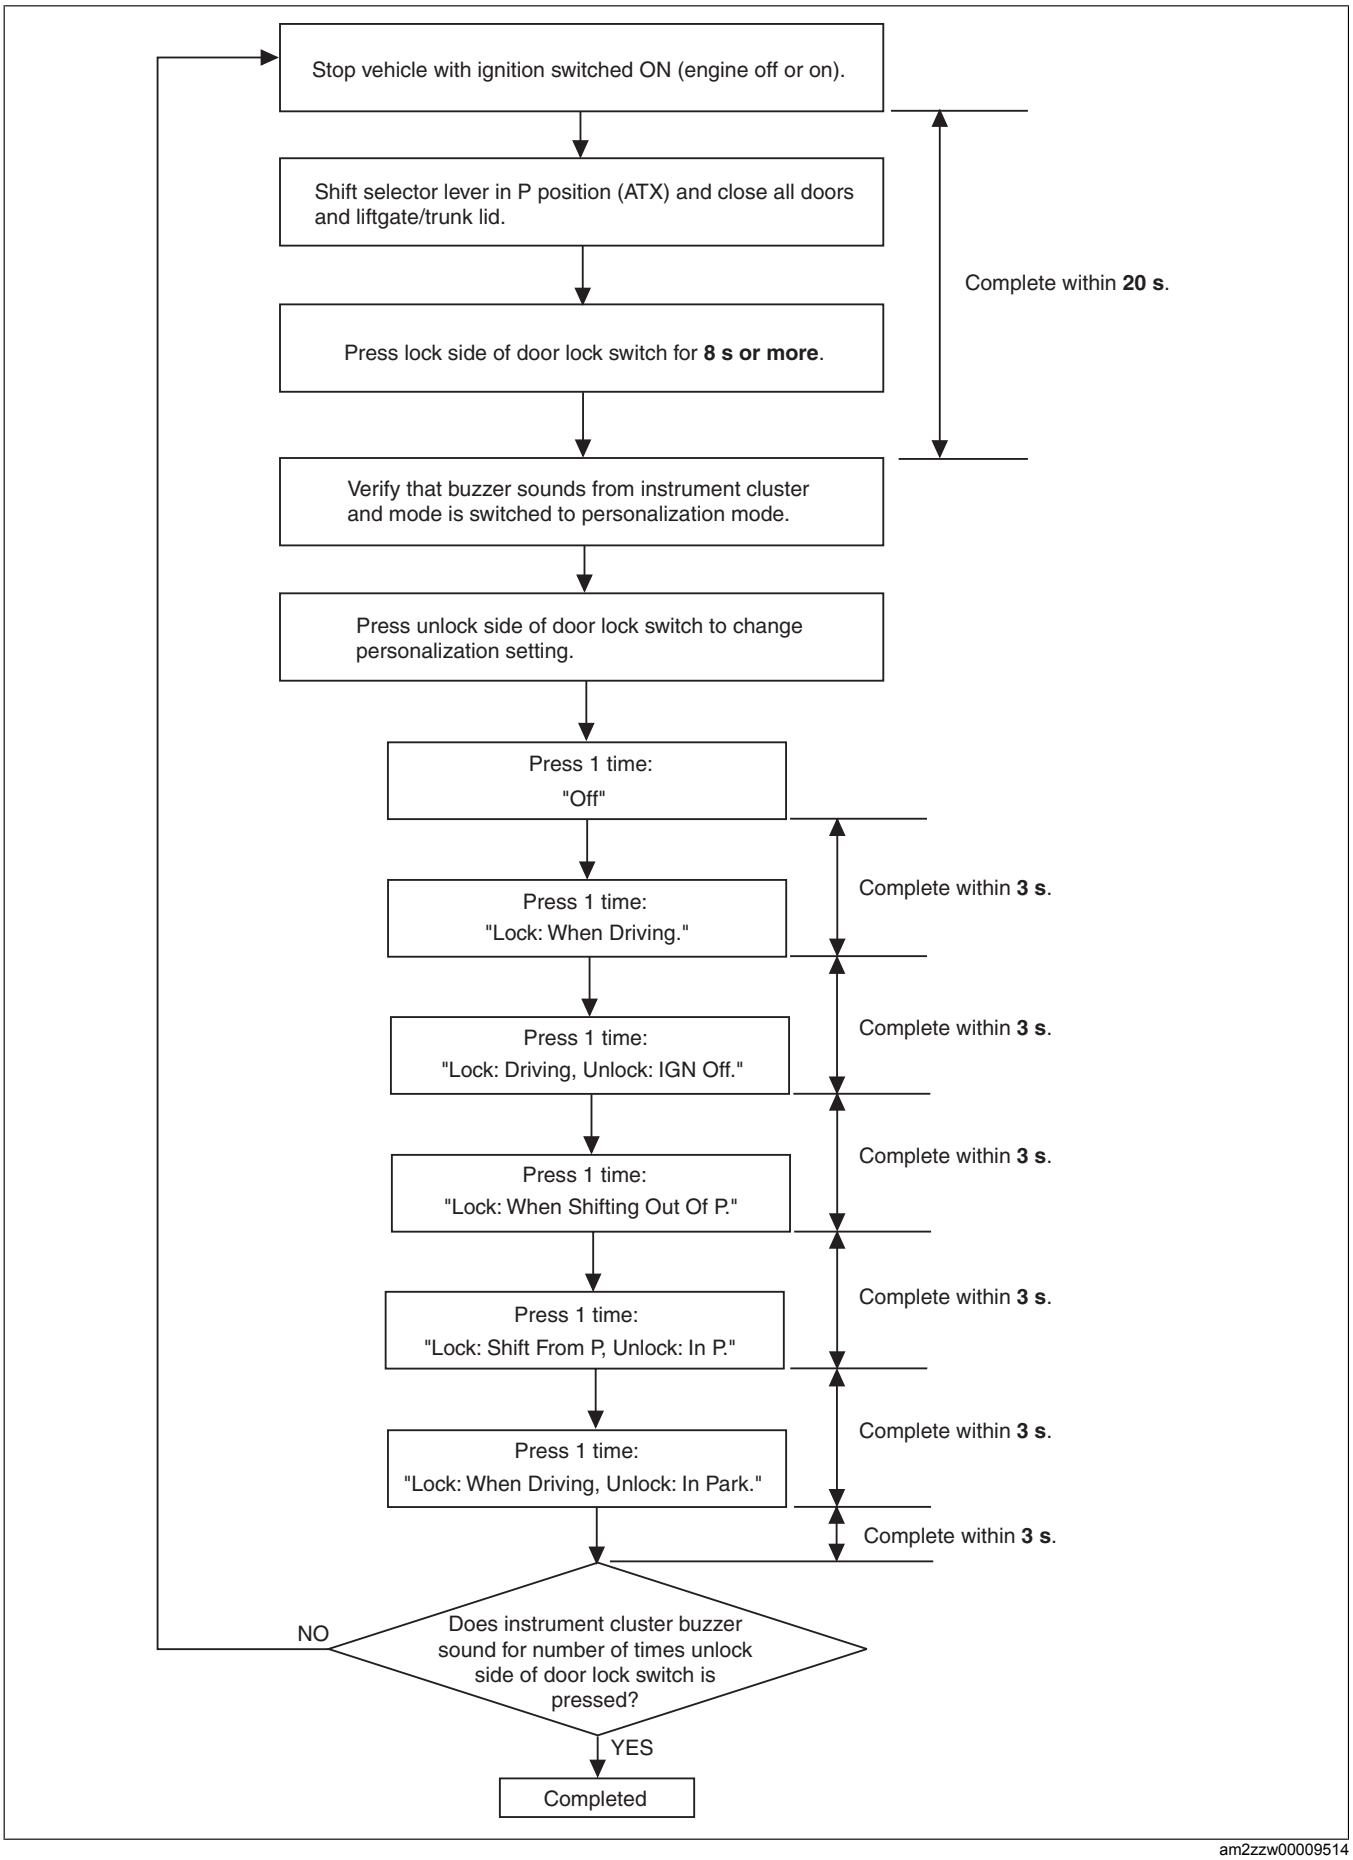

am2zzw00009514