
BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION

id094000003800

Note
- The BCM prior to replacement stores the vehicle specification information.
- A new BCM does not store any vehicle specification information.
- When replacing the BCM, the following two methods are available for storing the vehicle specification information in the BCM.
  - — Auto configuration: When the ignition is switched ON, the BCM reads the vehicle specification information sent via CAN communication from the instrument cluster, and stores the vehicle specification information. However, because the personalization information is returned to the initial values, it is necessary to store the personalization information before replacing the BCM and perform the resetting procedure for the personalization information.
  - — Configuration using M-MDS: The BCM reads the vehicle specification information and the personalization information from the pre-replacement BCM, and writes the information to a new BCM.
- When performing the auto configuration, store the personalization information before replacing the BCM and perform the resetting procedure for the personalization information because the personalization information is returned to the initial values.


L.H.D.

1. If the BCM is replaced and the auto configuration is not performed, perform the configuration using the M-MDS. (See BODY CONTROL MODULE (BCM) CONFIGURATION (USING READ/WRITE FUNCTION).)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the following parts:
   1. Front scuff plate (LH). (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   2. Front side trim (LH). (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   3. Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   4. Auto leveling control module (with headlight auto leveling system) (See AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.)
4. Remove the vehicle wiring harness clip from the bracket component.

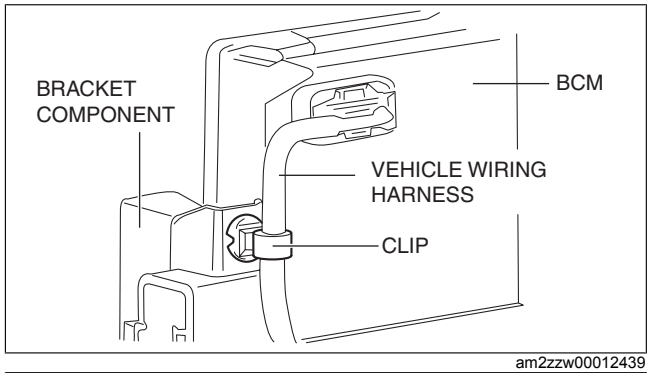


am2zzw00012439

5. Disconnect the connector.

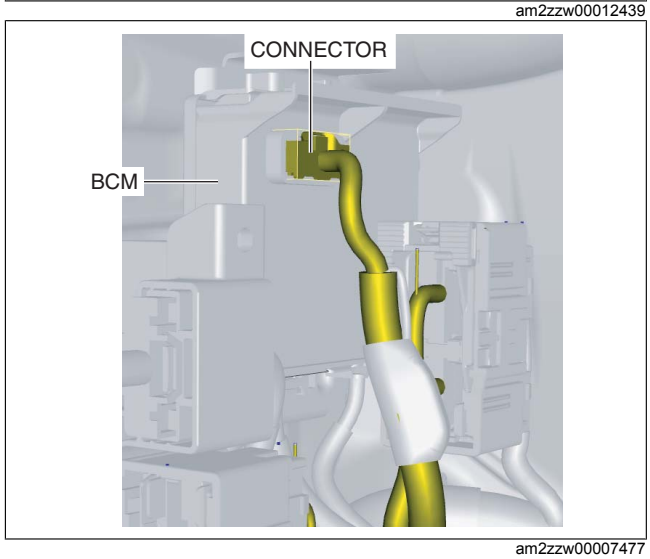


am2zzw00007477

6. While pressing the BCM tab in the direction of arrow (1) shown in the figure, pull it in the direction of arrow (2) to detach the tab from the body.

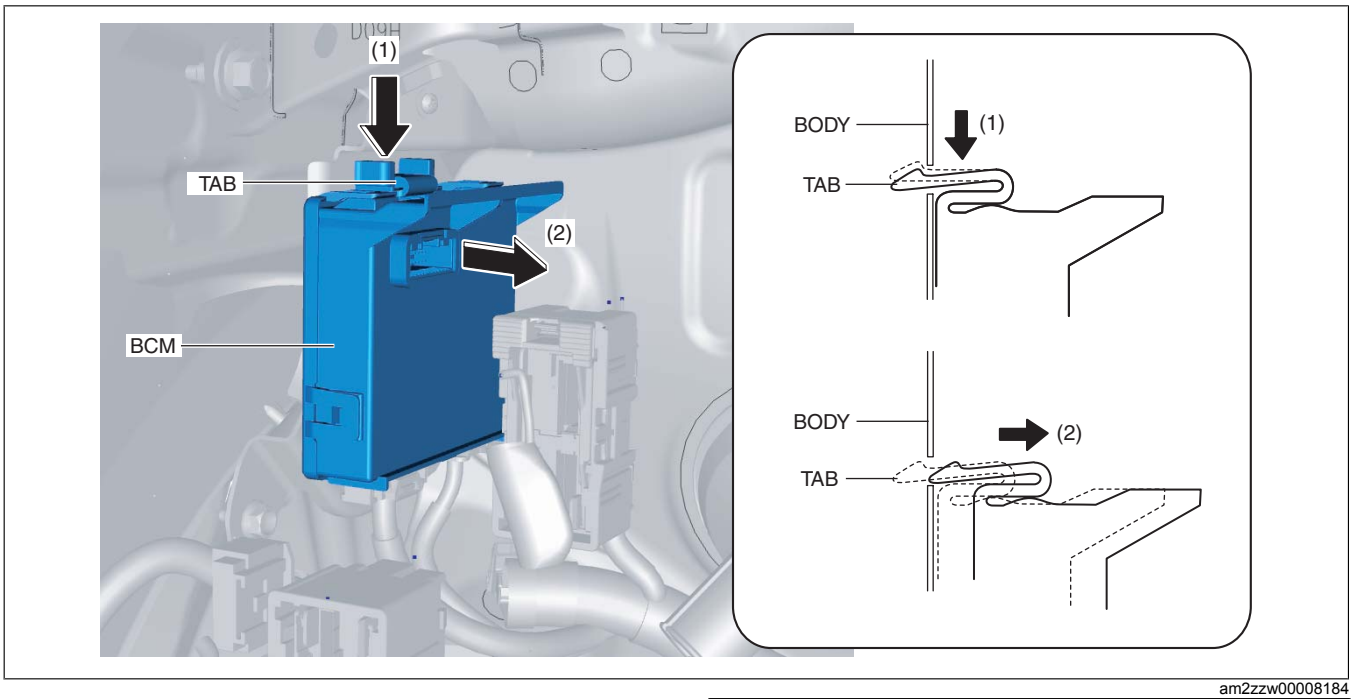


am2zzw00008184

7. Pull the BCM in the direction of the arrow shown in the figure and detach the hook from the body.

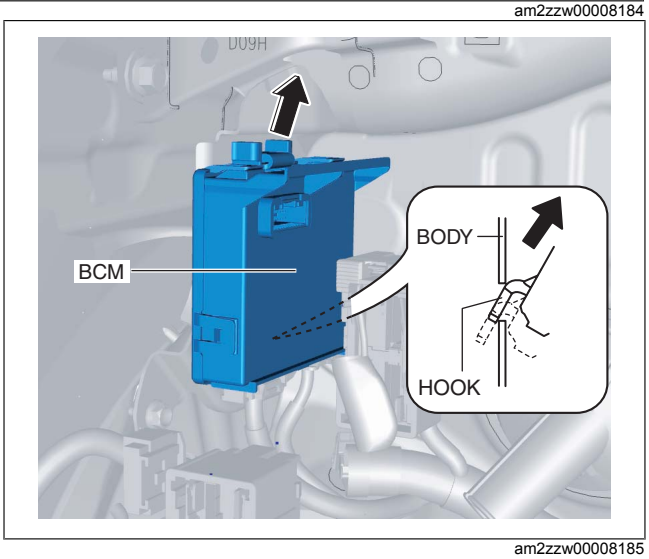


am2zzw00008185

8. Rotate the BCM in the direction of the arrow shown in the figure and remove it.

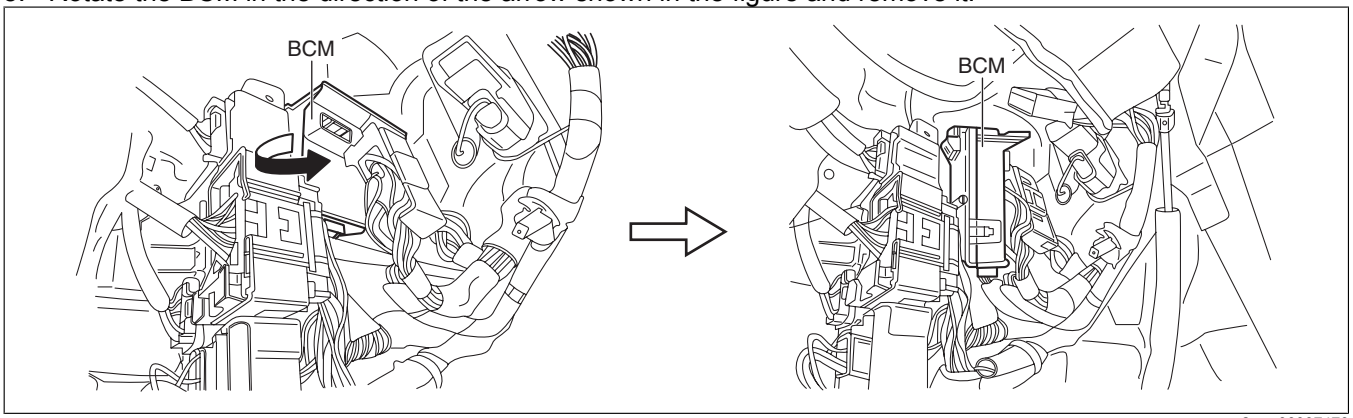

am2zzw00007479


9. Disconnect the connectors.
10. Remove the BCM.
11. Install in the reverse order of removal.
12. If the BCM is replaced and the auto configuration is performed, perform the auto configuration using the following procedure.
    (1) Switch the ignition ON (engine off or on) and wait for **1 min or more**.
    (2) Switch the ignition off and wait for **3 s or more**.
    (3) Switch the ignition ON (engine off or on) and complete the BCM auto configuration.
    (4) Using the M-MDS, verify that DTCs U2300:54, U2300:55, or U2300:56 is not displayed.
        - If DTC U2300:54, U2300:55, or U2300:56 is displayed, go to the DTC troubleshooting procedure. (See DTC U2300:54 [BCM].) (See DTC U2300:55 [BCM].) (See DTC U2300:56 [BCM].)

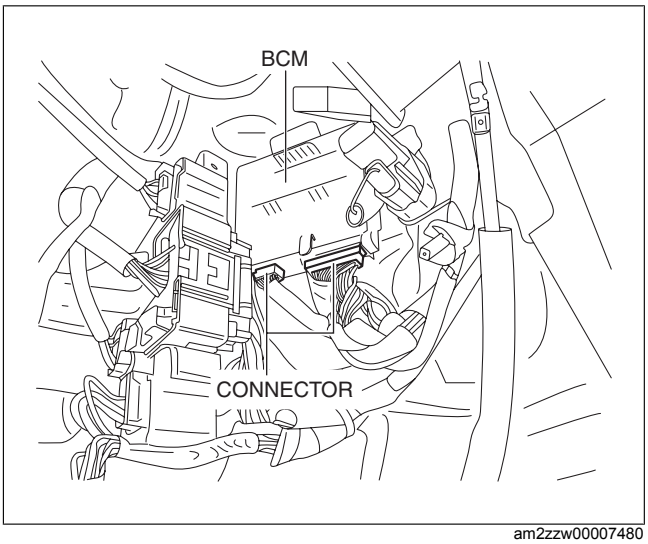

am2zzw00007480


R.H.D.

1. If the BCM is replaced and the auto configuration is not performed, perform the configuration using the M-MDS. (See BODY CONTROL MODULE (BCM) CONFIGURATION (USING READ/WRITE FUNCTION).)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the following parts:
    1. Front scuff plate (LH). (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
    2. Front side trim (LH). (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
    3. Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
    4. Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
    5. Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
    6. Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
    7. Auto leveling control module (with headlight auto leveling system) (See AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.)
4. Disconnect the connectors.

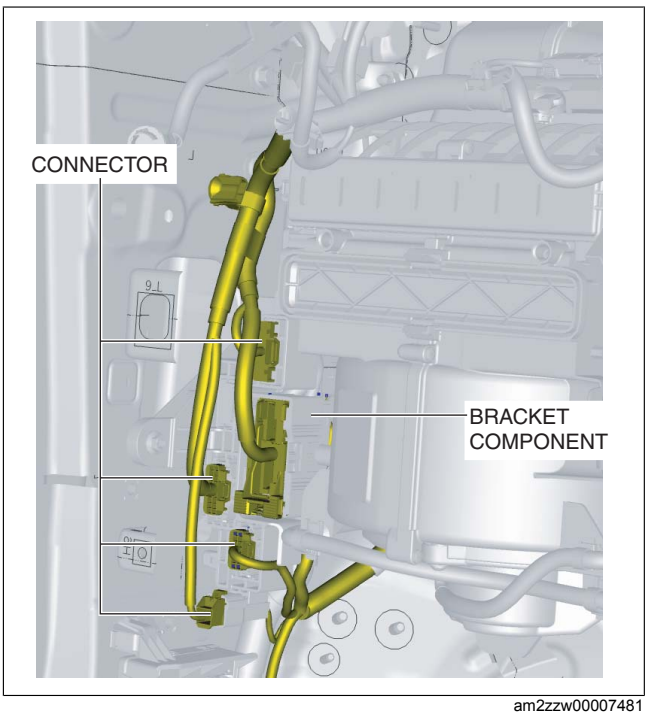


am2zzw00007481

5. While detaching the tab by pressing part A in the direction of arrow (1) shown in the figure, move the lever in the direction of arrow (2) and disconnect the connector in the direction of arrow (3).

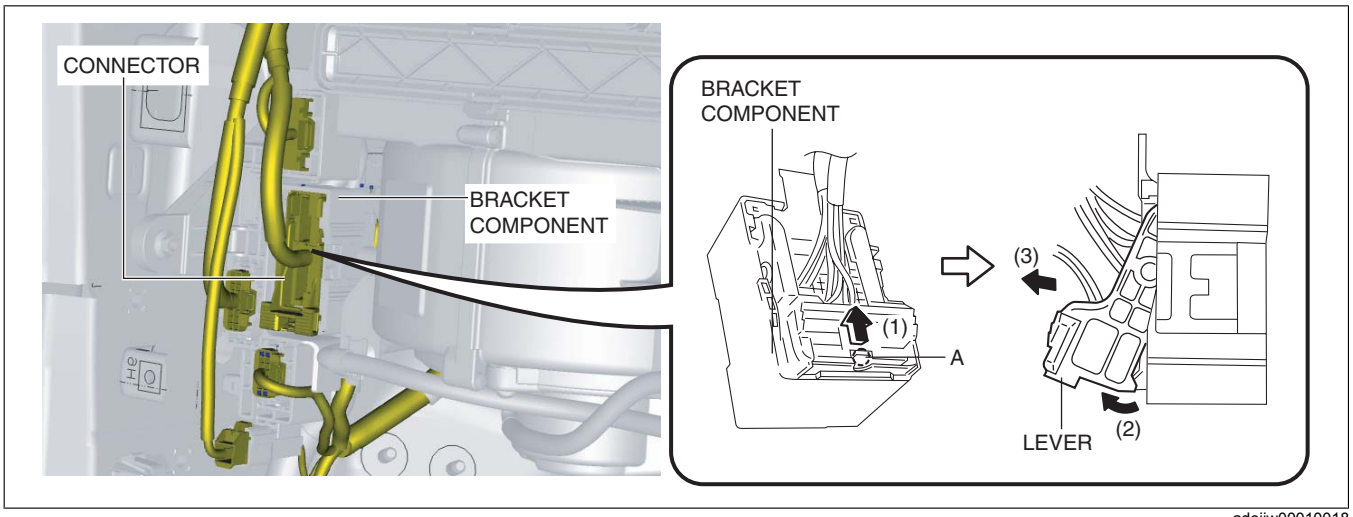


adejjw00010018

6. Remove the vehicle wiring harness clip from the bracket component.

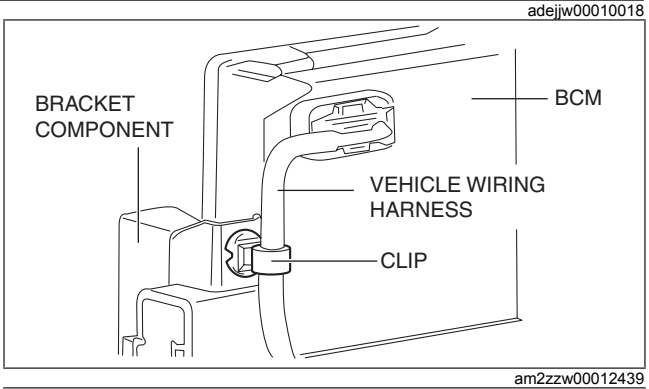


am2zzw00012439

7. Remove the nut.

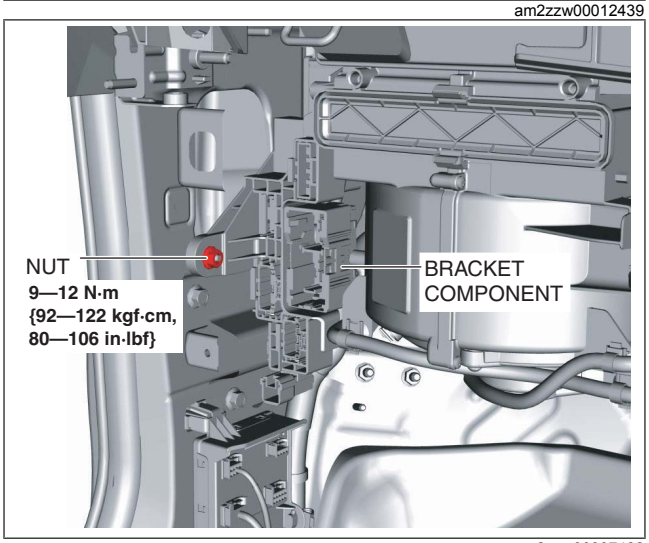


am2zzw00007482

8. Insert the remover tool into the position shown in the figure.

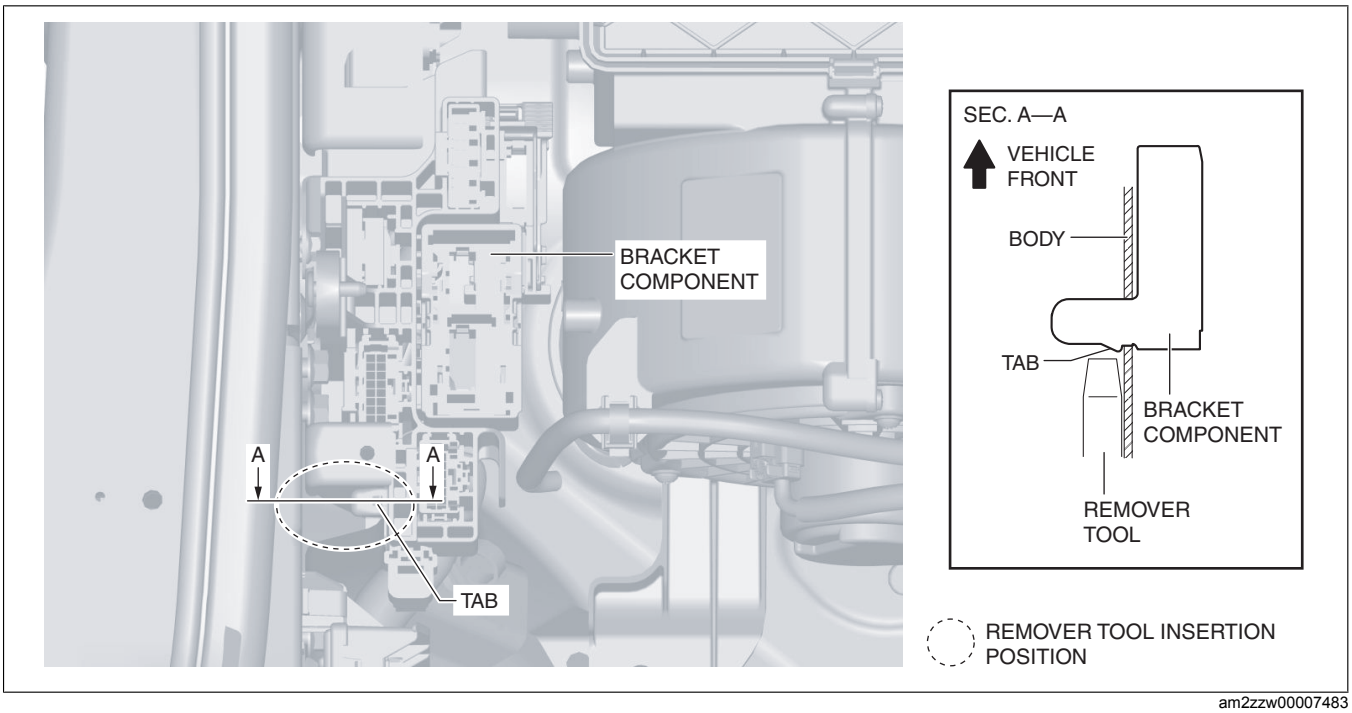


am2zzw00007483

9. Detach the tab from the body using the remover tool and remove the bracket component from the body.
10. Move the bracket component in the order of the arrows shown in the figure and set it aside so that it does not interfere with the servicing.

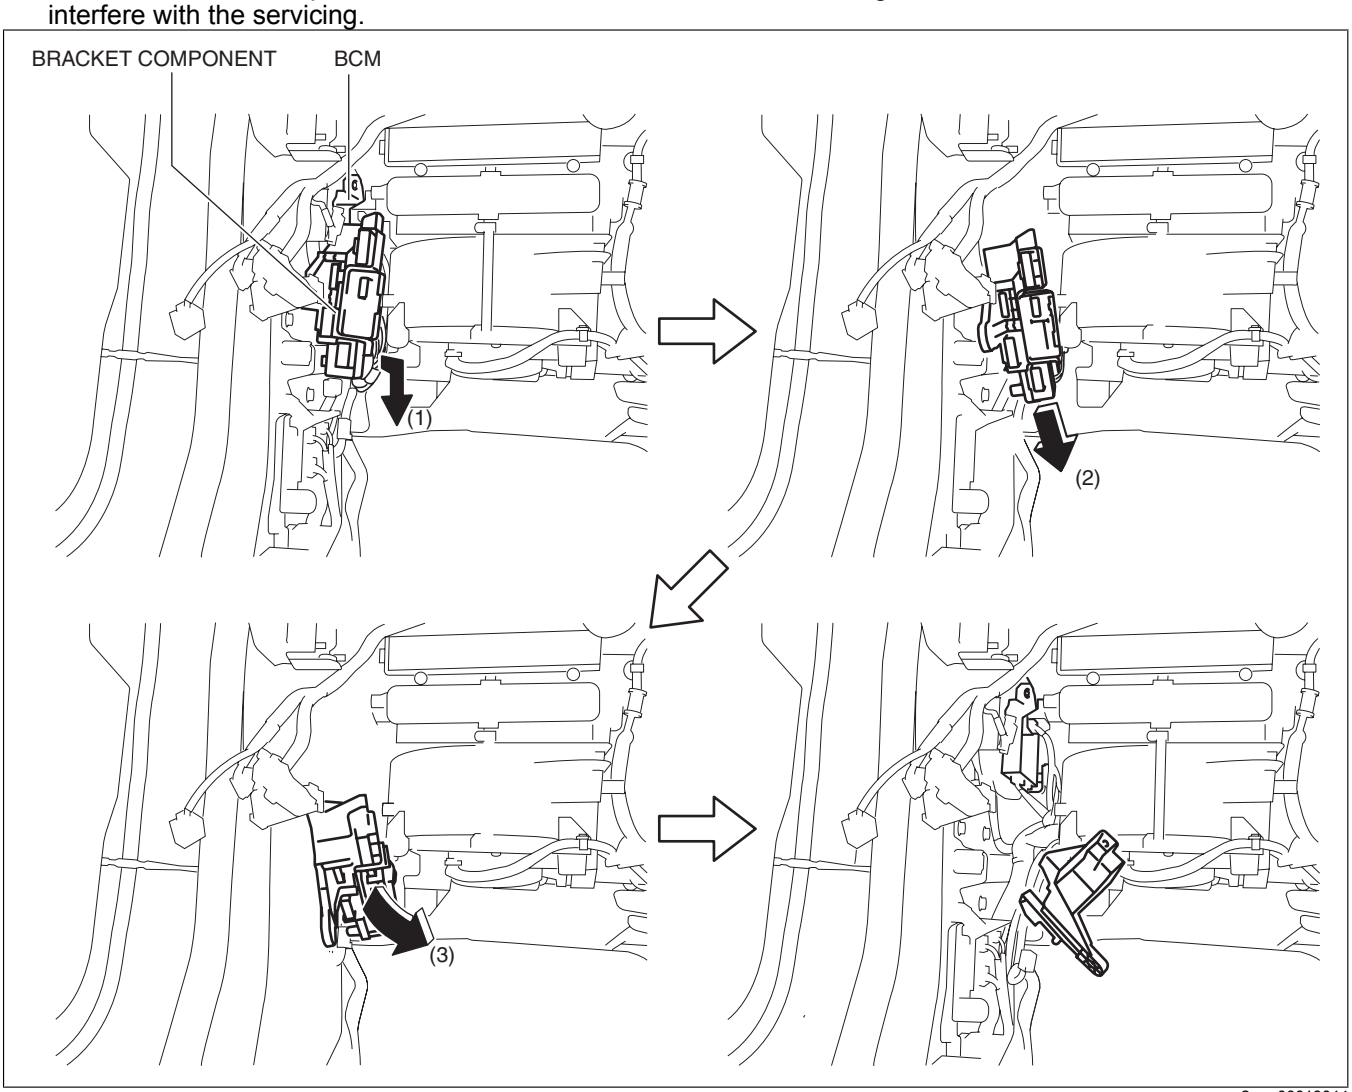


am2zzw00013044

11. Disconnect the connectors.

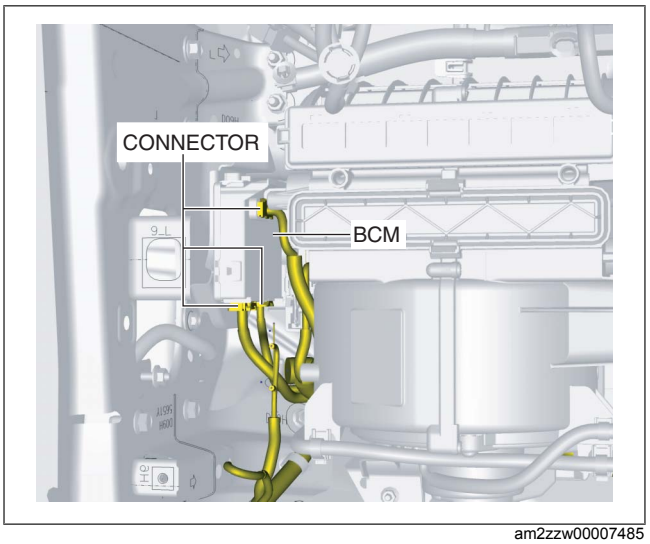


am2zzw00007485


12. While pressing the BCM tab in the direction of arrow (1) shown in the figure, pull it in the direction of arrow (2) to detach the tab from the body.

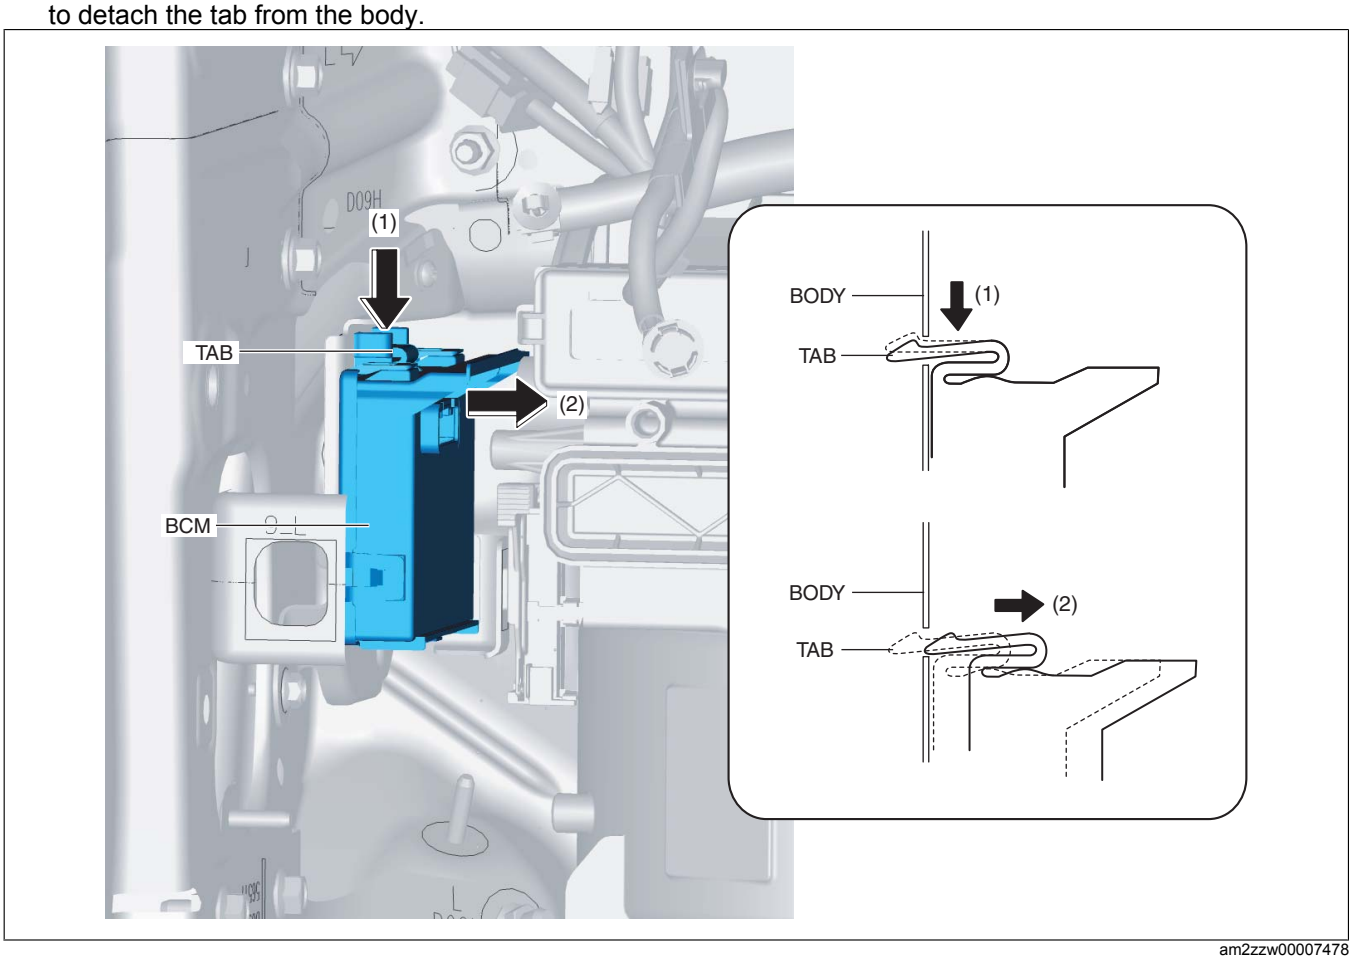

am2zzw00007478

13. Move the BCM in the direction of the arrow shown in the figure.

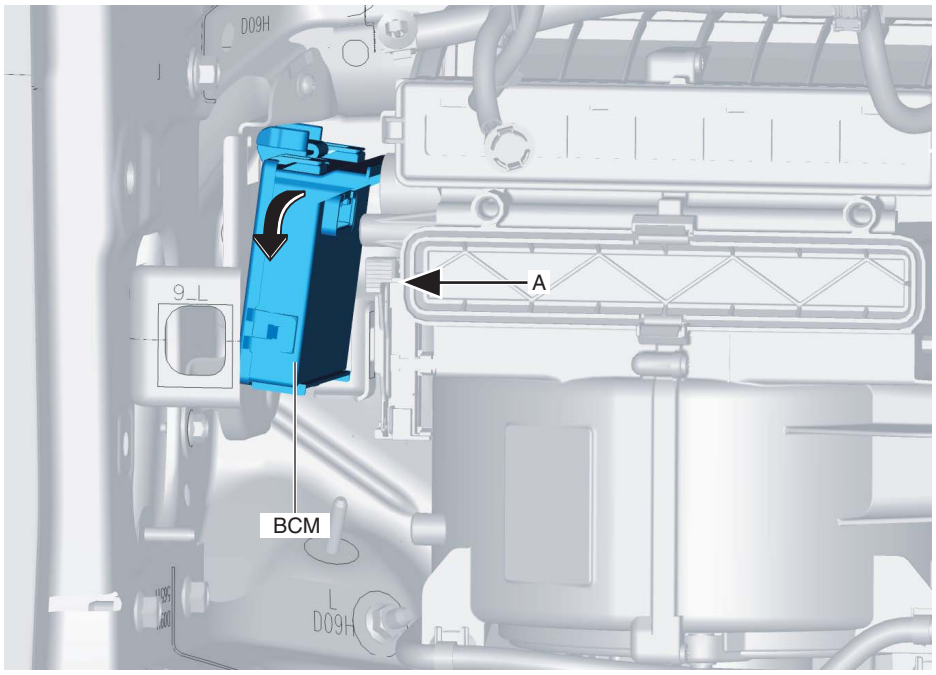

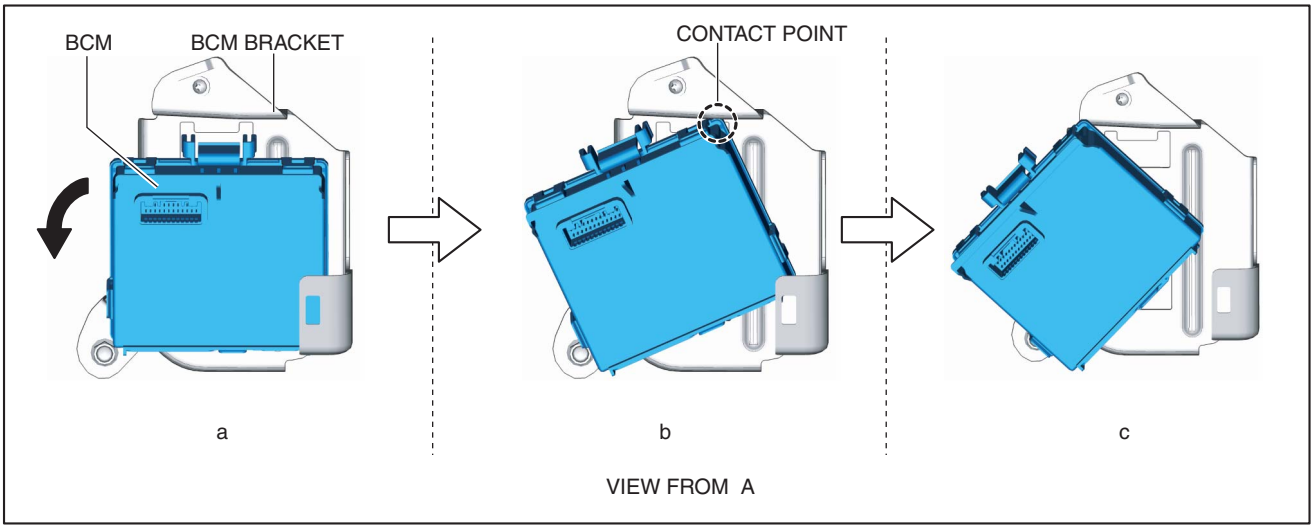


am2zzw00013045

Note

- The BCM contacts the BCM bracket if the BCM is moved to the position shown in figure b, however, the following procedures can be performed by moving it to the position shown in figure c.

14. Move the BCM in the direction of the arrow shown in the figure and remove it while pulling out the hook.

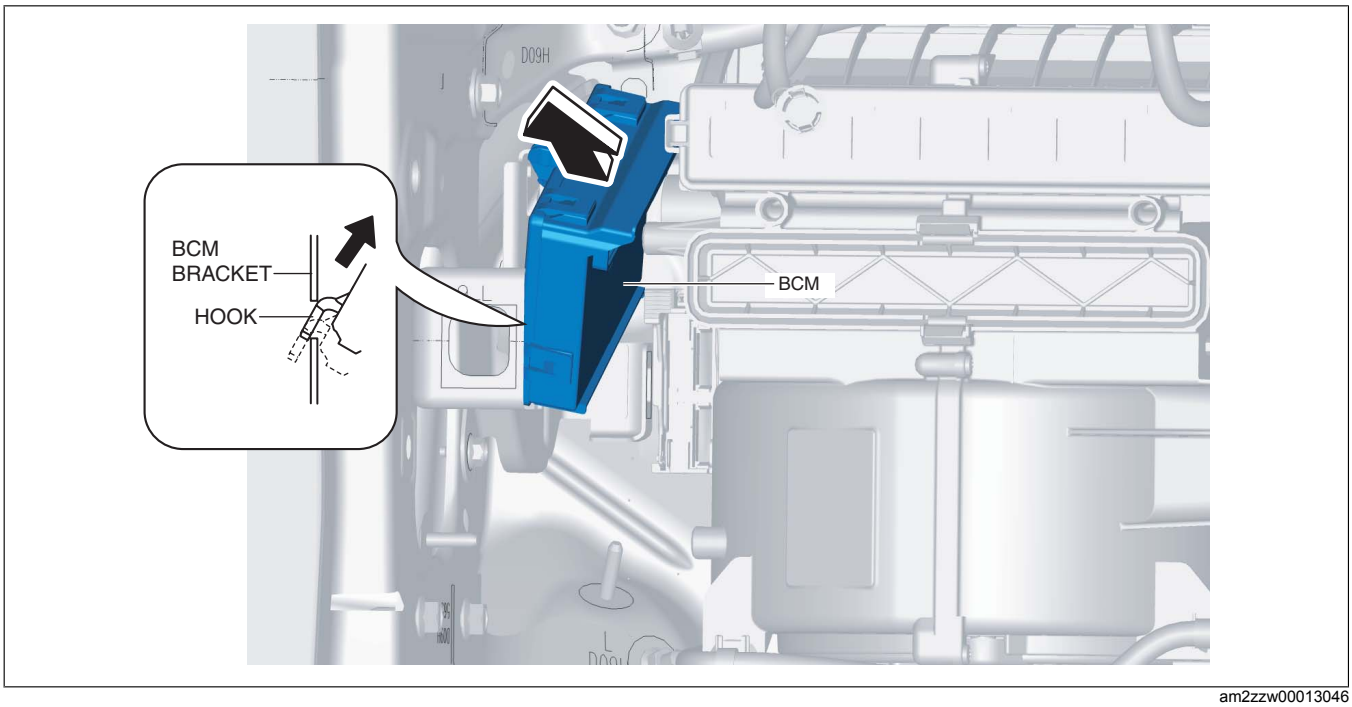

am2zzw00013046

15. Install in the reverse order of removal.
16. If the BCM is replaced and the auto configuration is performed, perform the auto configuration using the following procedure.
    (1) Switch the ignition ON (engine off or on) and wait for **1 min or more**.
    (2) Switch the ignition off and wait for **3 s or more**.
    (3) Switch the ignition ON (engine off or on) and complete the BCM auto configuration.
    (4) Using the M-MDS, verify that DTCs U2300:54, U2300:55, or U2300:56 is not displayed.
        - If DTC U2300:54, U2300:55, or U2300:56 is displayed, go to the DTC troubleshooting procedure. (See DTC U2300:54 [BCM].) (See DTC U2300:55 [BCM].) (See DTC U2300:56 [BCM].)