
BODY CONTROL MODULE (BCM) BRACKET REMOVAL/INSTALLATION

id094000004000


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
    1. Front scuff plate (LH). (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
    2. Front side trim (LH). (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
    3. Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
    4. Auto leveling control module (with headlight auto leveling system) (See AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.)
    5. BCM (See BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.)
3. Remove the bolt.
4. Remove the screw.

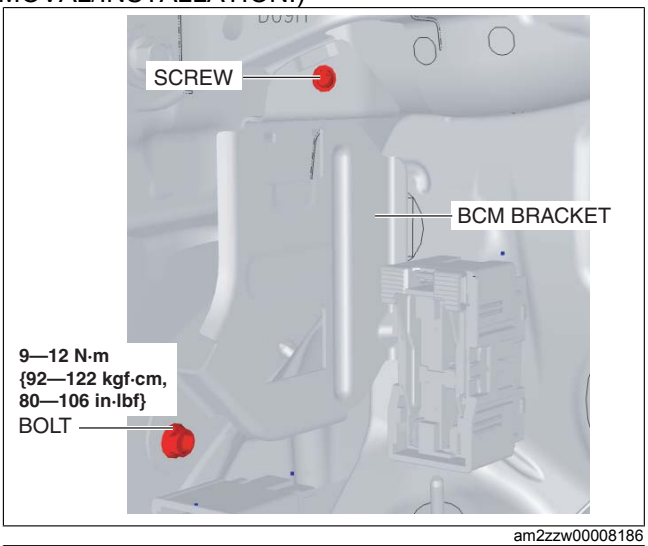

am2zzw00008186

5. Remove the vehicle wiring harness clip.
6. Remove the BCM bracket.
7. Install in the reverse order of removal.

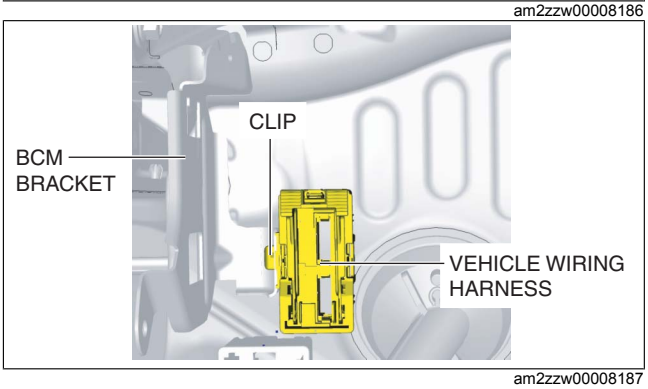


am2zzw00008187

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
    1. Front scuff plate (LH). (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
    2. Front side trim (LH). (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
    3. Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
    4. Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
    5. Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
    6. Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
    7. Auto leveling control module (with headlight auto leveling system) (See AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.)
    8. BCM (See BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.)

3. Remove the bolt.
4. Remove the screw.

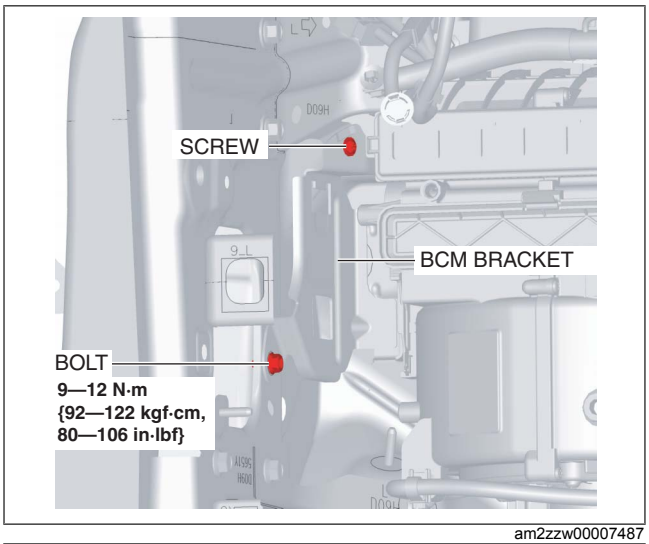

am2zzw00007487

5. Remove the vehicle wiring harness clip.
6. Remove the BCM bracket.
7. Install in the reverse order of removal.

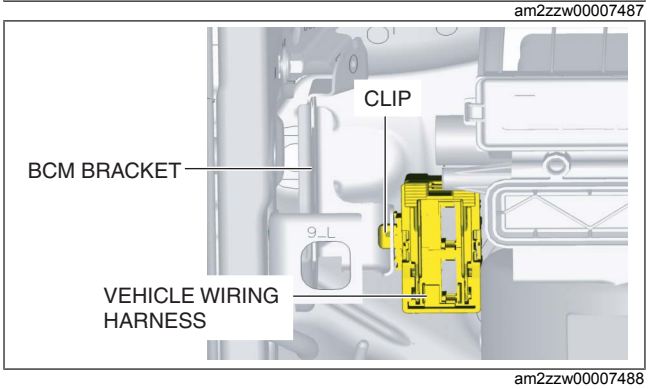

am2zzw00007488