FRONT PILLAR INSTALLATION [PANEL REPLACEMENT]

id098008744800

Symbol Marks

SYMBOL MARK	MEANING
●	SPOT WELDING
■	PLUG WELDING (ARC WELDING)
┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼┼	CONTINUOUS ARC WELDING (CUT-AND-JOIN LOCATION)

am2zzb00000632

Installation Procedure

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for the plug welding before installing the new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.
4. Plug weld the 25 locations indicated by (A) shown in the figure, then install the front pillar (inner).

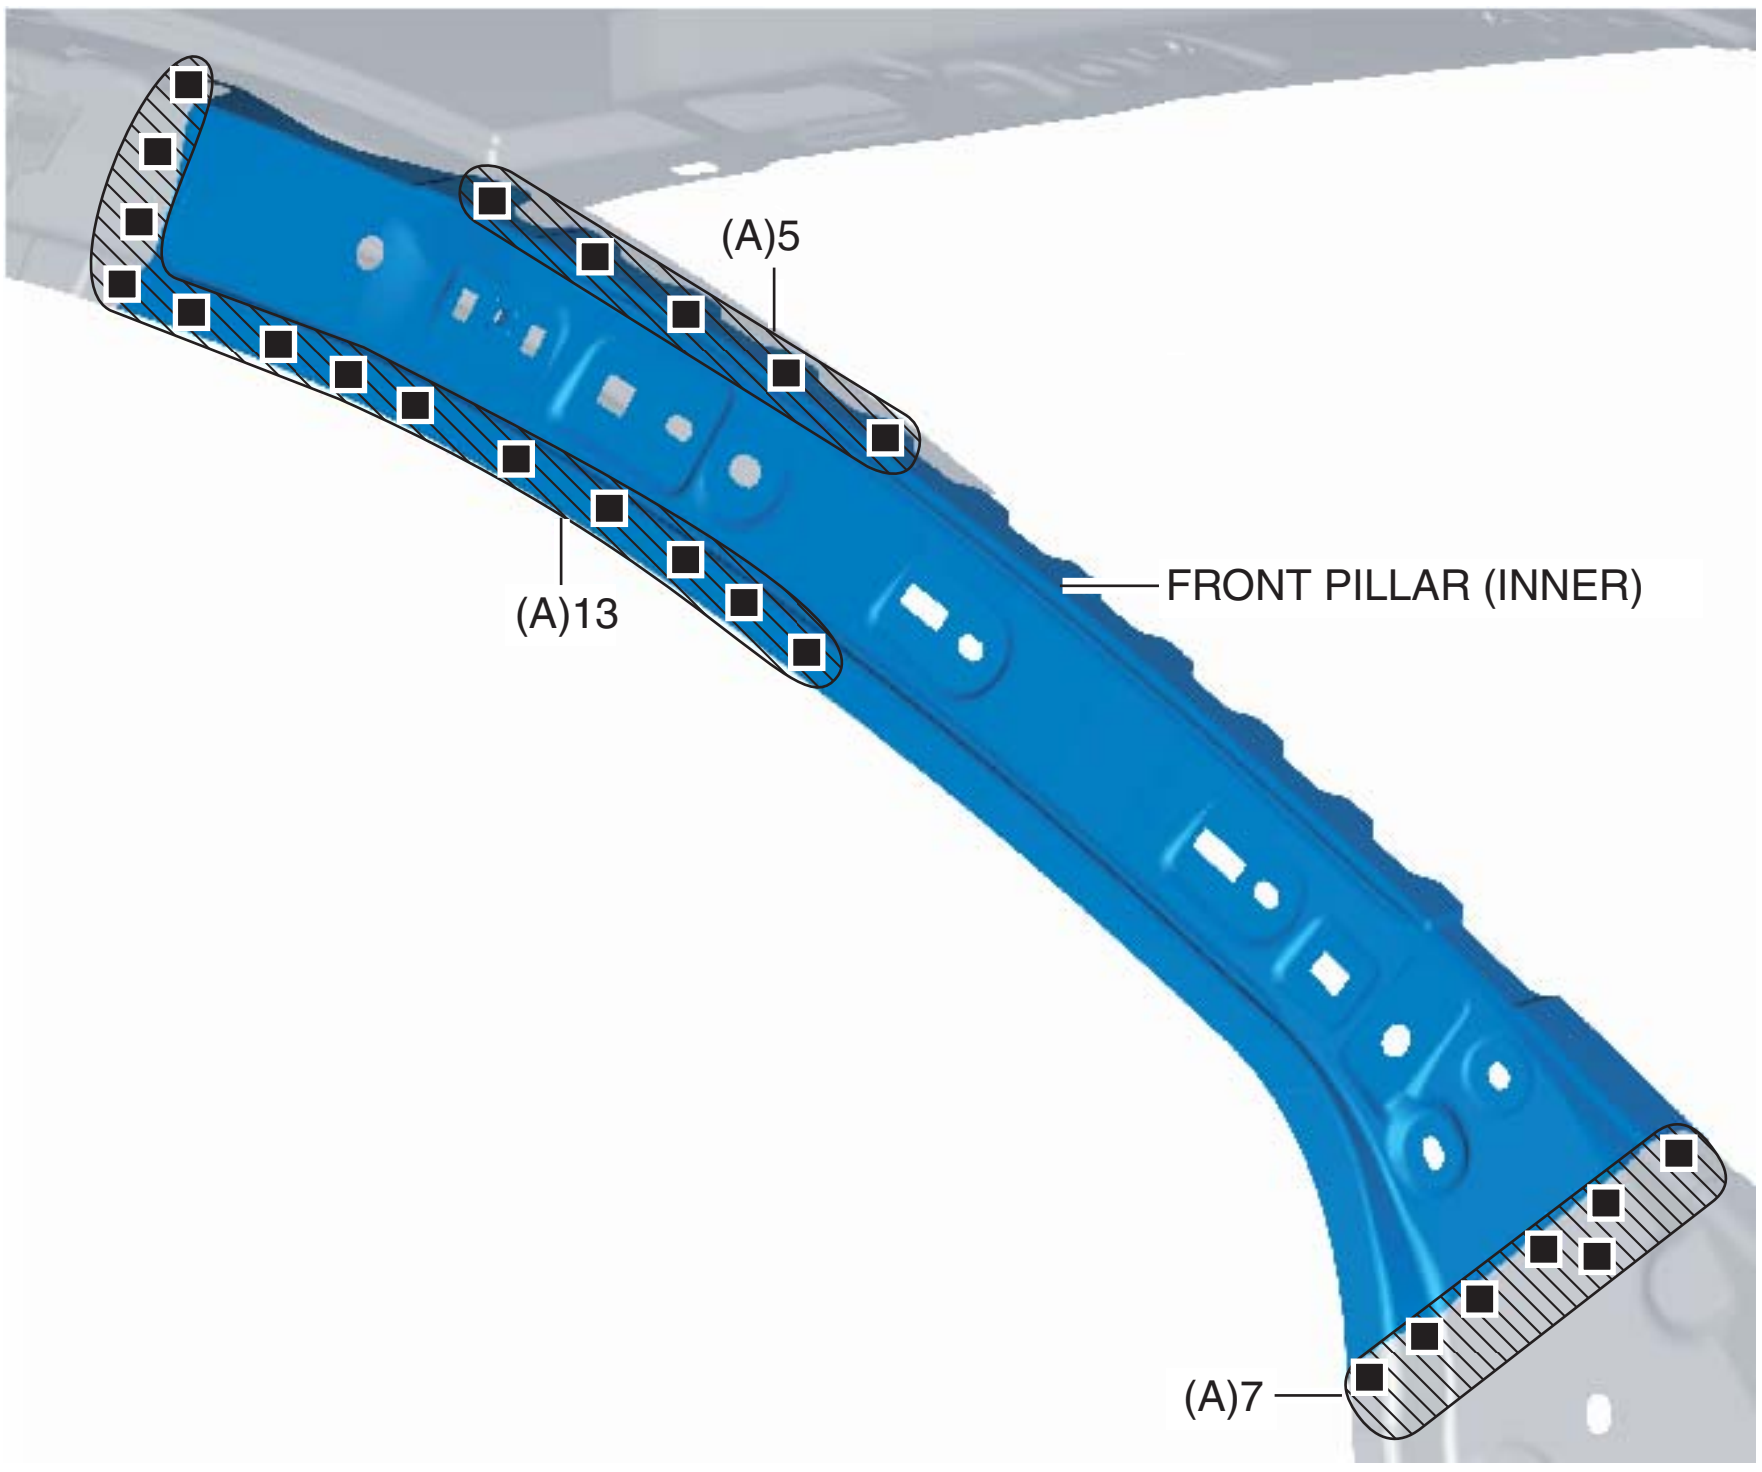

am2zzb00000633

5. Plug weld the 18 locations indicated by (B) shown in the figure, then install the front pillar reinforcement (upper).

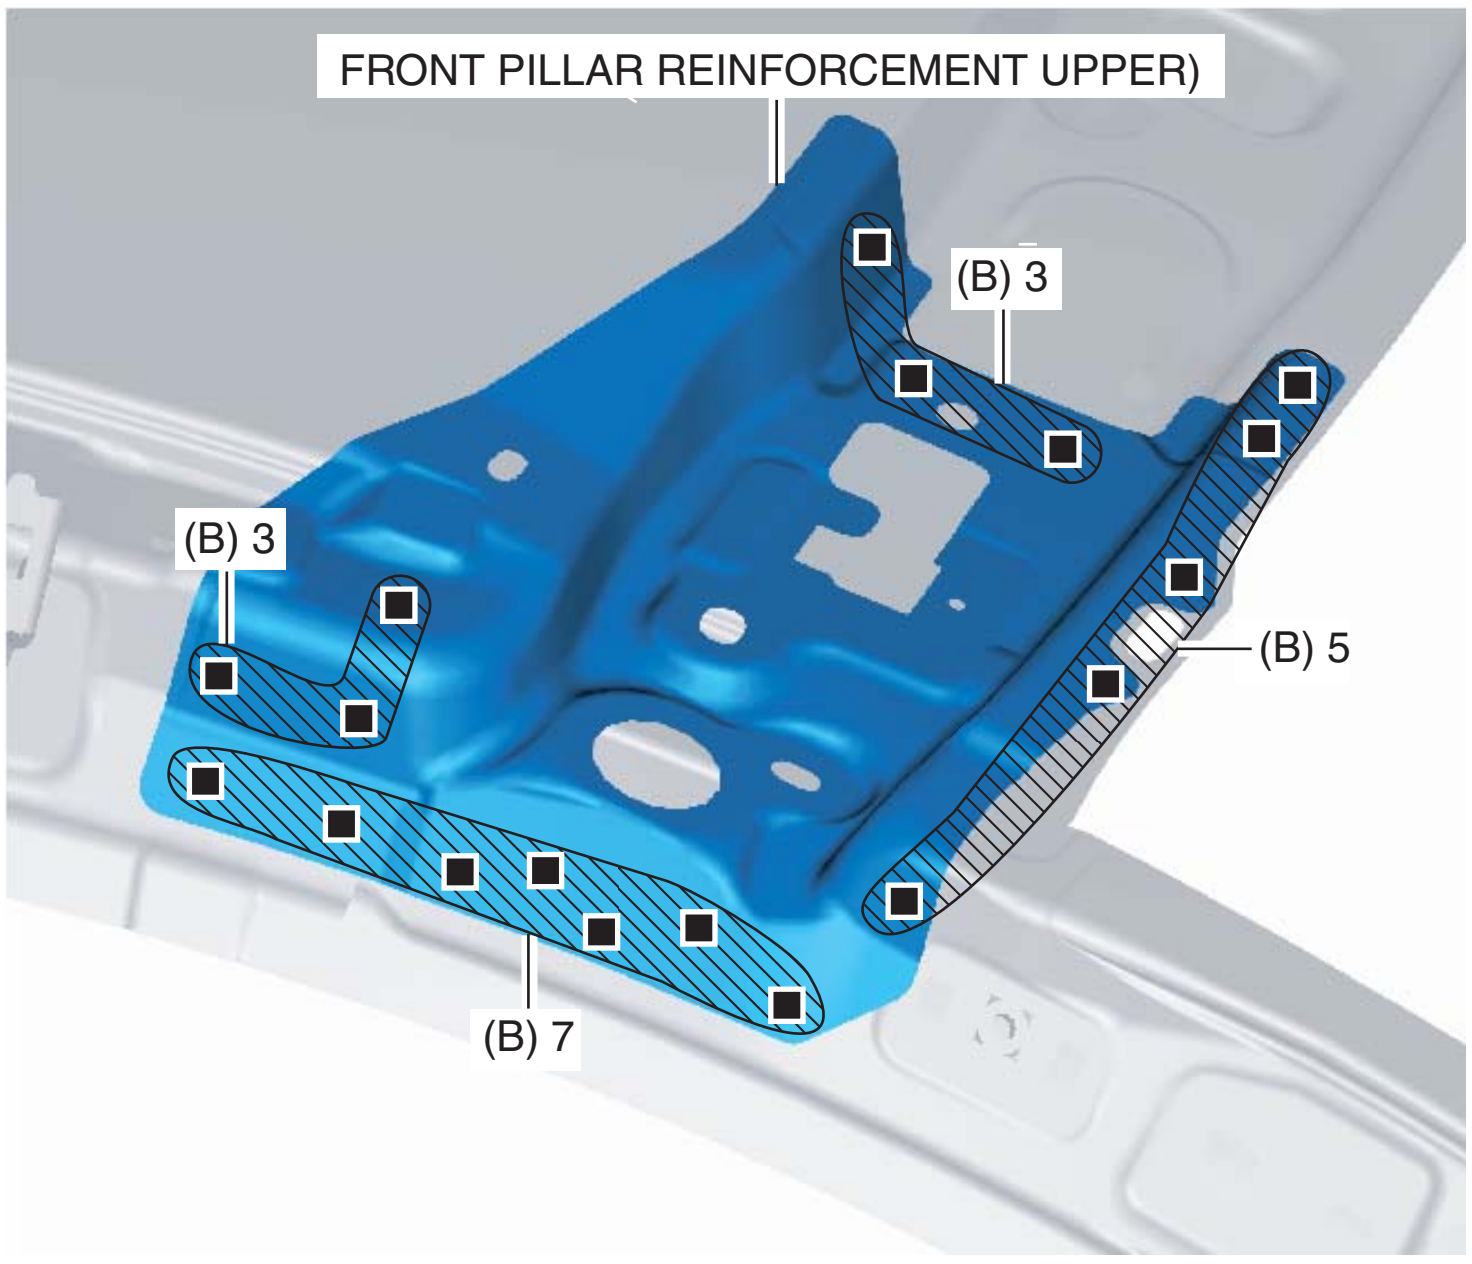
FRONT PILLAR REINFORCEMENT UPPER)
(B) 3
(B) 3
(B) 5
(B) 7

am2zzb00000634

6. Cut and join the location indicated by (C) shown in the figure, then install the front pillar reinforcement (upper).

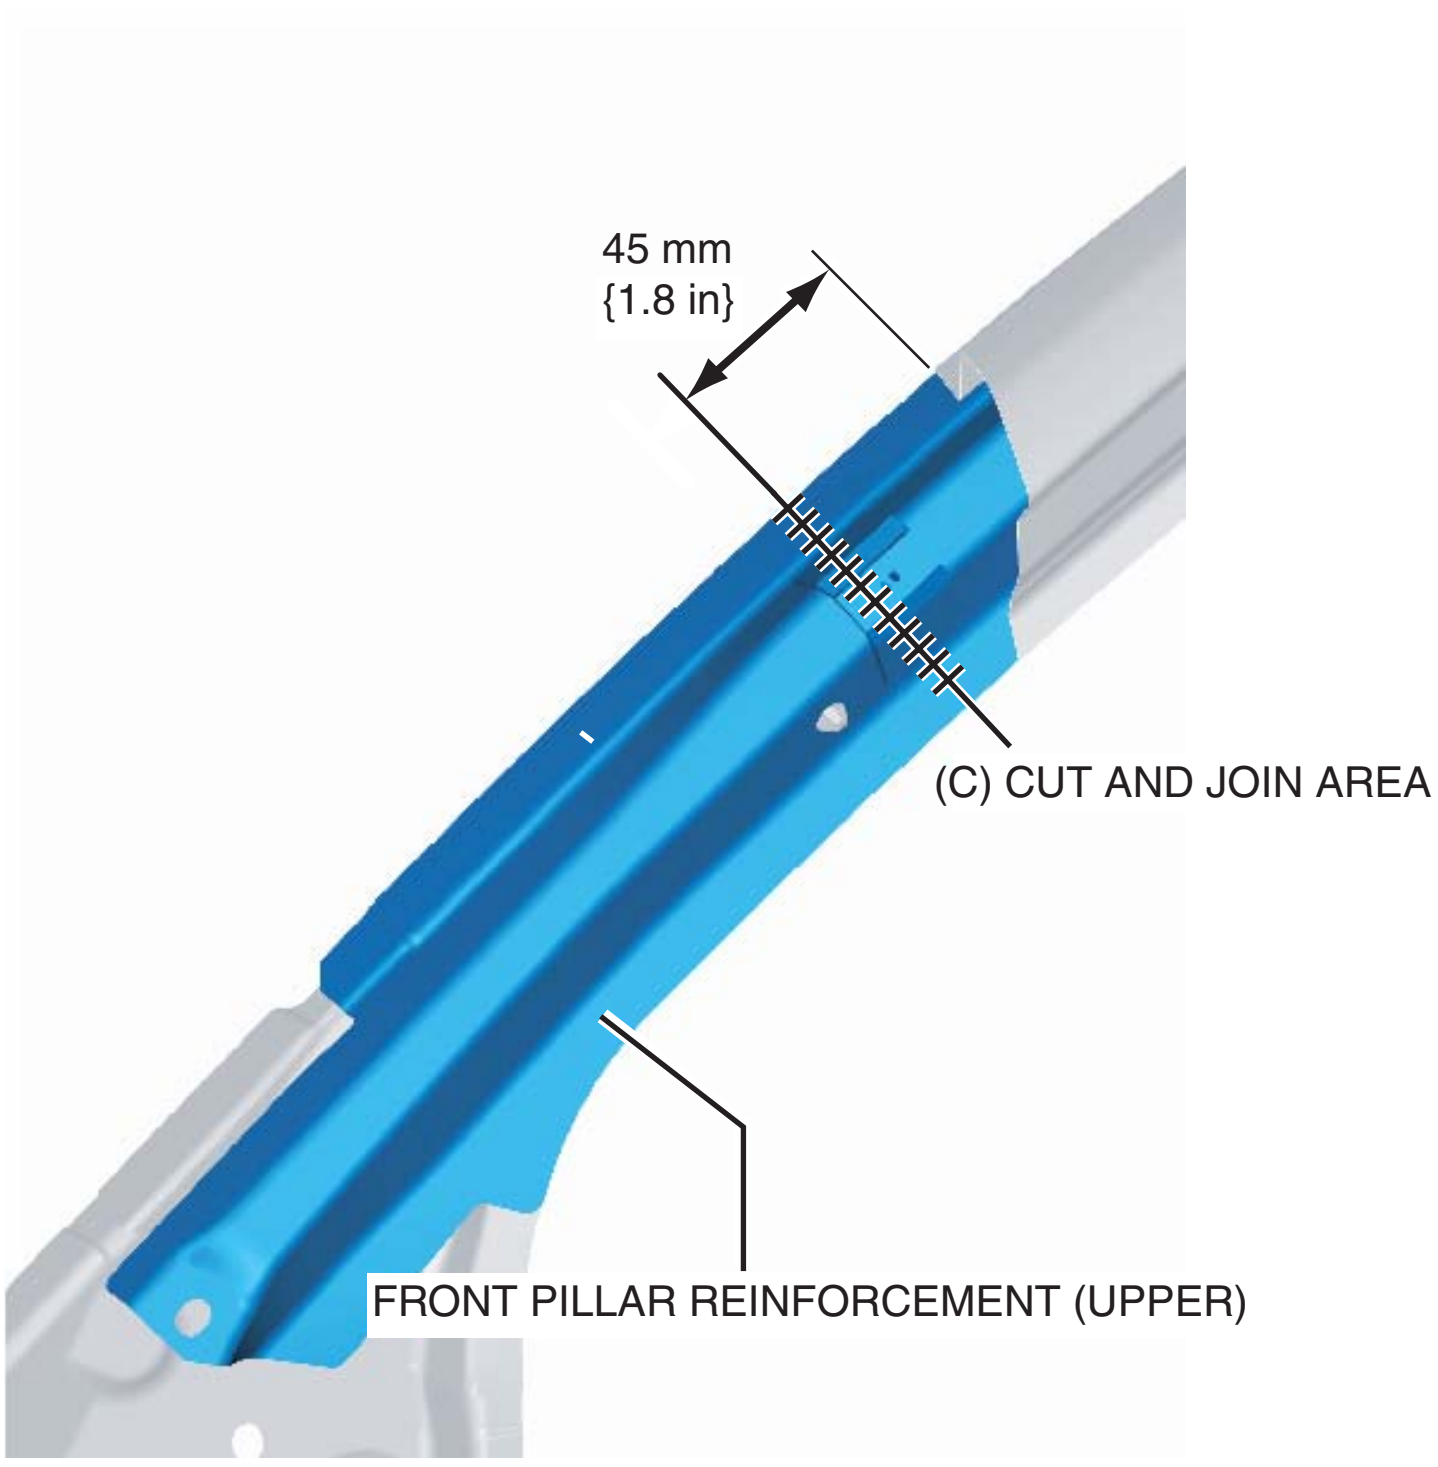
45 mm
{1.8 in}
(C) CUT AND JOIN AREA
FRONT PILLAR REINFORCEMENT (UPPER)

am2zzb00000635

7. Plug weld the 19 locations indicated by (D) shown in the figure.
8. Plug weld the 5 locations indicated by (E) from room side shown in the figure, then install the front pillar reinforcement (lower) and hinge reinforcement as a single unit.

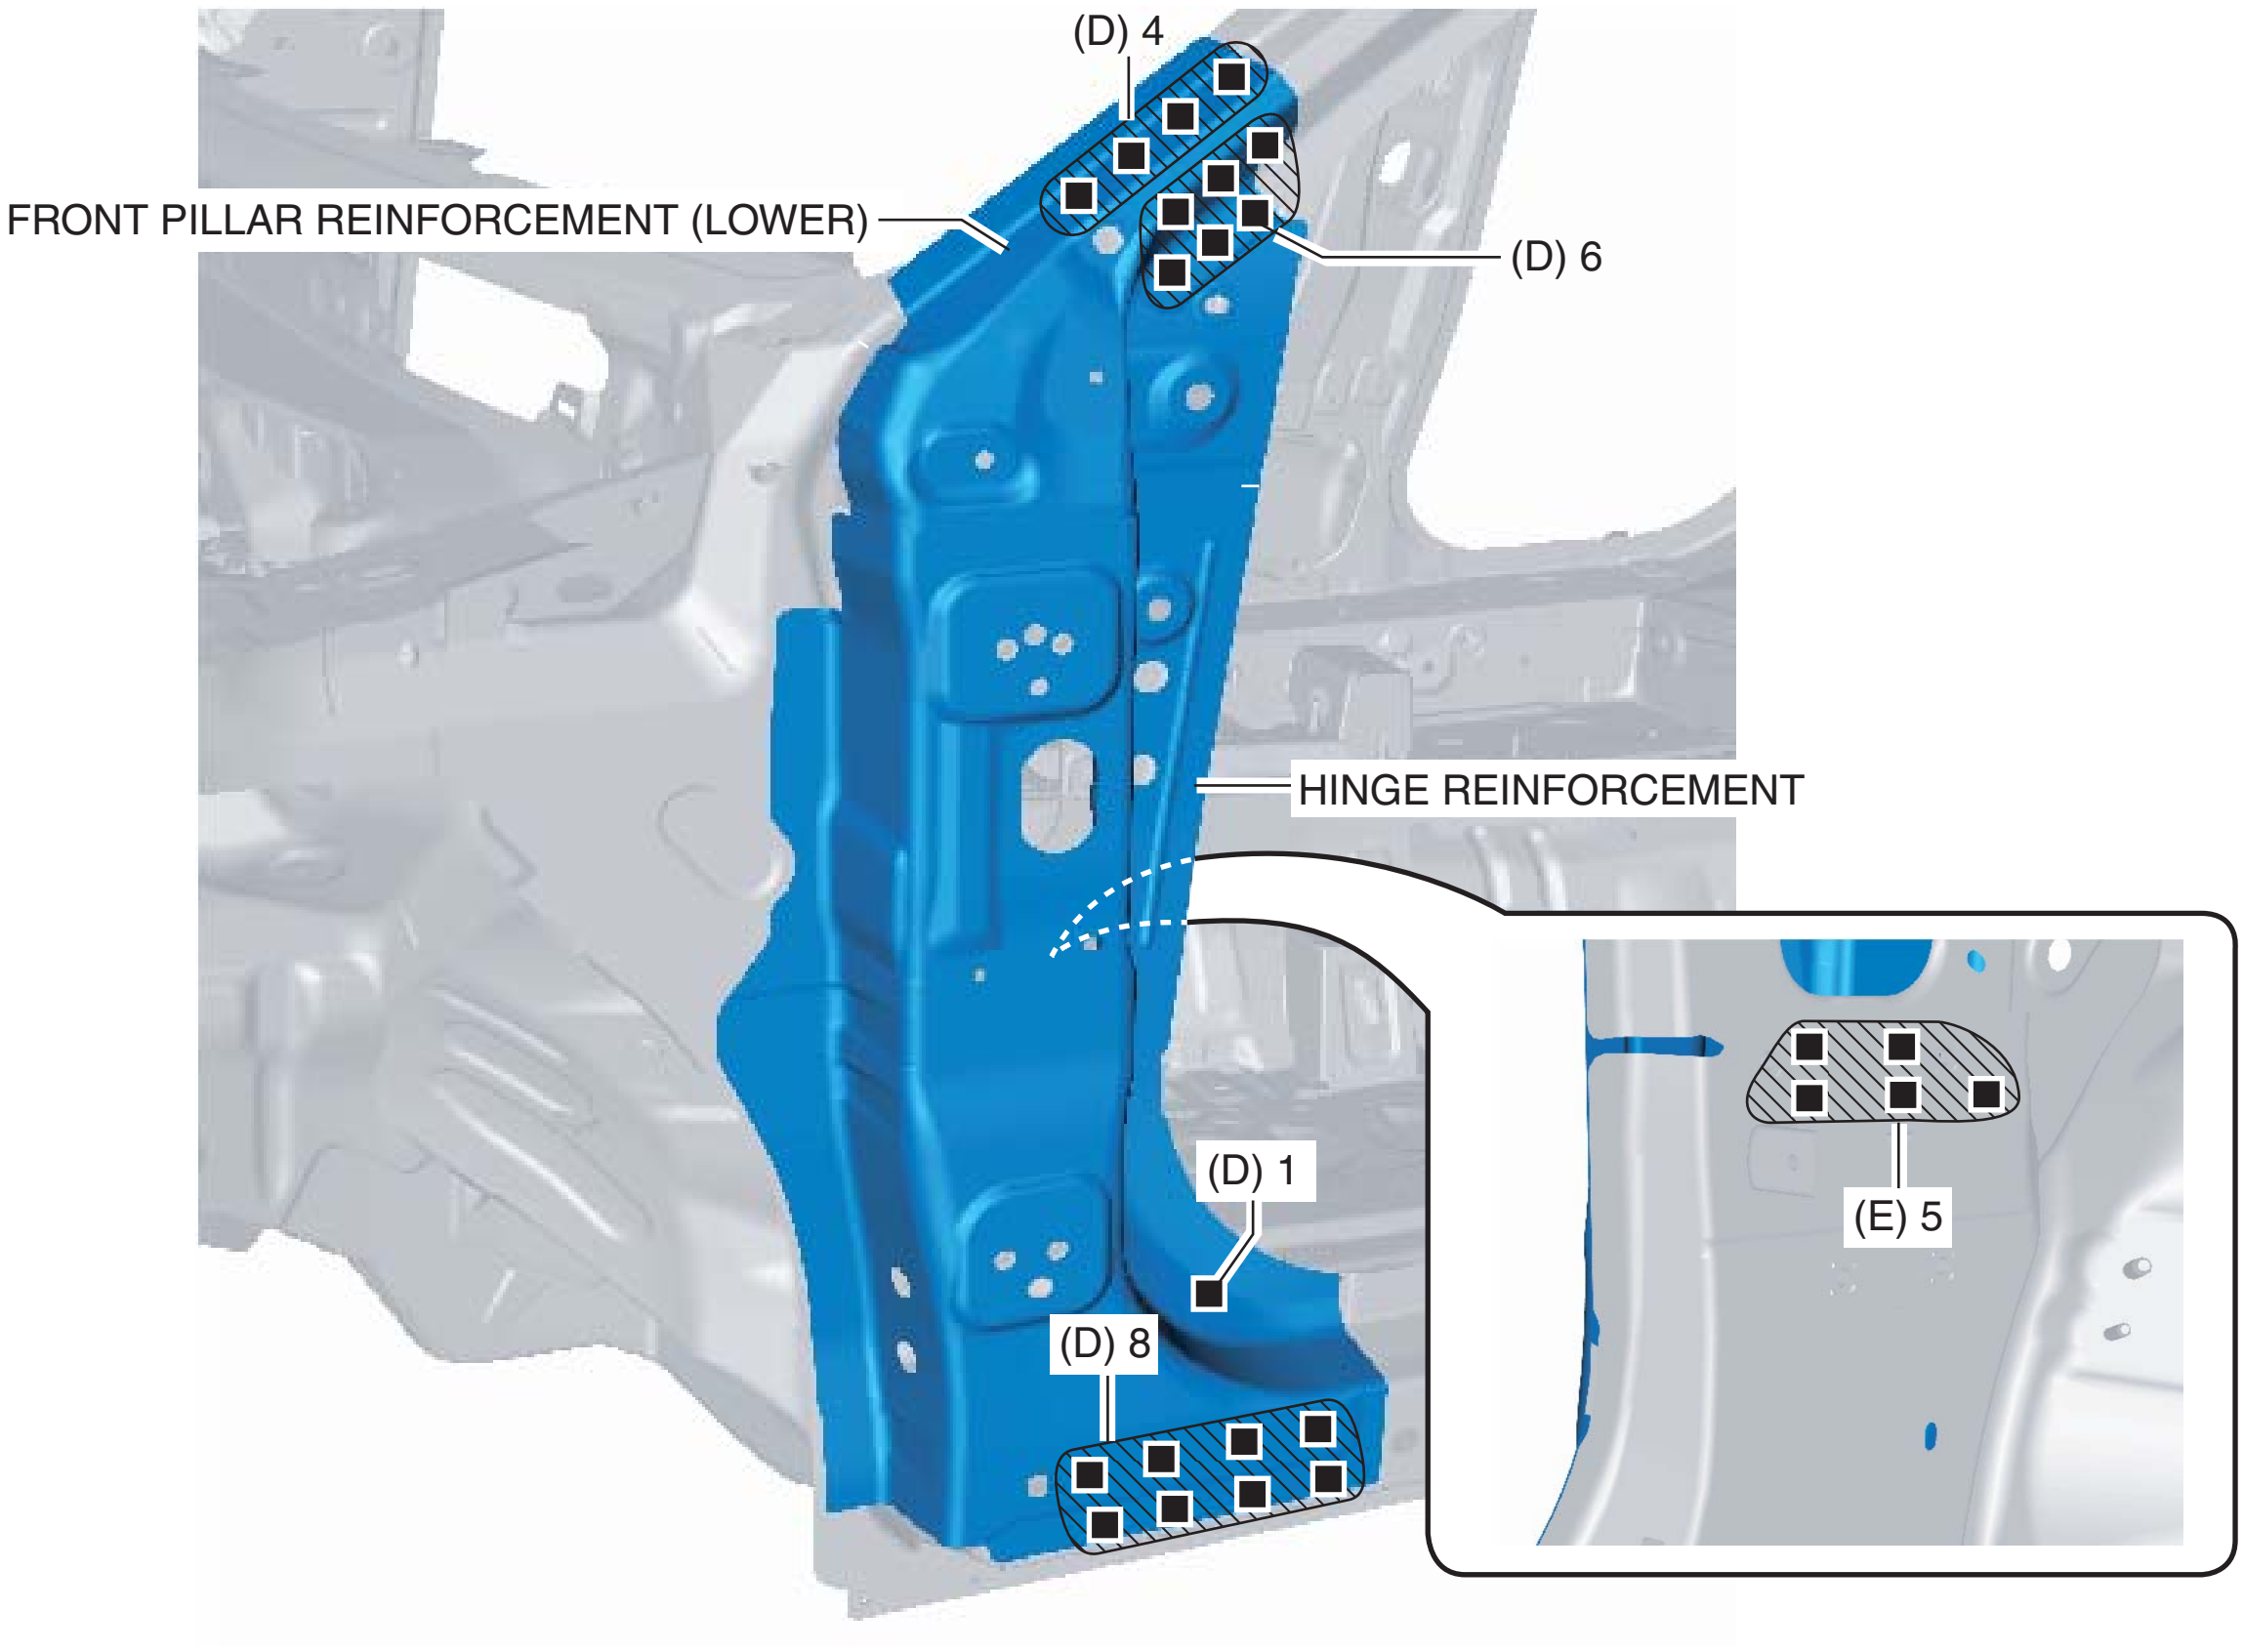
(D) 4
FRONT PILLAR REINFORCEMENT (LOWER)
(D) 6
HINGE REINFORCEMENT
(D) 1
(D) 8
(E) 5

am2zzb00000636

9. Plug weld the 75 locations indicated by (F) shown in the figure.
10. Spot weld the 15 locations indicated by (G) shown in the figure.
11. Cut and join 2 locations indicated by (H) shown in the figure, then install the side frame (outer) (front pillar (outer)).

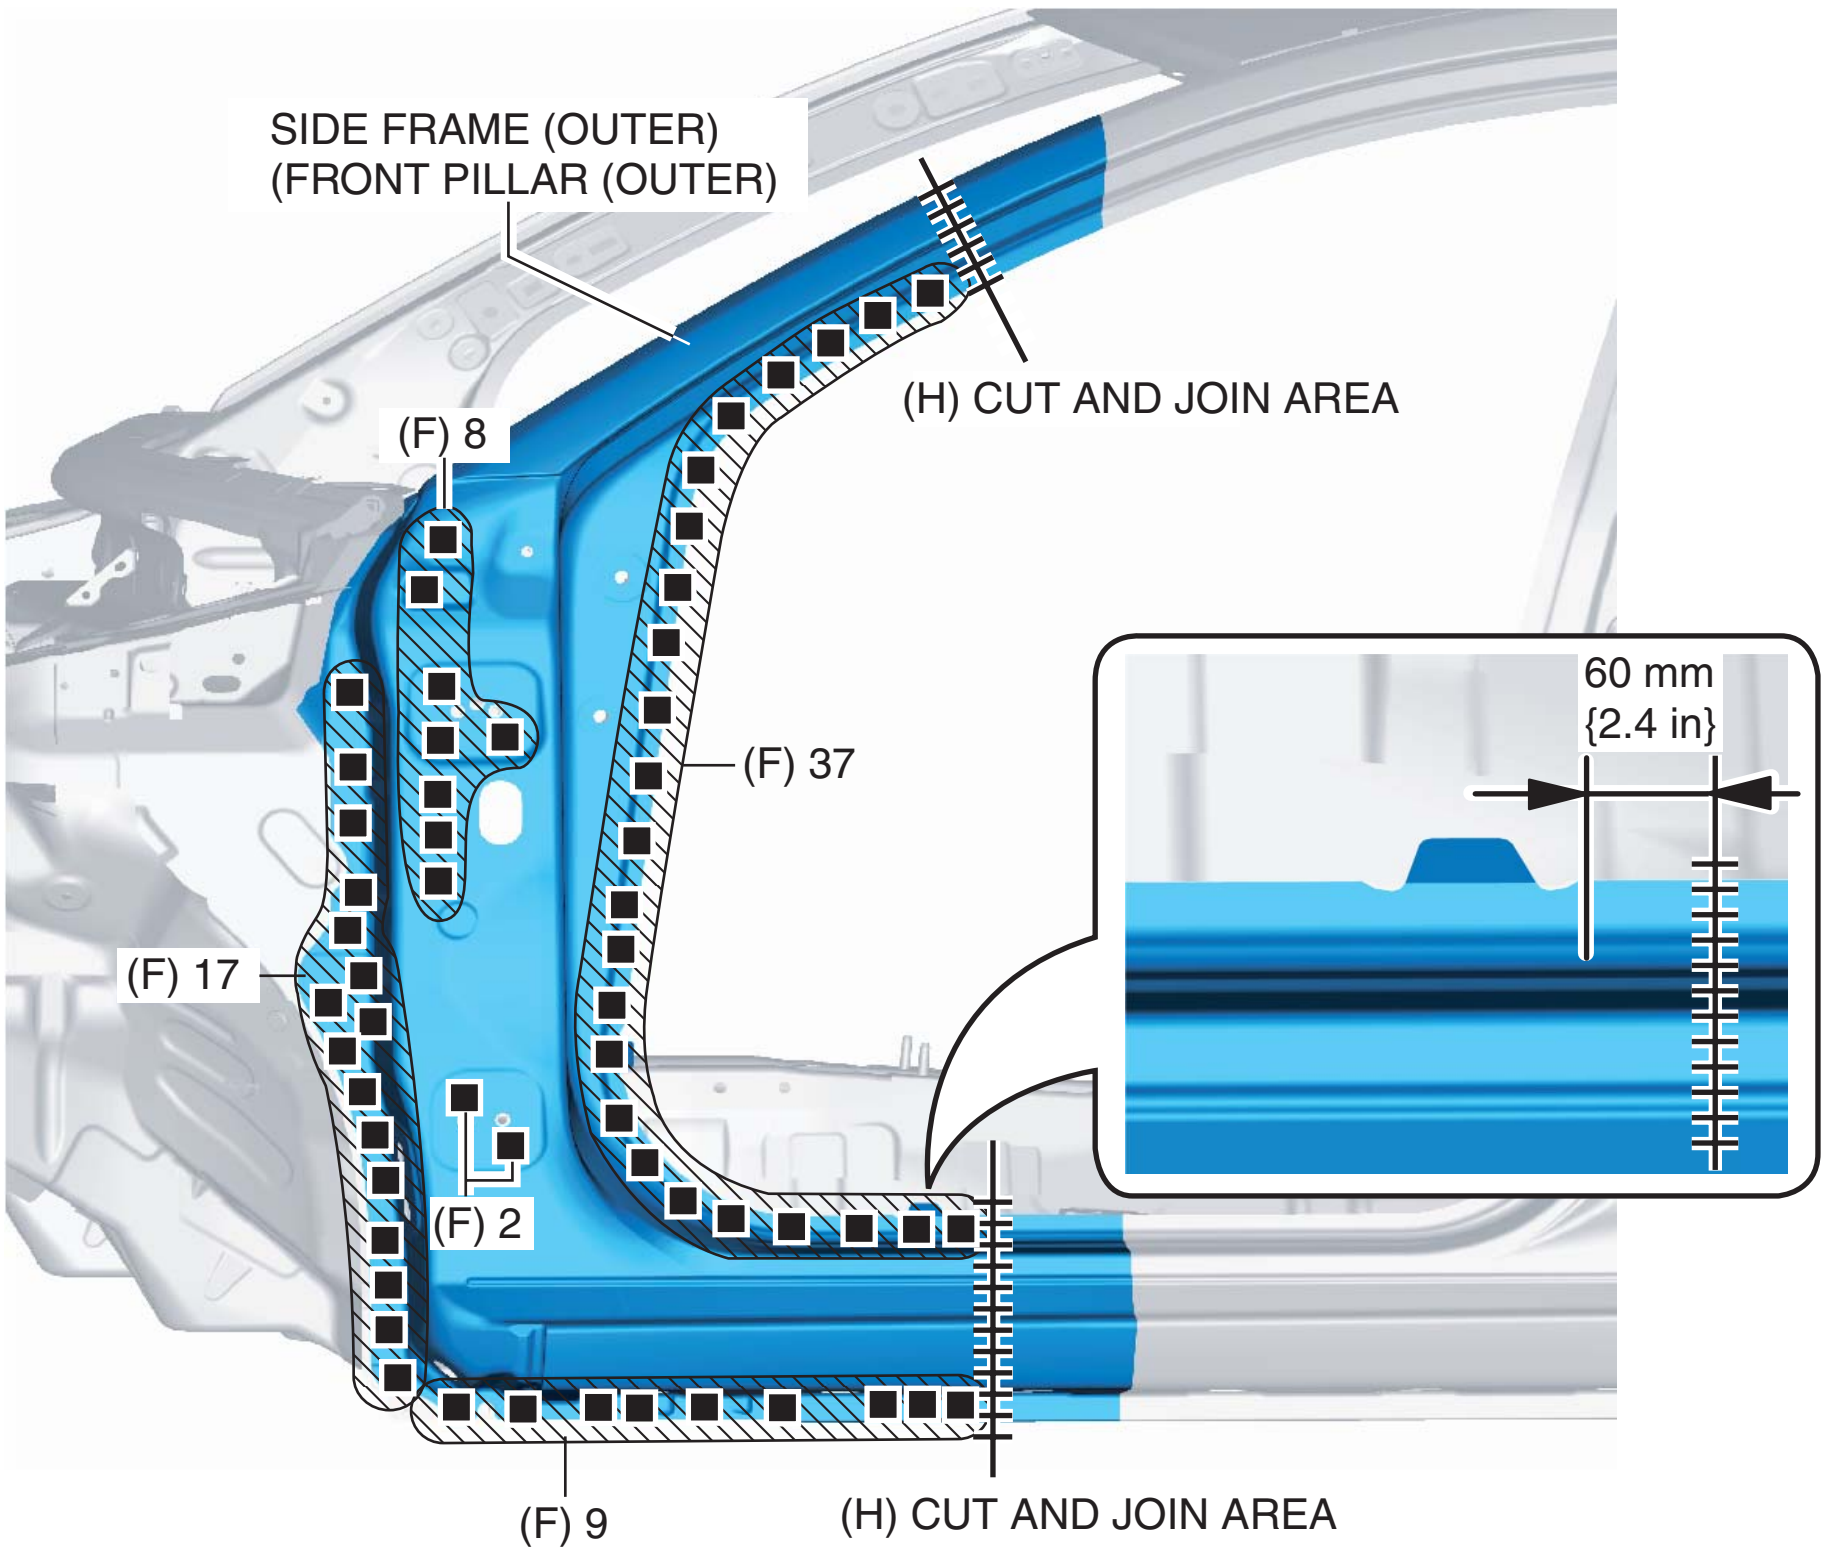
SIDE FRAME (OUTER)
(FRONT PILLAR (OUTER))
(H) CUT AND JOIN AREA
(F) 8
60 mm
{2.4 in}
(F) 37
(F) 17
(F) 2
(F) 9
(H) CUT AND JOIN AREA

am2zzb00000637

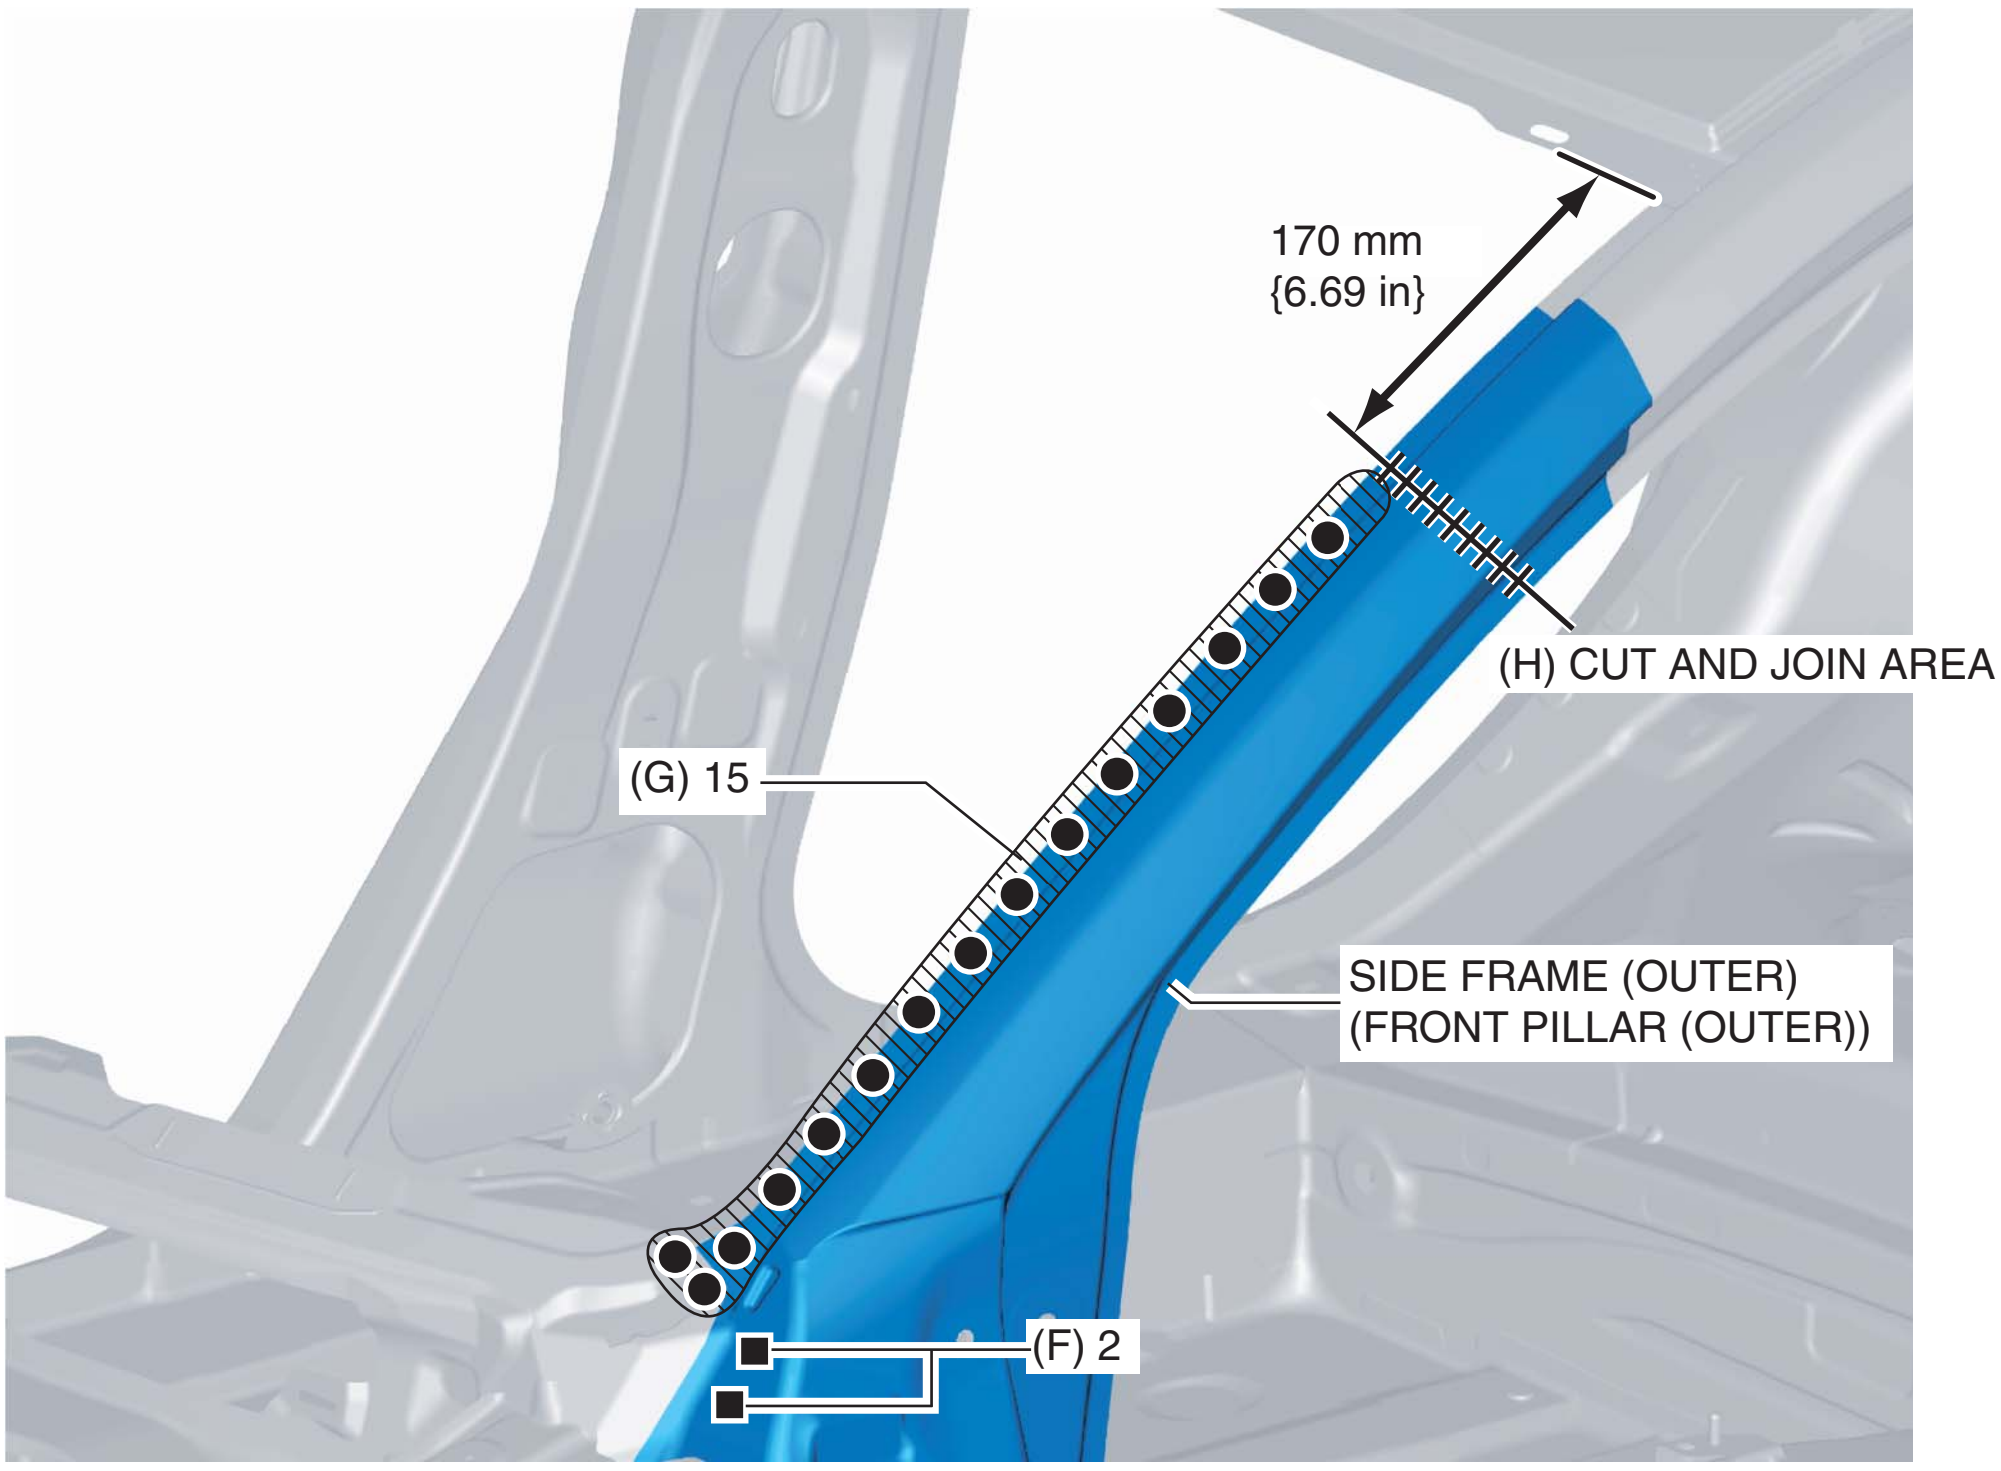
170 mm
{6.69 in}
(H) CUT AND JOIN AREA
(G) 15
SIDE FRAME (OUTER)
(FRONT PILLAR (OUTER))
(F) 2

am2zzb00000638